

THE BMW 5 SERIES SEDAN. OWNER'S MANUAL.

BMW EfficientDynamics Less emissions. More driving pleasure.

5 Series

Owner's Manual for the vehicle

Thank you for choosing a BMW.

The more familiar you are with your vehicle, the better control you will have on the road. We therefore strongly suggest:

Read this Owner's Manual before starting off in your new BMW. Also use the Integrated Owner's Manual in your vehicle. It contains important information on vehicle operation that will help you make full use of the technical features available in your BMW. The manual also contains information designed to enhance operating reliability and road safety, and to contribute to maintaining the value of your BMW.

Any updates made after the editorial deadline can be found in the appendix of the printed Owner's Manual for the vehicle.

You can find supplementary information in the additional brochures in the onboard literature.

We wish you a safe and enjoyable ride.



The Owner's Manual is available in many countries as an app. Additional information on the Internet:

www.bmw.com/bmw_drivers_guide

© 2016 Bayerische Motoren Werke Aktiengesellschaft Munich, Germany Reprinting, including excerpts, only with the written consent of BMW AG, Munich. US English X/16, 11 16 490 Printed on environmentally friendly paper, bleached without chlorine, suitable for recycling.

Contents

The fastest way to find information on a particular topic or item is by using the index, refer to page 324.

6 Information

At a glance

- 14 Cockpit
- 19 Idle state, standby state, and drive-ready state
- 21 iDrive
- 30 BMW Gesture Control
- 33 Voice activation system
- 36 General settings
- 49 Integrated Owner's Manual in the vehicle

Controls

- 54 Opening and closing
- 79 Settings
- 93 Transporting children safely
- 97 Driving
- 115 Displays
- 131 Lights
- 137 Safety
- 167 Driving stability control systems
- 171 Driver assistance systems
- 208 Driving comfort
- 210 Climate control
- 223 Interior equipment
- 230 Storage compartments
- 234 Cargo area

Driving tips

- 242 Things to remember when driving
- 246 Saving fuel

Mobility

- 256 Refueling
- 258 Fuel
- 260 Wheels and tires
- 286 Engine compartment
- 288 Engine oil
- 292 Coolant
- 294 Maintenance
- 296 Replacing components
- 303 Breakdown assistance
- 309 Care

Reference

- 316 Technical data
- 319 Appendix
- 324 Everything from A to Z

Information

Using this Owner's Manual

Orientation

The fastest way to find information on a particular topic is by using the index.

An initial overview of the vehicle is provided in the first chapter.

Updates made after the editorial deadline

Due to updates after the editorial deadline, differences may exist between the printed Owner's Manual and the following Owner's Manuals:

- Integrated Owner's Manual in the vehicle.
- Online Owner's Manual.
- BMW Driver's Guide app.

Notes on updates can be found in the appendix of the printed Owner's Manual for the vehicle.

Owner's Manual for Navigation, Entertainment, Communication

The Owner's Manual for Navigation, Entertainment, and Communication can be obtained as printed book from the service center.

The topics of Navigation, Entertainment, and Communication can be called up via the following Owner's Manuals:

- Integrated Owner's Manual on the Control Display in the vehicle.
- Online Owner's Manual.
- BMW Driver's Guide app.

Additional sources of information

Dealer's service center

A dealer's service center will be glad to answer questions at any time.

Internet

The Owner's Manual and general information on BMW, for example on technology, are available on the Internet: www.bmwusa.com.

BMW Driver's Guide App



The Owner's Manual is available in many countries as an app. Additional information on the Internet:

www.bmw.com/bmw driv-

ers_guide

Symbols and displays

Symbols in the Owner's Manual

- A Indicates precautions that must be followed precisely in order to avoid the possibility of personal injury and serious damage to the vehicle.
- → Marks the end of a specific item of information.
- Refers to measures that can be taken to help protect the environment.
- "..." Identifies display texts in vehicle used to select individual functions.
- >.... Verbal instructions to use with the voice activation system.
- »...« Identifies the answers generated by the voice activation system.

Action steps

Action steps to be carried out are presented as numbered list. The steps must be carried out in the defined order.

- First action step.
- 2. Second action step.

Enumerations

Enumerations without mandatory order or alternative possibilities are presented as list with bullet points.

- First possibility.
- Second possibility.

Symbols on vehicle components

II Indicates that you should consult the relevant section of this Owner's Manual for information on a particular part or assembly.

Vehicle features and options

This Owner's Manual describes all models and all standard, country-specific and optional equipment that is offered in the model series. Therefore, this Owner's Manual also describes and illustrates features and functions that are not available in your vehicle, for example because of the selected optional features or the country-specific version.

This also applies to safety-related functions and systems.

When using these functions and systems, the applicable laws and regulations must be observed.

For any options and equipment not described in this Owner's Manual, refer to the Supplementary Owner's Manuals.

Your BMW dealer's service center is happy to answer any questions that you may have about the features and options applicable to your vehicle.

Status of the Owner's Manual

Basic information

The manufacturer of your vehicle pursues a policy of constant development that is conceived to ensure that our vehicles continue to embody the highest quality and safety standards. In rare cases, therefore, the features described in this Owner's Manual may differ from those in your vehicle.

Updates made after the editorial deadline

Due to updates after the editorial deadline, differences may exist between the printed Owner's Manual and the following Owner's Manuals:

- ▶ Integrated Owner's Manual in the vehicle.
- Online Owner's Manual.
- BMW Driver's Guide app.

Notes on updates can be found in the appendix of the printed Owner's Manual for the vehicle.

For Your Own Safety

Intended use

Observe the following when using the vehicle:

- Owner's Manual.
- Information on the vehicle. Do not remove stickers.
- Technical vehicle data.
- ▶ The traffic, speed, and safety laws where the vehicle is driven.
- Vehicle documents and statutory documents.

Warranty

Your vehicle is technically configured for the operating conditions and registration require-

ments applying in the country of first delivery, also known as homologation. If your vehicle is to be operated in a different country it might be necessary to adapt your vehicle to potentially differing operating conditions and permit requirements. If your vehicle does not comply with the homologation requirements in a certain country you may not be able to lodge warranty claims for your vehicle there. Further information on warranty is available from a dealer's service center.

Maintenance and repairs

Advanced technology, e. g. the use of modern materials and high-performance electronics, requires suitable maintenance and repair work.

The manufacturer of the vehicle recommends that you entrust corresponding procedures to a BMW dealer's service center. If you choose to use another service facility, BMW recommends use of a facility that performs work, for instance maintenance and repair, according to BMW specifications with properly trained personnel, referred to in this Owner's Manual as "another qualified service center or repair shop".

If work is performed improperly, for instance maintenance and repair, there is a risk of subsequent damage and related safety risks.

Parts and accessories

BMW recommends the use of parts and accessory products approved by BMW.

Approved parts and accessories, and advice on their use and installation are available from a BMW dealer's service center.

BMW parts and accessories have been tested by BMW for their safety and suitability in BMW vehicles.

BMW warrants genuine BMW parts and accessories.

BMW does not evaluate whether each individual product from another manufacturer can be used with BMW vehicles without presenting a safety hazard, even if a country-specific official approval was issued. BMW does not evaluate whether these products are suitable for BMW vehicles under all usage conditions.

California Proposition 65 Warning

California laws require us to state the following warning:

Engine exhaust and a wide variety of automobile components and parts, including components found in the interior furnishings in a vehicle, contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition. certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Battery posts, terminals and related accessories contain lead and lead compounds. Wash your hands after handling. Used engine oil contains chemicals that have caused cancer in laboratory animals. Always protect your skin by washing thoroughly with soap and water.

Service and warranty

We recommend that you read this publication thoroughly. Your vehicle is covered by the following warranties:

- New Vehicle Limited Warranty.
- Rust Perforation Limited Warranty.
- Federal Emissions System Defect Warranty.
- Federal Emissions Performance Warranty.
- California Emission Control System Limited Warranty.

Detailed information about these warranties is listed in the Service and Warranty Information Booklet for US models or in the Warranty and Service Guide Booklet for Canadian models.

Your vehicle has been specifically adapted and designed to meet the particular operating conditions and homologation requirements in your

country and continental region in order to deliver the full driving pleasure while the vehicle is operated under those conditions. If you wish to operate your vehicle in another country or region, you may be required to adapt your vehicle to meet different prevailing operating conditions and homologation requirements. You should also be aware of any applicable warranty limitations or exclusions for such country or region. In such case, please contact Customer Relations for further information.

Maintenance

Maintain the vehicle regularly to sustain the road safety, operational reliability and the New Vehicle Limited Warranty.

Specifications for required maintenance measures:

- BMW Maintenance system
- Service and Warranty Information Booklet for US models
- Warranty and Service Guide Booklet for Canadian models

If the vehicle is not maintained according to these specifications, this could result in serious damage to the vehicle. Such damage is not covered by the BMW New Vehicle Limited Warranty.

Data memory

Many electronic components on your vehicle are equipped with data memories that temporarily or permanently store technical information about the condition of the vehicle, events and faults. This technical information generally records the state of a component, a module, a system or the environment:

- Operating states of system components, e.g., fill levels.
- Status messages for the vehicle and from its individual components, e.g., wheel rota-

- tion speed, wheel speed, deceleration, transverse acceleration.
- Malfunctions and faults in important system components, e.g., lights and brakes.
- Responses by the vehicle to special situations such as airbag deployment or engagement of the stability control systems.
- > Ambient conditions, such as temperature.

This data is purely technical in nature and is used to detect and correct faults and to optimize vehicle functions. Motion profiles over routes traveled cannot be created from this data. When service offerings are used, e.g., repair services, service processes, warranty claims, quality assurance, this technical information can be read out from the event and fault memories by employees of a dealer's service center or another qualified service center or repair shop, including the manufacturer, using special diagnostic tools. You can obtain further information there if you need it. After an error is corrected, the information in the fault memory is deleted or overwritten on a continuous basis.

With the vehicle in use there are situations where you can associate this technical data with individuals if combined with other information, e.g., an accident report, damage to the vehicle, eye witness accounts — possibly with the assistance of an expert.

Additional functions that are contractually agreed with the customer — such as vehicle emergency locating — allow certain vehicle data to be transmitted from the vehicle.

Event Data Recorder EDR

This vehicle is equipped with an event data recorder EDR. The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to

vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating.
- Whether or not the driver and passenger safety belts were fastened.
- How far, if at all, the driver was depressing the accelerator and/or brake pedal.
- How fast the vehicle was traveling.

This data can help provide a better understanding of the circumstances in which crashes and injuries occur.

EDR data is recorded by your vehicle only if a nontrivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data, e.g., name, gender, age, and crash location, are recorded.

However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

Vehicle identification number



The vehicle identification number can be found in the engine compartment.

The vehicle identification number can also be found behind the windshield.

Reporting safety defects

For US customers

The following only applies to vehicles owned and operated in the US.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration NHTSA, in addition to notifying BMW of North America, LLC, P.O. Box 1227, Westwood, New Jersey 07675-1227, Telephone 1-800-831-1117.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.

However, NHTSA cannot become involved in individual problems between you, your dealer, or BMW of North America, LLC.


To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to http://www.safercar.gov; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. You can also obtain other in-

formation about motor vehicle safety from http://www.safercar.gov.

For Canadian customers

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may call the toll-free hotline 1-800-333-0510. You can also obtain other information about motor vehicle safety from http://www.tc.gc.ca/roadsafety.



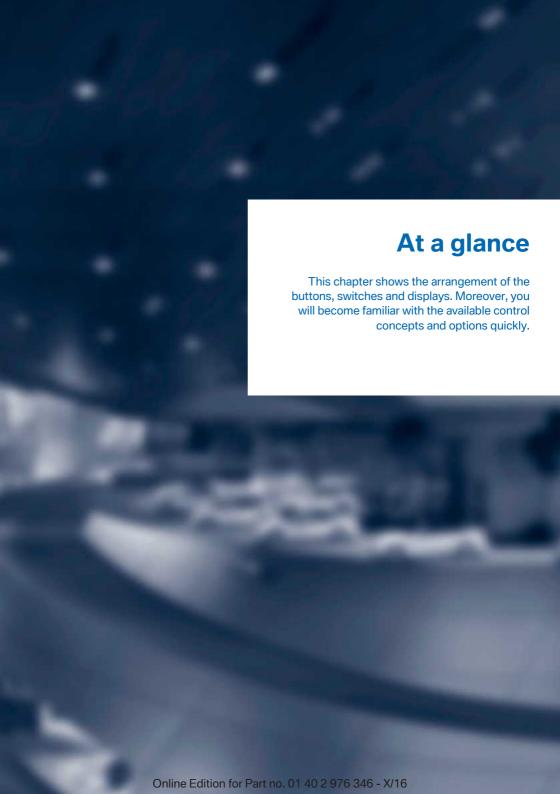


Cockpit

Vehicle features and options

This chapter describes all standard, countryspecific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

In the vicinity of the steering wheel

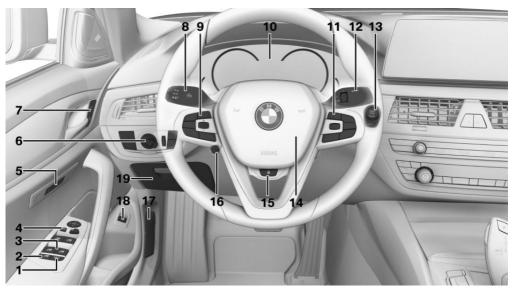



Roller sunblind in the rear window 75



Safety switch 75



Power windows 74

- 4 Exterior mirror operation 86
- 5 Seating comfort features



Memory function 89



Massage function 90





Front fog lights 134



Night Vision 151



Light switch 131



Lights off

Daytime running lights 133



Parking lights 131



Automatic headlight control 132

Adaptive Light Control 133

High-beam Assistant 133



Low beams 131



Instrument lighting 134



Right roadside parking light 132



Left roadside parking light 132

7 Central locking system



Unlock 62



Lock 62

8 Steering column stalk, left



Turn signal 103



High beams, headlight flasher 103



High-beam Assistant 133



Onboard computer 125

9 Steering wheel buttons, left



Cruise control on/off 171



Active Cruise Control on/off 173



Steering and lane control assistant on/off 180



Cruise control: store speed



Pause or continue cruise control



Active Cruise Control: increase distance



Active Cruise Control: reduce distance



With steering and lane control assistant: adjust distance

Cruise control rocker switch

10 Instrument cluster 115

11 Steering wheel buttons, right



Entertainment source



Volume



Voice activation system 33



Telephone

Thumbwheel for selection lists 124

12 Steering column stalk, right



Wipers 104



Rain sensor 105



Clean the windshield and headlights 106



Switch drive-ready state on/



off 97

Auto Start/Stop function 98

Horn, entire surface



Steering wheel heating 89



Adjust steering wheel 88




Unlock hood 287



Open/close tailgate 66

19 Glove compartment 231

In the vicinity of the center console

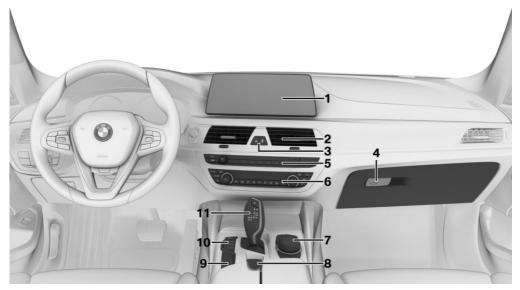

- Control Display 21
- Ventilation 214

3



Hazard warning system 303



Intelligent Safety 140



NFC antenna 42

- 4 Glove compartment 230
- 5 Radio
 Multimedia
- 6 Automatic climate control 210
- 7 Controller with buttons 22



Parking brake 100



Automatic Hold 102

9



PDC Park Distance Control 183 Without Surround View: rearview camera 187

Surround View 190

Crossing traffic warning 205

Parking assistant 197

Remote Control Parking 201



Surround View: Panorama View 190 10 SPORT

Driving Dynamics Control 112 SPORT driving mode

COMFORT

COMFORT driving mode



ECO PRO driving mode



ADAPTIVE driving mode



DSC Dynamic Stability Control 167

11 Steptronic transmission selector lever 108

In the vicinity of the roofliner



1 808

Emergency Request, SOS 303

4 🔍

Reading lights 135

2 ____

Glass sunroof 76

5 📉

Interior lights 135



Indicator light, front-seat passenger airbag 140

Idle state, standby state, and drive-ready state

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

Depending on the situation, the vehicle is in one of the three states:

- Idle state.
- Standby state.
- Drive-ready state.

Idle state

Concept

If the vehicle is in idle state, it is switched off. All electronic systems/power consumers are deactivated.

General information

The vehicle is in idle state prior to opening from the outside and after exiting and locking.

Safety information WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, observe the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, e.g., with a wheel chock. ◀

WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, e.g., due to the following actions:

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle. ◀

Automatic idle state

The idle state is automatically established under the following conditions:

- After several minutes, if no operation takes place on the vehicle.
- If the charge state of the vehicle battery is low.
- Depending on the setting via iDrive, if one of the front doors is opened when exiting the vehicle.

The idle state is not automatically established while a phone call is active.


Establishing idle state when opening the front doors

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. "Turn off after door opening"

Manual idle state

To establish idle state in the vehicle after end of trip:

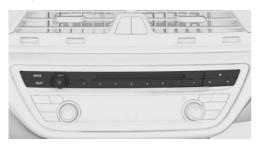



Hold button down until the OFF indicator on the instrument cluster goes out.

Standby state

Concept

When standby state is switched on, most functions can be used while the vehicle is stationary. Desired settings can be adjusted.

General information

The vehicle is in standby state after opening the front doors.

Display in the instrument cluster



OFF is displayed in the instrument cluster. The drivetrain is switched off and standby state switched on.

Drive-ready state

Concept

Switching on drive-ready state corresponds to starting the engine.

General information

Some functions, such as DSC, can only be used with drive-ready state switched on.

Follow further information on the drive-ready state, refer to page 97.

Switching on drive-ready state



Drive-ready state is switched on via the Start/Stop button:

- 1. Depress the brake pedal.
- 2. Press the Start/Stop button.

Display in the instrument cluster



When the drive-ready state is switched on, READY is displayed in the instrument cluster.

Switching off drive-ready state

Press the Start/Stop button to switch off driveready state. The vehicle switches into standby state.

iDrive

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Concept

The iDrive combines the functions of many switches. These functions can be operated via the controller or touchscreen.

Safety information

№ WARNING

Operating the integrated information systems and communication devices while driving can distract from traffic. It is possible to lose control of the vehicle. There is a risk of an accident. Only use the systems or devices when the traffic situation allows. If necessary, stop and use the systems and devices while the vehicle is stationary.

Operation

Overview



- 1 Control Display with touchscreen
- 2 Controller with touchpad

Control Display

General information

To clean the Control Display, follow the care instructions, refer to page 312.

In the case of very high temperatures on the Control Display, e.g., due to intense solar radiation, the brightness may be reduced down to complete deactivation. Once the temperature is reduced, e.g., through shadow or climate control system, the normal functions are restored.

Safety information

NOTE

Objects in the area in the front of the Control Display can shift and damage the Control Display. There is a risk of property damage. Do not place objects in the area in front of the


Switching on

Control Display. ◀

- 1. Turn on standby state.
- Press the controller.

Switching off

- 1. Press button.
- 2. "Turn off control display"

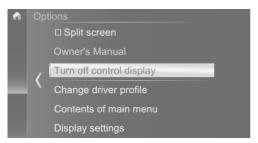

Controller


General information

The buttons can be used to open the menus directly. The controller can be used to select menu items and enter the settings.


Some iDrive functions can be operated using the touchpad on the controller, refer to page 26.

Operation

▶ Turn.

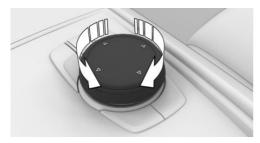

Press.

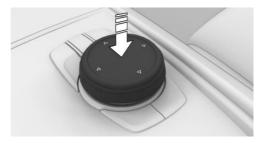

Move in four directions.



Buttons on the controller

Button Function

Press once: call up main menu. Press twice: display all menu items of the main menu.



Open the Media/Radio menu.

Open destination input menu for navigation.

Open navigation map.

Press once: open the previous display.

Press and hold: open the menus

Open the Options menu.

Operating with the controller

Opening the main menu

MENU

Press button.



The main menu is displayed.

All iDrive functions can be called up via the main menu.

Adapting the main menu

1. Press the button twice.

All menu items of the main menu are displayed.

- 2. Select a menu item.
- To move the menu item to the desired position, tilt the controller to the right or left.

Selecting menu items

Highlighted menu items can be selected.

 Turn the controller until the desired menu item is highlighted.



Press the controller.

Menu items in the Owner's Manual

In the Owner's Manual, menu items that can be selected are set in quotation marks, e.g., "iDrive settings".


Changing between panels

After a menu item is selected, for instance "iDrive settings", a new panel is displayed.

- Move the controller to the left.
 Closes current panel and shows previous display.
- Press button.

The previous display opens.

Move the controller to the right. New display is opened.

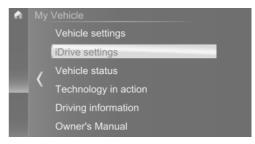

The arrow indicates that additional panels can be opened.

Opening recently used menus

The recently used menus can be displayed.

Press and hold this button.

Opening the Options menu



The "Options" menu is displayed.




The Options menu consists of various areas:

- Screen settings, for instance "Split screen".
- Control options for the selected main menu, for instance for "Media/Radio".
- If applicable, further operating options for the selected menu, for instance "Save station".

Changing settings

- 1. Select a field.
- Turn the controller until the desired setting is displayed.

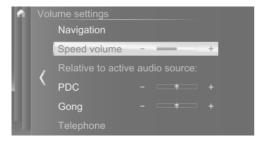

Press the controller.

Activating/deactivating the functions

Several menu items are preceded by a checkbox. The checkbox indicates whether the function is activated or deactivated. Selecting the menu item activates or deactivates the function.

- ▼ Function is activated.
- Function is deactivated.

Entering letters and numbers

General information

Letters and numbers can be entered using the controller or the touchscreen. The keyboard's display changes automatically.

Input

- Turn the controller: select letters or numbers.
- 2. OK: confirm entry.

Deleting

Symbol	Function
l←	Press the controller: delete letters or number.
l←	Hold the controller down: delete all letters or numbers.

Switching between upper/lower case, numbers and characters

Depending on the menu, you can switch between entering upper and lower case, letters and numbers.

Symbol	Function
ABC	Enter the letters.
1 [@] +	Enter the numbers.
abc or ABC	Change between capital and lower-case letters.

Entry comparison

When entering names and addresses, the choice is narrowed down with every letter entered and letters may be added automatically.

Entries are continuously compared with data stored in the vehicle.

Only those letters are offered during entry for which data is available. Destination search: place names can be entered in all languages that are available in iDrive.

Using alphabetical lists

For alphabetical lists with more than 30 entries, the letters for which there is an entry are displayed at the left edge.

- Turn the controller to the left or right quickly.
 - All letters for which there are entries are displayed on the left edge.
- Select the first letter of the desired entry. The first entry of the selected letter is displayed.

Operating via touchscreen

General information

The Control Display is equipped with a touchscreen.

Touch screen with your fingers. Do not use any objects.

Opening the main menu



All iDrive functions can be called up via the main menu.

Adapting the main menu

Tap on symbol.

- All menu items of the main menu are displayed.
- 2. Select a menu item.
- Touch the menu and drag it to the right or left to the desired position.

Selecting menu items

Tap desired menu item.




Menu items in the Owner's Manual

In the Owner's Manual, menu items that can be selected are set in quotation marks, e.g., "iDrive settings".

Changing between panels

After a menu item is selected, a new panel is displayed.

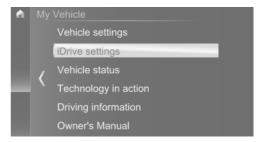

The arrow indicates that additional panels can be opened.


- Swipe to the left.
- Tap on symbol.

New display is opened.

Changing settings

Settings such as volumes can be changed via the touchscreen.

- Slide in the selected field to the right or left, until the desired setting is displayed.
- ► , + Tap on symbol.

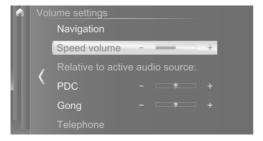

Activating/deactivating the functions

Several menu items are preceded by a checkbox. The checkbox indicates whether the function is activated or deactivated. Selecting the menu item activates or deactivates the function.

- ☐ Function is deactivated.

Entering letters and numbers

General information

Letters and numbers can be entered using the controller or the touchscreen.

The keyboard's display changes automatically.

Symbol	Function
l←	Tapping the symbol: delete the letter or number.
l←	Tapping and holding the symbol for an extended period: delete all letters or numbers.

Switching between upper/lower case, numbers and characters

Symbol	Function
ABC	Enter the letters.
1 [@] +	Enter the numbers.
ABC or abc	Change between capital and lower-case letters.

Operating navigation map

The navigation map can be moved with the touchscreen.

Function	Operation
Enlarge/shrink map.	Drag in or out with the fingers.
Rotate map.	Move two fingers in a circle.

Touchpad

General information

Some iDrive functions can be operated using the touchpad on the controller.

Selecting functions

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Touchpad"
- 4. Select the desired setting.
 - ▶ "Speller": enter letters and numbers.
 - "Map": use the map.
 - "Browser": enter Internet addresses.
 - "Search fields": write letters without selecting the list field.
 - "Audio feedback": pronounces entered letters and numbers.

Entering letters and numbers

Entering letters requires some practice at the beginning. When entering, pay attention to the following:

- The system distinguishes between upper and lower-case letters and numbers. For entries, it may be necessary to change between upper and lower-case letters, numbers and characters, refer to page 24.
- ▶ Enter characters as they are displayed on the Control Display.
- Always enter associated characters, such as accents or periods so that the letter can be clearly recognized. The set language determines what input is possible. Where necessary, enter special characters via the controller.

Entering special characters

Input	Operation
Delete a character.	Swipe to the left on the touchpad.
Enter a blank space.	Swipe to the right in the center of the touchpad.
Enter a hyphen.	Swipe to the right in the upper area of the touchpad.
Enter an under- score.	Swipe to the right in the lower area of the touchpad.

Using the map and Internet

You can use the touch pad to move the map in the navigation system and scroll around in Internet pages.

Function	Operation
Move map or Internet pages.	Swipe in the appropriate direction.
Enlarge/shrink map or Internet pages.	Drag in or out on the touchpad with fingers.
Display the menu or open a link on the Internet.	Tap once.

Split screen

General information

Additional information can be displayed in several menus on the right side of the split screen, e.g., information from the onboard computer.

In the divided screen view, the so-called split screen, this information remains visible even when switching to another menu.


Switching the split screen on/off

- OPTION
 - Press button.
- 2. "Split screen"

Selecting the display

The display can be selected in menus, where the split screen is supported.

- 1. Move the controller to the right until the split screen is selected.
- Press the controller.

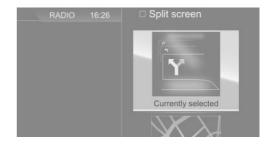

3. Select the desired setting.

Specifying the number of displays

It is possible to specify the number of displays.

- 1. Move the controller to the right until the split screen is selected.
- 2. Press the controller.
- 3. "Personalize menu"
- 4. Select the desired setting.
- 5. Move the controller to the left.

Status information

General information

The status field can be found in the upper area of the Control Display. Status information is displayed in the form of symbols.

Status field symbols

Radio

Symbol	Meaning
н))	HD Radio station is being received.
\Diamond	Satellite radio is switched on.

Telephone

Symbol	Meaning
8	Incoming or outgoing call.
S.	Missed call.
ad	Signal strength of cellular network.
••••	Network search.
attl	Cellular network is not available.
in.	The critical charge state of the mobile phone has been reached.
å ııl	Roaming is active.

Symbol	Meaning
\Box	SMS text message received.
\boxtimes	Message received.
Δ	Reminder.
Ø	Sending not possible.
5]	Contacts are loaded.

Entertainment

Symbol	Meaning
③	CD/DVD player.
\Box	Music collection.
1	AUX-IN port.
$\mathfrak{F}_{\mathbf{L}}$	Bluetooth audio.
ψ	USB audio interface.
	Mobile phone audio interface.
€	Online Entertainment.
Ēu	WiFi.
•	iPod.

Additional symbols

Symbol	Meaning
\triangle	Check Control message.
公	The sound output has been switched off.
200	Request for the current vehicle position.
0	Checking the current vehicle position.

Programmable memory buttons

2. "OK"

General information

The iDrive functions can be stored on the programmable memory buttons and called up directly, e.g., radio stations, navigation destinations, phone numbers and menu entries or pages in the Integrated Owner's Manual.

Settings are stored for the driver profile currently used.

Saving a function

- 1. Select function via iDrive.
- 2. 1 ... 7 Press and hold the desired button until a signal sounds.

Running a function



Press button.

The function will work immediately. This means, e.g., that the number is dialed when a phone number is selected.

Displaying the key assignment

Touch buttons with finger. Do not wear gloves or use objects.

The button assignment is displayed at the top edge of screen.



Deleting the button assignments

Press and hold buttons 1 and simultaneously for approx. 5 seconds.

BMW Gesture Control

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Concept

Several iDrive functions can be operated by hand motion only using BMW Gesture Control.

Overview



The gestures that are performed underneath the interior mirror are captured by a camera in the roofliner.

Activating/deactivating

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Gestures"
- 4. "Gesture control"

Settings

- "Display tips": the possible gesture is shown on the Control Display.
- "Audio feedback": an acoustic signal is emitted once the gesture is recognized.

Possible gestures

Gesture	Operation	Function
J	Move index finger forward and backward in the direction of the screen.	Accept call. Confirm Check Control message. Select a highlighted entry in a list during voice activation.
	Swipe with the hand across the width of the Control Display in the direction of the front-passenger side.	Reject call. Close popup. Terminate voice activation.
9	Slowly move forearm clockwise in a circular pattern with the index finger stretched out forward. Gesture is detected after one circular motion.	Increase the volume.
9	Slowly move forearm counterclockwise in a circular pattern with the index finger stretched out forward. Gesture is detected after one circular motion.	Reduce the volume.
	Pinch with thumb and index finger and move hand horizontally to the right or left.	Surround View: turn camera view. This gesture can only be executed while the vehicle is stationary.
8	Move stretched out index and middle finger forward.	Individually assignable gesture.

Perform gestures underneath the interior mirror and next to the steering wheel.

Execute gestures clearly.

The gestures can also be executed from the front-passenger side.

Assigning gesture individually

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Gestures"

- 4. "Function assignment"
- 5. Select the desired setting.

System limits

Gesture recognition by the camera can be disturbed by the following circumstances:

- The camera lens is covered.
- Objects are located on the rear-view mirror.
- ➤ The camera lens is dirty. Clean the camera lenses, refer to page 312.
- ▶ The gesture is executed outside of the detection range.
- Wearing of gloves or jewelry.
- Smoking in the vehicle's interior.

Voice activation system

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Concept

Most functions displayed on the Control Display can be operated by voice commands via the voice activation system. The system supports you with announcements during input.

General information

- Functions that can only be used when the vehicle is stationary cannot be used via the voice activation system.
- ➤ The system uses a special microphone on the driver's side.
- > in the Owner's Manual denotes verbal instructions to use with the voice activation system.

Functional requirements

To enable voice command recognition, a language must be set via iDrive that is supported by the voice activation system.

To set the language, refer to page 36.

Using the voice activation system

Activating the voice activation system

- 1. Press button on the steering wheel.
- 2. Wait for the signal.
- 3. Say the command.



This symbol in the instrument cluster indicates that the voice activation system is active.

If no other commands are possible, operate the function via iDrive.

Terminating the voice activation system



Press the button on the steering wheel or Cancel.

Possible commands

Most menu items on the Control Display can be voiced as commands.

Commands from other menus can also be spoken.

You may select list entries such as phone list entries via voice activation. Read these list entries out loud exactly as they are shown in the respective list.

Displaying possible commands

The following is displayed in the top area of the Control Display:

- Some possible commands for the current menu.
- Some possible commands from other menus.

- Status of the voice recognition.

Help on the voice activation system

- ➤ To have the available spoken instructions read out loud: ›Voice commands‹.
- To have information on the operating principle of the voice activation system read out loud: "General information on voice control.
- To have help for the current menu read out loud: >Helps.

Example: opening the tone settings

The commands of the menu items are spoken just as they are selected via the controller.

- Turn on the Entertainment sound output, if needed.
- 2. Press button on the steering wheel.
- Media and radio
- 4. Tone

Settings

Setting the voice dialog

You can set the system to use standard dialog or a short version.

The short version of the voice dialog plays back short messages in abbreviated form.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Speech mode:"
- 5. Select the desired setting.

Selecting the input language

For some languages, the input language can be selected.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Voice control:"
- Select the desired setting.

Activating voice recognition via the server

The voice recognition feature via the server provides a dictation function and a natural method of entering destinations while improving the quality of voice recognition. To use the functions, data is transmitted to a service provider via an encrypted connection and stored locally there.

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Server speech recognition"

Speaking during voice output

It is possible to answer during inquiries of the voice activation system. The function can be deactivated if inquiries are often undesirably interrupted, e.g., due to background noise or talking.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Speaking during voice output"

Adjusting the volume

Turn the volume button during the spoken instructions until the desired volume is set.

- The volume remains constant even if the volume of other audio sources is changed.
- The volume is stored for the driver profile currently used.

Information for Emergency Requests

Do not use the voice activation system to initiate an Emergency Request. In stressful situations, the voice and vocal pitch can change. This can unnecessarily delay the establishment of a phone connection.

Instead, use the SOS button, refer to page 303, close to the interior mirror.

Environmental conditions

- Say the commands, numbers, and letters smoothly and with normal volume, emphasis, and speed.
- Always say commands in the language of the voice activation system.
- Keep the doors, windows, and glass sunroof closed to prevent noise interference.
- Avoid making other noise in the vehicle while speaking.

General settings

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Language

Setting the language

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Language:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

Setting the voice dialog

Voice dialog for the voice activation system, refer to page 34.

Time

Setting the time zone

Using iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- "Date and time"
- 4. "Time zone:"
- Select the desired setting.

The setting is stored for the driver profile currently used.

Setting the time

Using iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Date and time"
- 4. "Time:"
- 5. Turn the controller until the desired hours are displayed.
- Press the controller.
- Turn the controller until the desired minutes are displayed.
- 8. Press the controller.

The setting is stored for the driver profile currently used.

Setting the time format

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Time format:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

Instrument cluster with enhanced features: setting the clock time display

The clock time can be displayed in analog or digital form.

Via iDrive:

- "My Vehicle"
- 2. "iDrive settings"

- 3. "Displays"
- 4. "Instrument panel"
- 5. "Time"
- Select the desired setting.

The setting is stored for the driver profile currently used.

Automatic time setting

Depending on your vehicle's optional features, the time, date and, if needed, the time zone are updated automatically.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Automatic time setting"

The setting is stored for the driver profile currently used.

Date

Setting the date

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Date and time"
- 4. "Date:"
- 5. Turn the controller until the desired day is displayed.
- 6. Press the controller.
- Make the necessary settings for the month and year.

The setting is stored for the driver profile currently used.

Setting the date format

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Date and time"
- 4. "Date format:"
- Select the desired setting.

The setting is stored for the driver profile currently used.

Setting the units of measurement

The units of measurement for different values can be adjusted, e.g., fuel consumption, distances, and temperature.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Units"
- 4. Select the desired menu item.
- Select the desired setting.

The setting is stored for the driver profile currently used.

Activating/deactivating the display of the current vehicle position

If GPS geolocation has been activated, the current vehicle position can be displayed in the corresponding ConnectedDrive app or in the ConnectedDrive customer portal.

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "GPS tracking"
- 4. "GPS tracking"

Activating/deactivating information windows

Information windows are automatically shown on the Control Display for some functions. Some of these information windows can be activated or deactivated.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Pop-ups"
- 4. Select the desired setting.

The setting is stored for the driver profile currently used.

Control Display

Brightness

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Displays"
- 4. "Control display"
- 5. "Brightness at night"
- Turn the controller until the desired brightness is set.
- Press the controller.

The setting is stored for the driver profile currently used.

Depending on the light conditions, the brightness settings may not be clearly visible.

Screensaver

If no settings are made via iDrive, a screensaver will be displayed after an adjustable time.

Using iDrive:

- "My Vehicle"
- 2. "iDrive settings"

- 3. "Displays"
- 4. "Control display"
- "Screensaver"
- Select the desired setting.

The setting is stored for the driver profile currently used.

Selecting the contents of the main menu

For some menu items of the main menu, the displayed contents can be selected.

- 1. Press button.
- 2. "Contents of main menu"
- Select the desired menu and the desired content.

The setting is stored for the driver profile currently used.

Messages

Concept

The menu centrally displays all messages arriving in the vehicle in list form.

General information

The following messages can be displayed:

- Traffic messages.
- Check Control messages.
- Communication messages, e.g., e-mail, SMS or reminders.
- Service requirements messages.

Messages are additionally displayed in the status field.

Retrieving messages

Via iDrive:

- "Notifications"
- Select the desired message.

The respective menu is opened, where the message is displayed.

Deleting messages

All messages, except Check Control messages, can be deleted from the list. Check Control messages are displayed as long as they are relevant.

Via iDrive:

- 1. "Notifications"
- 2. Select the desired message.
- 3. Press button.
- "Delete this notification" or "Delete all notifications"

Settings

The following settings can be adjusted:

- Select the applications, from which messages will be permitted.
- Sort the messages according to date or priority.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Notifications"
- 4. Select the desired setting.

Data protection

Data transfer

Concept

The vehicle offers different functions, whose use requires a data transfer to BMW or a service provider. The data transfer can be deactivated for some functions.

General information

With data transfer deactivated, the respective function cannot be used.

Only make these settings while stationary.

Activating/deactivating the data transfer

Follow the instructions on the Control Display. Using iDrive:

- 1. Turn on standby state.
- 2. "My Vehicle"
- 3. "iDrive settings"
- 4. "Data privacy"
- Select the desired setting.

Deleting personal data in the vehicle

Concept

Depending on the usage, the vehicle saves personal data, such as stored radio stations. This personal data can be permanently deleted using iDrive.

General information

Depending on the equipment package, the following data can be deleted:

- Driver profile settings.
- Stored radio stations.
- Stored Favorites buttons.
- ▶ Travel and onboard computer information.
- Music collection.
- Navigation, e.g., stored destinations.
- Phone book.
- Online data, e.g., Favorites, cookies.
- Office data, e.g., voice notes.
- Login accounts.

Altogether, the deletion of the data can take up to 15 minutes.

Functional requirement

Data can only be deleted while stationary.

Deleting data

Heed and follow the instructions on the Control Display.

Via iDrive:

- 1. Turn on standby state.
- 2. "My Vehicle"
- 3. "iDrive settings"
- 4. "Delete personal data"
- 5. "Delete personal data"
- 6. "OK"
- Exit and lock the vehicle.

After 15 minutes, the deletion process is completed.

If not all of the data was deleted, repeat the deletion.

Canceling deletion

Switch on the drive-ready state to cancel deletion of the data.

Connections

Concept

Mobile devices, such as mobile phones or laptops, can be connected and used in the vehicle in various ways.

General information

The following connection types require onetime pairing with the vehicle:

- Bluetooth.
- Screen Mirroring.
- Internet hotspot.
- Apple CarPlay.

Paired devices are automatically recognized later on and connected to the vehicle.

The following functions are possible:

Connection type	Function
Mobile phone via Bluetooth.	Making calls.
	Office functions.
Audio player/ smartphone via Bluetooth or USB port.	Playing music.
Smartphone via Screen Mirroring	Mirroring (output) of the smartphone display on the Control Display.
Smartphone or USB device via USB port.	Playing videos.
Smartphone via Bluetooth or USB port.	Using apps.
Mobile device via the Internet hotspot.	Using the Internet.
USB memory device via USB port.	Exporting and importing driver profiles.
	Performing software updates.
	Exporting and importing stored trips.
	Playing music.
Apple iPhone via Apple CarPlay	Using Apple CarPlay apps via iDrive and voice operation, see the Owner's Manual for Navigation, Entertainment and Communication.

Safety information

WARNING

Operating the integrated information systems and communication devices while driving can distract from traffic. It is possible to lose control of the vehicle. There is a risk of an

accident. Only use the systems or devices when the traffic situation allows. If necessary, stop and use the systems and devices while the vehicle is stationary.◀

Displaying the device list

All devices paired with or connected to the vehicle are displayed in the device list.

Using iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"

A symbol indicates, for which function a device is used.

Symbol	Function
8	"Telephone"
\mathcal{S}^2	"Additional telephone"
ſ.	"Bluetooth® audio"
	"Apps"
	"Screen Mirroring"
<u> </u>	"Internet hotspot"
©	"Apple CarPlay"

Bluetooth connection

Compatible devices

General information

Details on which mobile phones and mobile devices with a Bluetooth interface are supported can be obtained at www.bmwusa.com/bluetooth.

Malfunctions may occur with devices not listed or deviating software versions.

Displaying the vehicle identification number and software part number

The vehicle identification number and software part number are needed to determine which devices are supported. The software version of the mobile phone may also be required.

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Bluetooth® info"
- 6. "System information"

A software update, refer to page 46, can be performed, if needed.

Functional requirements

- ▶ The device is compatible, refer to page 41.
- ▶ The device is ready for operation.
- ▶ Bluetooth is switched on in the vehicle, refer to page 41, and on the device.
- Bluetooth pre-settings may be required on the device, for instance visibility, refer to the owner's manual of the device.

Switching on Bluetooth

Using iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- 4. "Settings"
- "Bluetooth®"

Activating/deactivating telephone functions

To use all supported functions of a mobile phone, the following functions must be activated prior to pairing the mobile phone with the vehicle.

Using iDrive:

- "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- 4. "Settings"
- 5. Select desired setting:
 - ▶ "Office"

Activate function to transmit short messages, e-mails, calendars, tasks, notes, and reminders to the vehicle. Costs can be incurred by transmitting all data to the vehicle.

- "Contact images"
 Activate function to show the contact pictures.
- Move the controller to the left.

Pairing the mobile device with the vehicle

Using iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Connect new device"
- Select the functions for which the device is to be used:
 - Telephone
 - ▶ ☐ "Bluetooth® audio"
 - ▶ ☐ "Apps"
 - Papple CarPlay

The Bluetooth name of the vehicle is displayed on the Control Display.

6. Search for Bluetooth devices in the vicinity of the mobile device.

The Bluetooth name of the vehicle appears on the mobile device display.

Select the Bluetooth name of the vehicle.

- Depending on the mobile device, a control number is displayed or the control number must be entered.
 - Compare the control number displayed on the Control Display with the control number on the display of the device.
 - Confirm the control number on the device and on the Control Display.
 - Enter and confirm the same control number on the device and via iDrive.

The device is connected and displayed in the device list.

If pairing was unsuccessful: frequently asked questions, refer to page 47.

Near-field communication, NFC

Concept

With near-field communication, NFC, data can be transmitted over short distances using radio technology. This function simplifies pairing a mobile device with the vehicle to a single step.

Overview



The NFC antenna is in the instrument panel above the hazard warning flashers button.

Functional requirements

- ▶ The device is compatible, refer to page 41.
- ▶ The device is ready for operation.

 Bluetooth pre-settings may be required on the device, for instance visibility, refer to the owner's manual of the device.

Pairing the mobile device with the vehicle

- Activate the NFC function on the device, see the owner's manual of the device.
- 2. Hold the device close to the NFC antenna.
- 3. Depending on the mobile device, a control number may be displayed.
 - Compare the control number on the Control Display with the control number on the display of the device.
 - Confirm the control number on the mobile device.
 - Confirm the connection on the mobile device.

Depending on which functions are already occupied by other mobile devices, the device is connected with the phone, additional phone, or music function.

If pairing was unsuccessful: frequently asked questions, refer to page 47.

USB connection

General information

Mobile devices with USB port can be connected to the USB interface, refer to page 228.

- Mobile phones supported by the USB interface.
 - The snap-in adapter features a separate USB port that is automatically connected when a compatible mobile phone is inserted.
- Audio devices with USB port, for instance MP3 player.
- USB storage devices.

Common file systems are supported. FAT32 and exFAT are the recommended formats.

Information about compatible USB media can be found at www.bmwusa.com/bluetooth.

The following applications are possible:

- Exporting and importing driver profiles, refer to page 68.
- Playing music files via USB audio.
- Playing videos via USB video.
- ▶ Loading of software updates, refer to page 46.

Observe the following when connecting:

- Do not use force when plugging the connector into the USB interface.
- Use a flexible adapter cable.
- Protect the USB storage device against mechanical damage.
- Due to the large number of USB media available on the market, it cannot be guaranteed that every device is operable on the vehicle.
- Do not expose USB media to extreme environmental conditions, such as very high temperatures; refer to the owner's manual of the device.
- Due to the many different compression techniques, proper playback of the media stored on the USB storage device cannot be guaranteed in all cases.
- A connected USB storage device will be supplied with charging current via the USB interface if the device supports this. At higher temperatures, the USB storage device may cause a reduction in the charging current.
- To ensure proper transmission of the stored data, do not charge a USB storage device via the onboard socket, when it is connected to the USB interface.
- Depending on how the USB storage device should be used, settings may be required on the USB storage device, refer to the owner's manual of the device.

Not compatible USB media:

- USB hard drives.
- USB hubs.
- USB memory card readers with multiple inserts.
- HFS-formatted USB media.
- Devices such as fans or lights.

Connecting the device

Connect the USB storage device using a suitable adapter cable to a USB interface, refer to page 228.

The USB storage device is connected to the vehicle and displayed in the device list.

Internet connection

General information

Up to 8 devices can be connected with the Internet hotspot.

Functional requirements

- ConnectedDrive contract.
- Data contract with a service provider.
- WiFi-capable device.
- WiFi activated on the device.
- Internet hotspot activated in the vehicle.
- Standby state switched on.

Activating the Internet hotspot

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Internet hotspot"

Connecting device with Internet hotspot

Using iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- 4. "Connect new device"
- Internet hotspot"
 Hotspot name and hotspot code are dis
 - played on the Control Display.
- 6. Search for WiFi networks on the device. Select network name on the device.
- Enter hotspot code on the device and connect.

With the first Internet usage via the Internet hotspot, data volume must be purchased from a service provider.

All devices connected via the Internet hotspot use this data volume.

If necessary, data volume can be purchased from the ConnectedDrive Store.

Settings

The network name and hotspot code can be changed. In addition, the network name can be hidden so that it cannot be found by other devices.

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- "Mobile devices"
- 4. Press button.
- Change hotspot key"
 Enter the desired hotspot code.
 - "Change hotspot name"Enter the desired network name.
 - "Hide hotspot"

Activate or deactivate the function.

Confirm the entry of the hotspot code or network name:

OK Select the symbol.

Screen Mirroring

General information

Screen Mirroring enables mirroring (outputting) of the smartphone display on the Control Display.

Functional requirements

- Compatible smartphone supporting Screen Mirroring.
- Screen Mirroring is switched on on the smartphone.
- WiFi is switched on in the vehicle.

Switching on WiFi

Using iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Vehicle Wi-Fi®"

Pairing a smartphone with Screen Mirroring

Using iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- "Mobile devices"
- 4. "Connect new device"
- 5. "Screen Mirroring"

The WiFi name of the vehicle is displayed on the Control Display.

Search for WiFi devices in the surroundings of the smartphone. The WiFi name of the vehicle appears on the device display. Select the WiFi name of the vehicle.

7. Confirm the connection via iDrive.

The device is connected and displayed in the device list.

Additional functions

Following the initial pairing

- The device is connected with the vehicle within a short period of time if the engine is running or standby state is switched on.
- The data stored on the SIM card or in the mobile phone are transferred to the vehicle after recognition.
- For some devices, certain settings are necessary, for instance authorization; see the owner's manual of the device.
- After one-time pairing, the devices are automatically recognized and reconnected when standby state is switched on.

Configuring the device

Functions can be activated or deactivated for paired and connected devices.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- 4. Select the desired device.
- Select the desired setting.

If a function is assigned to a device, the function will be deactivated where appropriate for a device that is already connected and the device will be disconnected.

Connecting a specific device

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"

- "Mobile devices"
- Select device.
- 5. "Connect device"

The functions that were assigned to the device before disconnecting are assigned to the device when it is reconnected. If the device is already connected, these functions are deactivated.

Disconnecting the device

Using iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- 4. Select device.
- 5. "Disconnect device"

The device remains paired and can be connected again, refer to page 45.

Deleting the device

Using iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- Select device.
- "Delete device"

The device is disconnected and removed from the device list

Swapping the telephone and additional phone

If two mobile phones are connected to the vehicle, the functions of the phone and additional phone can be switched.

Using iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- "Mobile devices"

- 4. "Settings"
- "Swap telephone/additional tel."

Software update

General information

The vehicle supports a large number of mobile devices, for instance mobile phones and MP3 players. Software updates are available for many of the supported devices. The vehicle is maintained up-to-date via regular vehicle software updates.

Updates and related current information is available at www.bmw.com/update.

Displaying the installed software version

The software version installed in the vehicle is displayed.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Software update"
- "Show current version"

If an update has been carried out before, select the desired version to display additional information

Updating software via USB

The software may only be updated when the vehicle is stationary.

Using iDrive:

- Store the file for the software update in the main directory of a USB flash drive.
- 2. Connect the USB storage device to a USB interface, refer to page 228.
- 3. "My Vehicle"
- 4. "iDrive settings"
- "Software update"
- 6. "Update software"

- 7. "USB"
- 8. "Install software"
- 9. "OK"
- 10. Wait for the update to complete.
- "Shut down system"If necessary, switch off the engine first.

Updating software via BMW Teleservices

Updating software via BMW Teleservices is country-specific and may not be available.

The software is first transferred into the vehicle and can then be installed. The software can be installed at a time different from the time of transfer.

The software can be transferred while driving, and if the trip is interrupted it will resume automatically the next time the vehicle is driven. All other functions remain available during the transfer. Mobile cellular reception must be available for the transfer to take place.

The software may only be updated when the vehicle is stationary.

Using iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Software update"
- 4. "Update software"
- 5. "Teleservices"
- 6. "Load update"

The update is loaded but not installed.

- 7. Install or delete the update.
 - "Install software"

The loaded update is installed.

This step can be carried out at a later point in time.

"Remove update"

The loaded update is removed.

The following steps are omitted.

- 8. "OK"
- Wait for the update to complete.
- 10. "Shut down system"

If necessary, switch off the engine first.

Restoring the software version

The software version before the last software update and the version before the first software update can be restored.

The software may only be restored when the vehicle is stationary.

Using iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Software update"
- 4. "Restore software"
- Previous version"
 The previous software version is restored.
 - "Default software settings"The first software version is restored.
- 6. "Remove software"
- 7. "OK"
- 8. Wait for restore.
- "Shut down system"If necessary, switch off the engine first.

Frequently asked questions

Information on compatible mobile phones, refer to page 41.

All requirements are met and all required steps were completed in the specified order. Despite that, the mobile device does not function as expected.

In this case, the following explanations can help:

Why could the mobile phone not be paired or connected?

▶ Check that WiFi is activated in the vehicle.

- Activate WiFi in the vehicle.
- Check that Screen Mirroring is activated on the mobile phone.
 - Activate Screen Mirroring on the mobile phone.
- There are too many Bluetooth devices connected to the mobile phone or vehicle.
 Delete connections with other devices, if needed.
- Delete all known Bluetooth connections from the device list on the mobile phone prior to connecting.
 - Start new device search.
- The mobile phone is in power-save mode or has only a limited remaining battery life.
 Charge the mobile phone.
- Depending on the mobile phone, it is possible that only one mobile phone can be connected to the vehicle.
 - Unpair the connected mobile phone from the vehicle and pair and connect only one mobile phone.

Why does the mobile phone no longer react?

- The applications on the mobile phone do not function anymore.
 - Switch the mobile phone off and on again.
- Possibly too high or too low ambient temperatures for mobile phone operation.
 - Do not subject the mobile phone to extreme ambient temperatures.

Why are no telephone functions available?

- The mobile phone may not be properly configured, for instance as Bluetooth audio device.
 - Connect the mobile phone with the telephone or additional phone function.

Why are no or not all phone book entries displayed or why are they incomplete?

Transmission of the phone book entries is not yet complete.

- It is possible that only the phone book entries of the mobile phone or the SIM card are transmitted.
- ▶ It may not be possible to display phone book entries with special characters.
- It may not be possible to transmit contacts from social networks.
- ▶ The number of phone book entries to be stored is too high.
- Data volume of the contact too large, for instance due to stored information such as notes.
 - Reduce the data volume of the contact.
- A mobile phone can only be connected as audio source or as telephone.
 - Configure the mobile phone and connect it with the telephone or additional phone function.

Why is the phone connection quality poor?

- The strength of the Bluetooth signal on the mobile phone can be adjusted, depending on the mobile phone.
- Insert the mobile phone into the snap-in adapter or place it in the area of the center console.
- Insert mobile phone into the wireless charging tray.
- Adjust the volume of the microphone and loudspeakers separately in the sound settings.

If all points in this list have been checked and the required function is still not available, contact the hotline, a dealer's service center or another qualified service center or repair shop.

Integrated Owner's Manual in the vehicle

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Integrated Owner's Manual in the vehicle

Concept

The Integrated Owner's Manual specifically describes features and functions found in the vehicle. It can be displayed on the Control Display.

Components of the Integrated Owner's Manual

General information

The Integrated owner's manual consists of four parts, which offer various levels of information or possible access.

Quick Reference Guide

The Quick Reference Guide provides information on how to operate the vehicle, how to use basic vehicle functions and what to do in case of a breakdown. This information can also be displayed while driving.

Search by images

Based on illustrations, image search provides information and descriptions. This is useful, e.g., when the terminology for a feature is not known.

Keyword search

Search for information and descriptions by entering terms selected from the index.

Videos

The basic functions of selected systems are explained in the videos.

Select components



Press button.

- 2. "My Vehicle"
- 3. "Owner's Manual"
- 4. Select the desired setting.

Scrolling through the owner's manual

Turn the controller, until the next or previous contents are displayed.

Context help - operating instructions for the currently selected function

General information

The relevant information can be opened directly.

Opening via iDrive

Change directly to the Options menu from the function on the Control Display:

- 1. Press button.
- 2. "Owner's Manual"

Opening when a Check Control message is displayed

Directly from the Check Control message on the Control Display:

☐i "Owner's Manual"

Changing between a function and the operating instructions

To switch from a function, e.g., radio, to the Owner's Manual on the Control Display and to alternate between the two displays:

- 1. Press button.
- 2. "Owner's Manual"
- Select the desired page in the Owner's Manual.
- 4. Press button again to return to last displayed function.
- 5. Press button to return to the page of the Owner's Manual displayed last.

To alternate permanently between the last displayed function and the Owner's Manual repeat steps 4 & 5. Opens a new display every time.

Programmable memory buttons

General information

The jumps into the Owner's Manual can be stored on the programmable memory buttons, refer to page 29, and called up directly.


Storing

- 1. Select the desired entry point via iDrive:
 - "Quick reference"
 - "Search by pictures"
 - "Kevword search"
 - "Animations"
- 1... 7 Press desired button and hold for more than 2 seconds.

Executing

1... 7 Press the corresponding button. The owner's manual is directly displayed at the selected entry point.



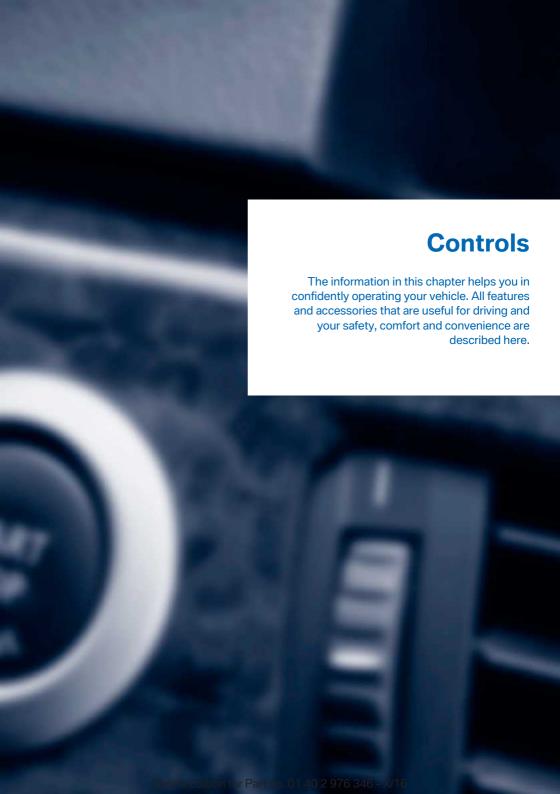

Opening and closing

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Remote control

General information

The vehicle is supplied with two remote controls with integrated key.

Each remote control contains a replaceable battery. Replacing the battery, refer to page 56.

You may set the key functions depending on the optional features and country-specific version. Settings, refer to page 70.

The vehicle stores personal settings for every remote control. Driver profile, refer to page 68.

The remote controls hold information about required maintenance. Service data in the remote control, refer to page 294.

Safety information WARNING

People or animals in the vehicle can lock the doors from the inside and lock themselves in. In this case, the vehicle cannot be opened from the outside. There is a risk of injury. Take the remote control with you so that the vehicle can be opened from the outside.

WARNING

For some country-specific variants, unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.◀

№ WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, e.g., due to the following actions:

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- ▶ Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle. ◀

Overview



- Unlocking
- 2 Locking

- 3 Open tailgate
- 4 Press and hold: panic mode Press briefly: headlight courtesy delay feature

Unlocking



Press button on the remote control.

Depending on the settings, refer to page 70, the following access points are unlocked:

- Driver's door and fuel filler flap.
 Press the button of the remote control again to unlock the other vehicle access points.
- ▷ All doors, tailgate, and fuel filler flap.
 In addition, the following functions are executed:
- The settings saved in the driver profile, refer to page 68, are applied.
- The interior lights are switched on, unless they were manually switched off. Switching the interior lights on and off manually, refer to page 135.
- ▶ The exterior lighting activated in the settings, refer to page 132, is switched on.
- Automatically folded in exterior mirrors are folded open. This function must be activated in the settings, refer to page 132.
- With anti-theft protection: Anti-theft protection is switched off.
- The alarm system, refer to page 72, is switched off.

After opening the driver's door, the vehicle is ready for operation, refer to page 20.

The light functions may depend on the ambient brightness.

Convenient opening



Press and hold this button on the remote control after unlocking.

The windows and the glass sunroof are opened, as long as the button on the remote control is pressed.

Locking

Close the driver's door.



Press button on the remote control.

- All doors and the tailgate are locked.
- The exterior mirrors are folded in. This function must be activated in the settings, refer to page 70.
- With anti-theft protection: Anti-theft protection is switched on. This prevents the doors from being unlocked using the lock buttons or the door openers.
- ▶ The alarm system, refer to page 72, is switched on.

If the drive-ready state is still switched on when you lock the vehicle, the vehicle horn honks twice. In this case, the drive-ready state must be switched off by means of the Start/ Stop button.

Switching on the interior and exterior lights



Press button on the remote control with the vehicle locked.

- ➤ The interior lights are switched on, unless they were manually switched off. Switching the interior lights on and off manually, refer to page 135.
- The exterior lighting activated in the settings, refer to page 132, is switched on. The welcome light is only switched on when the vehicle is being unlocked.

The light functions may depend on the ambient brightness.

If the button is pressed again within 10 seconds after vehicle was locked, the interior motion sensor and tilt alarm sensor of the antitheft warning system, refer to page 73, are

turned off. After locking, wait 10 seconds before pressing the button again.

Tailgate

General information

To avoid locking it in the vehicle, do not place the remote control in the cargo area.

Depending on the features and the country version, it is also possible to have the doors unlocked. Adjusting the settings, refer to page 70.

Safety information

WARNING
Body parts can be jammed when operat-

ing the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing. ◀

NOTE

During opening, the tailgate pivots back and up. There is a risk of property damage. Make sure that the area of movement of the tailgate is clear during opening and closing.

Opening



Press and hold button on the remote control for approx. 1 second.

Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.



- Press button on the remote control and hold for at least 3 seconds
- ▶ Briefly press the button on the remote control three times in succession.

To switch off the alarm: press any button.

Switching on the headlight courtesy delay feature




Press button on the remote control.

Set the duration, refer to page 132.

Replacing the battery

- 1. Remove the integrated key from the remote control, refer to page 61.
- Place the integrated key underneath the battery compartment cover, arrow 1, and lift the cover with a lever movement of the integrated key, arrow 2.

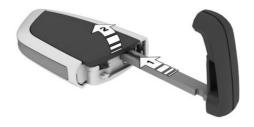

3. Push battery in the direction of the arrow using a pointed object and lift it out.



- 4. Insert a type CR 2032 battery with the positive side facing up.
- Press the cover closed.



Have old batteries disposed of by a dealer's service center or another qualified service center or repair shop

or take them to a collection point.

Additional remote controls

Additional remote controls are available from a dealer's service center or another qualified service center or repair shop.

Loss of the remote controls

A lost remote control can be blocked and replaced by a dealer's service center or another qualified service center or repair shop.

Malfunction

General information

A Check Control message, refer to page 116, is displayed.

Remote control detection by the vehicle may malfunction under the following circumstances:

- The battery of the remote control is discharged. Replacing the battery, refer to page 56.
- Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- Shielding of the remote control due to metal objects.
 - Do not transport the remote control together with metal objects.
- Interference of the radio connection from mobile phones or other electronic devices in direct proximity to the remote control.
 Do not transport the remote control together with electronic devices.
- Interference of radio transmission by a charging process of mobile devices, for instance charging of a mobile phone.
- ▶ The remote control is in direct proximity of the wireless charging tray.
 - Place the remote control down at a different location.

In the case of interference, the vehicle can be unlocked and locked from the outside with the integrated key, refer to page 61.

Switching the drive-ready state on via emergency detection of the remote control



- Hold the remote control with its back against the marked area on the steering column.
- Switch on drive-ready state within 10 seconds.

If the remote control is not detected, slightly change the position of the remote control and repeat the procedure.

BMW display key

General information

The BMW display key is supplied with a mechanical key. If the display key is used, the mechanical key should be carried with you, e.g., in the wallet.

The display key supports all functions of the standard remote control.

In addition, the following functions are also available:

- Display status of doors and windows.
- Display status of the anti-theft warning system.
- With parked-vehicle heating: operate parked-vehicle heating.
 - Without parked-vehicle heating: operate parked-vehicle ventilation.
- ▶ Call up range with available fuel.
- Display service information.

Remote Control Parking.

Safety information

WARNING
People or animals in the vehicle can lock
the doors from the inside and lock themselves
in. In this case, the vehicle cannot be opened
from the outside. There is a risk of injury. Take
the remote control with you so that the vehicle
can be opened from the outside.

WARNING

For some country-specific variants, unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.◀


WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, e.g., due to the following actions:

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle.◀

Overview

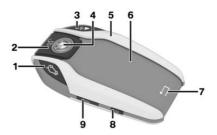

- Open tailgate
- 2 Unlocking
- 3 Press and hold: panic mode Press briefly: headlight courtesy delay feature
- 4 Locking
- 5 Park button
- 6 Display
- 7 Back
- 8 Switch the display on/off
- 9 Micro-USB charging socket

Reception range

The number of available display key functions depends on the distance from the vehicle.

- When you are in close proximity to the vehicle, all functions of the display key are available.
- ▶ The status information can be called up in the extended reception range.
 - With parked-vehicle heating: the parked-vehicle heating can be operated.
 - Without parked-vehicle heating: the parked-vehicle ventilation can be operated.
- Outside of the reception range of the vehicle, you can display the last transmitted status information from the vehicle.
- The symbol is shown on the display if one of the buttons is pressed outside of the reception range.

Display

General information

The display is divided into the upper status line, the information area, and the lower status line.

Upper status line

The upper status line displays the following information:

- Vehicle secured.
 - Vehicle not secured.
- Set time in the vehicle.
- Charge state of the display key battery.

Information area

The information area can be used to access information and perform additional functions.

If the information area contains more than one page, then page indicators are shown beneath the information.

○●○ The indicator for the current page has been filled in.

Swipe to the right or left with a finger to change between the pages.

If further information is available on a page, tap the appropriate symbol.

To return to the original page: \footnotemark tap on the symbol beneath the display.

Lower status line

The lower status line indicates whether or not the display key is within reception range, refer to page 58.

- "Connected": the display key is within reception range.
- "Updated": the display key is not within reception range. It indicates when the last data transfer from the vehicle took place.

Switching on/off

The display will go out automatically after a brief period to conserve battery power.

To hide the display manually:

Press the button on the left side of the display key. Overview, refer to page 58.

To show the display:

- Press the button on the left side of the display key.
- 2. Then, swipe with your finger from bottom to top to unlock the screen lock.

To switch off the display to increase the usable battery life:

- Press and hold the button on the left side of the display key for longer than 4 seconds.
- 2. "OK"

To switch the display on:

Press the button on the left side of the display key.

Operating concept

Depending on the equipment, there are up to five main menus that provide access to the sub-menus.

Main menu	Information/Function
"Security information"	Door status. Alarm system status. After alarm triggering: date, time, and reason for triggering the alarm.
	Window status. Glass sunroof status.

Main menu	Information/Function
"Vehicle information"	Maintenance indicators of Condition Based Service CBS, refer to page 294. Status of the roadside park- ing lights.
"Mobility info"	Range with available fuel.
"Precondit. setting"	With parked-vehicle heating: operate parked-vehicle heating, refer to page 217.
	Without parked-vehicle heat- ing: operate parked-vehicle ventilation, refer to page 217.
"R/C parking"	Remote Control Parking, refer to page 201.

Display key battery

General information

Observe the following information:

- If the charge state of the display key battery declines, the display is switched off automatically. The battery must be recharged so that the display can be switched back on. The operability of the standard buttons is retained until the battery is completely discharged.
- Charge the battery for at least three hours before using the display key for the first time or if the key has not been used for an extended period.
- The display key can be used while it is being charged. If the battery is fully discharged, it may take some time before the display key can be used again.
- Due to the large number of USB chargers available on the market, it cannot be guaranteed that every charger will function properly. The charging duration depends on the charger used.

During charging, the charger and the display key may become warm. At higher temperatures, the display key may cause a reduction in the charging current, and in isolated cases the charging process may be interrupted temporarily.

Charging

 Connect the display key via the micro-USB charging socket to a USB port.



With Steptronic transmission:

Place the display key into the middle of the wireless charging tray in front of the cup holders.

Ensure that the display is facing up. Close the tray cover.

Malfunction

General information

A Check Control message is displayed.

BMW display key detection by the vehicle may malfunction under the following circumstances:

- The battery of the display key is discharged. Charge the battery, refer to page 60.
- Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- Shielding of the display key due to metal objects.

- Interference of the radio connection from mobile phones or other electronic devices in direct proximity.
- Interference of radio transmission by a charging process of mobile devices, for instance charging of a mobile phone.

Do not transport the display key together with metal objects or electronic devices.

In the case of interference, the vehicle can also be unlocked and locked from the outside with the mechanical key.

Switching on drive-ready state via emergency detection of the BMW display key



- Hold the display key with its back against the marked area on the steering column.
- Switch on drive-ready state within 10 seconds.

If the display key is not detected, slightly change the position of the display key and repeat the procedure.

Resetting the BMW display key

If the charged display key cannot be switched on anymore or if the display does not respond to entries anymore, the display key can be reset.

Press and hold the button on the left side of the display key for at least 20 seconds, until something appears on the display.

Integrated key

General information

The driver's door can be locked and unlocked without remote control using the integrated key.

The integrated key also fits the glove compartment.

Safety information

WARNING

For some country-specific variants, unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.◀

NOTE

The door lock is permanently joined with the door. The door handle can be moved. When pulling the door handle with the integrated key inserted, paint or key can be damaged. There is a risk of property damage. Remove the integrated key before pulling the outside door handle.

Removing



Press the button, arrow 1, and pull out the integrated key, arrow 2.

Unlocking/locking via the door lock

 Pull the door handle outward with the left hand and hold it.



Guide one finger of the right hand from the back under the cover, feel for the release there, press outwards, and at the same time press the cover to the right with the left thumb.



Unlock or lock the door lock using the integrated key.



The other doors must be unlocked or locked from the inside.

Alarm system

The alarm system is not armed if the vehicle is locked with the integrated key.

The alarm system is triggered when the door is opened, if the vehicle has been unlocked via the door lock.

In order to stop the alarm, unlock the vehicle with the remote control, if necessary through emergency detection of the remote control, refer to page 57.

Buttons for the central locking system

General information

In the event of a severe accident, the vehicle is automatically unlocked. The hazard warning system and interior lights come on.

Overview



Buttons for the central locking system.

Locking



Press the button with the front doors closed.

- ▶ The fuel filler flap remains unlocked.
- ▶ The vehicle is not secured against theft when locking.

Unlocking



Press button.

Opening

- Press button to unlock the doors together, and then pull the door handle above the armrest.
- ▶ Front doors: pull the door handle on the door to open the door. The other doors remain locked.
- Back doors: pull twice on the door handle on the door to be opened; the first time unlocks the door, the second time opens it. The other doors remain locked.

Comfort Access

Concept

The vehicle can be accessed without activating the remote control.

All you need to do is to have the remote control with you, such as in your pants pocket.

The vehicle automatically detects the remote control when it is in close proximity or in the vehicle's interior.

General information

Comfort Access supports the following functions:

- Unlocking and locking the vehicle.
- Convenient closing.
- Opening tailgate.
- Opening and closing the tailgate with notouch activation.

Functional requirements

- To lock the vehicle, the remote control must be located outside of the vehicle near the doors.
- The next unlocking and locking cycle is not possible until after approx. 2 seconds.

Unlocking



Grasp the handle of a vehicle door completely. This corresponds with pressing the button of on the remote control.

Locking

The driver's door must be closed.



Touch the grooved surface on the handle of a closed vehicle door with your finger for approx. 1 second without grasping the door handle.

This corresponds with pressing the button 🔮 on the remote control.

Convenient closing

Safety information

WARNING

With convenient closing, body parts can be jammed. There is a risk of injury. Make sure that the area of movement of the doors is clear during convenient closing.

Closing



Touch the grooved surface on the handle of a closed vehicle door with your finger and hold it there without grasping the door handle.

This corresponds to pressing and holding the button on the remote control.

In addition to locking, the windows and the glass sunroof close and the exterior mirrors fold in.

Open tailgate

General information

If you open the tailgate via Comfort Access, locked doors will not be unlocked.

To avoid locking it in the vehicle, do not place the remote control in the cargo area.

Safety information

WARNING

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.

NOTE

During opening, the tailgate pivots back and up. There is a risk of property damage. Make sure that the area of movement of the tailgate is clear during opening and closing.

Opening



Press button on the exterior of the tailgate.

Opening and closing the tailgate with no-touch activation

Concept

The tailgate can be opened with no-touch activation using the remote control you are carrying. With automatic tailgate operation, it can also be closed with no-touch activation. Two sensors detect a forward-directed foot motion in the center of the area at the rear of the vehicle and the tailgate is opened or closed.

General information

To avoid locking it in the vehicle, do not place the remote control in the cargo area.

If the remote control is in the sensor range, the tailgate may open or close inadvertently if you unintentionally move your foot or if something else moves in the detection range.

The sensor has an approximate range of 5 ft/1.50 m extending from the rear of the vehicle.

If you open the tailgate with no-touch activation, locked doors will not be unlocked.

Safety information

WARNING

During no-touch activation, vehicle parts may be touched, e.g., hot exhaust system.
There is a risk of injury. When moving your

foot, make sure you have a firm stance and do not touch the vehicle. ◀

WARNING

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing. ◄

NOTE

During opening, the tailgate pivots back and up. There is a risk of property damage. Make sure that the area of movement of the tailgate is clear during opening and closing.

Performing the foot movement

- Stand in the middle behind the vehicle at about an arm's length away from the rear of the vehicle.
- Wave a foot under the vehicle in the direction of travel and immediately pull it back.
 With this movement, the leg must pass through the ranges of both sensors.



Opening

Perform the foot movement described earlier.

The tailgate is opened, regardless of whether it was previously locked or unlocked.

Before the opening, the hazard warning system flashes.

Closing

The tailgate can only be closed with no-touch activation if automatic tailgate operation is active.

Perform the foot movement described earlier.

Before closing, the hazard warning system flashes and an acoustic signal sounds.

You can interrupt the closing operation by moving your foot again.

Malfunction

Remote control detection by the vehicle may malfunction under the following circumstances:

- The battery of the remote control is discharged. Replace the battery, refer to page 56.
- ▶ Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- Shielding of the remote control due to metal objects.
 - Do not transport the remote control together with metal objects.
- Interference of the radio connection by mobile phones or other electronic devices in direct proximity of the remote control.
 Do not transport the remote control to-

In the case of a malfunction, unlock and lock the vehicle using the buttons of the remote control or using the integrated key, refer to page 61.

gether with electronic devices.

Tailgate

General information

To avoid locking it in the vehicle, do not place the remote control in the cargo area.

Depending on the features and the country version, it is also possible to have the doors unlocked. Adjusting the settings, refer to page 70.

Safety information

lack

WARNING

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing. ◄

NOTE

During opening, the tailgate pivots back and up. There is a risk of property damage.

Make sure that the area of movement of the tailgate is clear during opening and closing.

Without automatic tailgate operation

Opening from the outside



 Without Comfort Access: unlock vehicle.
 With Comfort Access: unlock the vehicle or have the remote control with you.

Press button on the exterior of the tailgate.



Press and hold button on the remote control for approx. 1 second.

Depending on the setting, the doors may also be unlocked. Opening with the remote control, refer to page 56.

Opening from the inside



Press button in the storage compartment of the driver's door.

Locking



With the driver's door shut, press button on the inside of the tailgate.

Closing



Grasp the recess grips and pull the tailgate down.

With automatic tailgate operation

Opening

From the outside



Without Comfort Access: unlock vehicle. With Comfort Access: unlock the vehicle or have the remote control with you. Press button on the exterior of the tailgate.



Press and hold button on the remote control for approx. 1 second.

Depending on the setting, the doors may also be unlocked. Opening with the remote control, refer to page 56.

From the inside



Press button in the storage compartment of the driver's door.

Interruption of the opening procedure

The opening operation is interrupted:

- By pressing the button again.
- When the vehicle starts moving.
- By pressing the button on the inside of the tailgate.

Closing

From inside the tailgate

Without Comfort Access:



Press button on the inside of the tailgate.

With Comfort Access:



- Press button, arrow 1, on the inside of the tailgate.
- Press button, arrow 2.

The vehicle will be locked after closing the tailgate. The driver's door must be closed for this purpose and the remote control must be outside of the vehicle in the area of the tailgate.

An acoustic signal sounds before the tailgate is closed.

Interruption of the closing procedure

The closing operation is interrupted:

- ▶ By pressing the pressed button again or by releasing the held button.
- ▶ If the vehicle starts off with a jerky movement.

Locking separately

The tailgate can be locked separately using the switch in the glove compartment. If the glove compartment is locked, the tailgate cannot be opened.



- ▶ Tailgate secured, arrow 1.
- Tailgate not secured, arrow 2.

Slide the switch into the arrow 1 position. The tailgate is secured and decoupled from the central locking system.

This is beneficial when the vehicle is parked using valet service. The remote control can be handed out without the integrated key.

Trunk emergency unlocking



Pull the handle inside the cargo area. The tailgate unlocks.

With automatic tailgate operation: malfunction

In the event of an electrical malfunction, operate the unlocked tailgate manually with a slow and smooth motion.

Automatic Soft Closing

Safety information WARNING

Body parts can be jammed while operating the doors. There is a risk of injury. Make sure that the area of movement of the doors is clear during opening and closing.

Closing

To close the doors, push lightly. Closing occurs automatically.

Driver profile

Concept

In the driver profiles, individual settings for several drivers can be stored and called up again when required.

General information

There are three driver profiles with which personal vehicle settings can be stored. Every remote control has one of these driver profiles assigned.

If the vehicle is unlocked using a remote control, the assigned personal driver profile will be activated. All settings stored in the driver profile are automatically applied.

If several drivers use their own remote control, the vehicle will adjust the personal settings during unlocking. These settings are also restored, if the vehicle has been used in the meantime by a person with a different remote control.

Changes to the settings are automatically saved in the driver profile currently activated.

If another driver profile is selected via iDrive, the settings saved in it will be applied automatically. The new driver profile is assigned to the remote control currently used.

There is an additional guest profile available that is not assigned to any remote control. It can be used to apply settings in the vehicle without changing the personal driver profiles.

Functional requirements

For the system to be able to identify the driver profile associated to a particular driver, the detected remote control must be clearly allocated to the driver.

This is the case when:

- ▶ The driver is only carrying his or her own remote control.
- The driver unlocks the vehicle.
- The driver gets into the vehicle through the driver's door.

Active driver profile

After switching on the Control Display, the name of the active driver profile is displayed.

Select driver profile, refer to page 69.

As soon as the engine is started or any key is pressed, the last selected display is shown.

To exit the welcome screen via iDrive:

"OK"

Settings

The settings for the following systems and functions are saved in the active driver profile. The scope of storable settings depends on country and equipment.

- Unlocking and locking.
- ▶ Lights.
- Climate control.
- Radio.
- Instrument cluster.
- Programmable memory buttons.
- Volumes, tone.
- Control Display.
- Navigation.
- ► TV.
- Park Distance Control PDC.
- Rearview camera.
- Panorama View.
- Head-up Display.
- Driving Dynamics Control.
- Seat position, exterior mirror position, steering wheel position.
- Cruise control.
- Intelligent Safety.
- Night vision.

Profile management

Selecting a driver profile

Regardless of the remote control in use, a different driver profile may be activated. This allows you to call up personal vehicle settings if you did not unlock the vehicle with your own remote control.

Using iDrive:

- "My Vehicle"
- "Driver profiles"
- 3. Select driver profile.
- 4. "OK"
- All settings stored in the called-up driver profile are automatically applied.
- ▶ The called-up driver profile is assigned to the remote control being used at the time.
- If the driver profile is already assigned to a different remote control, this driver profile will apply to both remote controls.

Guest profile

The guest profile is for individual settings that are stored in none of the three personal driver profiles.

This can be useful for drivers who are using the vehicle temporarily and do not have their own driver profile.

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. "Drive off (quest)"
- 4. "OK"

The guest profile cannot be renamed. It is not assigned to the current remote control.

Renaming a driver profile

A personal name can be assigned to the active driver profile to avoid confusion between the driver profiles.

Using iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- Select driver profile.
 - The driver profile marked with this symbol can be renamed.
- 4. "Change driver profile name"

- 5. Enter profile name.
- 6. OK Select the symbol.

Resetting a driver profile

The settings of the active driver profile are reset to their factory settings.

Using iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.
 - The driver profile marked with this symbol can be reset.
- 4. "Reset driver profile"
- 5. "OK"

Exporting driver profiles

Most settings of the active driver profile can be exported.

This can be helpful for saving and retrieving personal settings, for instance before delivering the vehicle to a workshop. The saved driver profiles can be taken into another vehicle.

Usina iDrive:

- "My Vehicle"
- 2. "Driver profiles"
- Select driver profile.
 - The driver profile marked with this symbol can be exported.
- 4. "Export driver profile"
- 5. ▷ "USB device"

Select USB storage device, as needed, refer to page 43.

ConnectedDrive.

Importing driver profiles

The existing settings of the active driver profile are overwritten with the settings of the imported driver profile.

Using iDrive:

- "My Vehicle"
- 2. "Driver profiles"
- Select the driver profile to be overwritten.
 - The driver profile marked with this symbol can be overwritten.
- 4. "Import driver profile"
- 5. Select the medium that was used to export the driver profile.
 - ▶ USB storage device: "USB device" Select USB storage device as needed.
 - ConnectedDrive.
- 6. Select the driver profile to be imported.

System limits

A clear assignment between the remote control and driver may not be possible in the following cases, for example.

- The passenger unlocks the vehicle with his or her own remote control, but another person is driving.
- The driver unlocks the vehicle via Comfort Access and has multiple remote controls with him or her.
- The driver changes, but the vehicle is not locked and unlocked.
- Multiple remote controls are located outside of the vehicle.

Settings

General information

Depending on the equipment and countryspecific variant of your vehicle, different opening and closing settings are available.

These settings are stored for the driver profile, refer to page 68, currently used.

Unlocking

Doors

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. 🗹 "Driver's door" or 🗹 "All doors"
- 5. Select desired setting:
 - ▷ "Driver's door only"

Only the driver's door and the fuel filler flap are unlocked. Pressing again unlocks the entire vehicle.

"All doors"
 The entire vehicle is unlocked.

Tailgate

Depending on optional features and country version, this setting is not offered in some cases.

Using iDrive:

- "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. Tailgate" or Tailgate and door(s)"
- 5. Select desired setting:
 - ▶ "Tailgate"

The tailgate is opened.

"Tailgate and door(s)"

The tailgate is opened and the doors are unlocked.

Confirmation signals from the vehicle

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"

- 3. "Doors/Key"
- Deactivate or activate the desired confirmation signals.
 - "Flash for lock/unlock"
 Unlocking is signaled by two flashes, locking by one.
 - With alarm system:
 "Acoustic signal for lock/unlock"
 Unlocking is signaled by two honks of the horn, locking by one.

Automatic locking

Via iDrive:

- 1. "My Vehicle"
- "Vehicle settings"
- 3. "Doors/Key"
- 4. Select desired setting:
 - "Lock automatically"
 The vehicle locks automatically after a short period of time if no door is opened after unlocking.
 - "Lock after starting to drive"
 The vehicle locks automatically after you drive off.

Automatic unlocking

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. "Unlock at end of trip"

After drive-ready state is switched off by pressing the Start/Stop button, the locked vehicle is automatically unlocked.

Adjusting the last seat, mirror, and steering wheel position

Using iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- Select driver profile.
 - The setting can be made for the driver profile marked with this symbol.
- 4. "Last seat position automatic"

When the vehicle is unlocked, the driver's seat and exterior mirrors resume their last set positions. When the drive-ready state is switched on, the steering wheel is moved to its last set position.

Folding mirrors automatically

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. "Fold mirrors in when locked"

Locking the vehicle folds in the exterior mirrors automatically. Unlocking the vehicle automatically folds out the exterior mirrors.

Establishing idle state after opening the front doors

Via iDrive:

- "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. "Turn off after door opening"

Opening the front doors establishes the idle state, refer to page 19.

Alarm system

General information

When the vehicle is locked, the vehicle alarm system reacts to the following changes:

- Opening a door, the hood or the tailgate.
- Movements in the interior.
- Changes in the vehicle tilt, e. g., during attempts at stealing a wheel or when towing the vehicle.
- Disconnected battery voltage.
- Improper use of the socket for Onboard Diagnosis.

The alarm system signals these changes visually and acoustically:

- Acoustic alarm.
- By switching on the hazard warning system.
- By flashing the high beams.

Switching on and off

When you unlock or lock the vehicle, either with the remote control or with Comfort Access, the alarm system is switched on and off at the same time.

Opening the doors with the alarm system switched on

The alarm system is triggered when a door is opened if the door was unlocked using the integrated key in the door lock.

Switching off the alarm, refer to page 73.

Opening the tailgate with the alarm system switched on

The tailgate can be opened even when the alarm system is switched on.

After the tailgate is closed, it is locked and monitored again provided the doors are locked. The hazard warning system flashes once.

Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.



Press button on the remote control and hold for at least 3 seconds.

To switch off the alarm: press any button.

Indicator lamp on the interior mirror



The indicator lamp flashes briefly every 2 seconds:

The alarm system is switched on.

Indicator lamp flashes for approx. 10 seconds, then it flashes briefly every 2 seconds:

Interior motion sensor and tilt alarm sensor are not active, as doors, hood, or tailgate are not correctly closed. Correctly closed access points are secured.

When the still open access points are closed, interior motion sensor and tilt alarm sensor will be switched on.

▶ The indicator lamp goes out after unlocking:

The vehicle has not been tampered with.

The indicator lamp flashes after unlocking until drive-ready state is switched on, but no longer than approx. 5 minutes:

An alarm has been triggered.

Tilt alarm sensor

The tilt of the vehicle is monitored.

The alarm system responds in situations such as attempts to steal a wheel or when the vehicle is towed.

Interior motion sensor

The windows and the glass sunroof must be closed for the system to function properly.

Avoiding unintentional alarms

General information

The tilt alarm sensor and interior motion sensor can trigger an alarm, although no unauthorized action occurred.

Possible situations for an unwanted alarm:

- In automatic vehicle washes.
- In duplex garages.
- During transport on trains carrying vehicles, at sea or on a trailer.
- With animals in the vehicle.

The tilt alarm sensor and the interior motion sensor can be switched off in such situations.

Switching off the tilt alarm sensor and interior motion sensor



Press the remote control button again within 10 seconds as soon as the vehicle is locked.

The indicator lamp lights up for approx. 2 seconds and then continues to flash.

The tilt alarm sensor and interior motion sensor are turned off until the vehicle is locked again.

Switching off the alarm

- Unlock the vehicle using the remote control, if needed, through emergency detection of the remote control, refer to page 57.
- With Comfort Access: if you are carrying the remote control on your person, grasp the driver side or front passenger side door handle completely.

Power windows

Safety information WARNING

When operating the windows, body parts and objects can be jammed. There is a risk of injury or risk of property damage. Make sure that the area of movement of the windows is

WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, e.g., due to the following actions:

Pressing the Start/Stop button.

clear during opening and closing. ◀

- Releasing the parking brake.
- Opening and closing the doors or windows.
- ▶ Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle.◀

Overview





Power windows



Safety switch

Opening



Press the button to the resistance

The window opens while the switch is being held.



Press the switch beyond the resistance point.

The window opens automatically. Pressing the switch again stops the motion.

Convenient opening via the remote control, refer to page 55.

Closing



Pull the switch to the resistance point.

The window closes while the switch is being held.



Pull the switch beyond the resistance point.

The window closes automatically. Pulling again stops the motion.

Closing by means of Comfort Access, refer to page 63.

Jam protection system

General information

If closing force exceeds a specific threshold as a window closes, closing is interrupted.

The window opens slightly.

Safety information

WARNING

Accessories on the windows such as antennas can impact jam protection. There is a risk of injury. Do not install accessories in the area of movement of the windows.

Closing without the jam protection system

In case of danger from the outside or if ice might prevent normal closing, proceed as follows:

1. Pull the switch past the resistance point and hold it there.

The window closes with limited jam protection. If the closing force exceeds a specific threshold, closing is interrupted.

2. Pull the switch past the resistance point again within approx. 4 seconds and hold it there.

The window closes without jam protection.

Safety switch

General information

The safety switch in the driver's door can be used to prevent children, for instance from opening and closing the rear windows using the switches in the rear.

If an accident of a certain severity occurs, the safety function is switched off automatically.

Overview





Safety switch

Switching on and off



Press button.

The LED lights up if the safety function is switched on.

Rear window roller sunblind

Overview





Button for the roller sunblind.

Operation



Press the button to open the closed roller sunblind or to close the open roller sunblind.

If the button is pressed again during the movement, the roller sunblind is moved in the opposite direction.

System limits

If you are no longer able to move the roller sunblind after having activated it consecutively a number of times, the system is blocked for a limited time to prevent overheating. Let the system cool.

The roller sunblind cannot be moved at low interior temperatures.

Roller sunblinds for the rear side windows

№ WARNING

With closed roller sunblinds and open windows, the roller sunblinds can be loaded heavily while driving due to the wind. The roller sunblinds can be damaged and compromise the passengers. There is risk of injuries. Do not open the windows while driving if the roller sunblinds are closed.

Pull out the roller sunblind at the strap and hook it onto the bracket.

Glass sunroof

General information

The glass sunroof and the sliding visor can be operated together or separately using the same switch.

The glass sunroof is operational when standby state is switched on.

Safety information

WARNING

Body parts can be jammed when operating the glass sunroof. There is a risk of injury. Make sure that the area of movement of the glass sunroof is clear during opening and closing.

WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, e.g., due to the following actions:

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle. ◀

Overview





Opening/closing the glass sunroof.

Lifting/closing glass sunroof



Push switch briefly upward.

- The closed glass sunroof tilts and the sliding visor opens slightly.
- The opened glass sunroof closes until it is in the tilted position. The sliding visor does not move.
- The tilted glass sunroof closes.

Opening/closing the glass sunroof and sliding visor separately



Press the switch in the desired direction to the resistance point and hold it there.

The sliding visor opens while the switch is being held. If the sliding visor is already fully open, the glass sunroof opens.

The glass sunroof closes while the switch is being held. If the glass sunroof is already closed or in the tilted position, the sliding visor closes.

Press the switch in the desired direction past the resistance point.

The sliding visor opens automatically. If the sliding visor is already fully open, the glass sunroof opens automatically.

The glass sunroof closes automatically. If the glass sunroof is already closed or in the tilted position, the sliding visor closes automatically.

Pressing the switch upward stops the motion.

Opening/closing the glass sunroof and sliding visor together



Briefly press the switch twice in succession in the desired direction past the resistance point.

The glass sunroof and sliding visor move together. Pressing the

switch upward stops the motion.

Convenient opening via the remote control, refer to page 55.

Closing by means of Comfort Access, refer to page 63.

Comfort position

If the glass sunroof is not completely opened automatically, the comfort position has been attained. In this position the wind noises in the interior are the least.

If desired, continue the movement by pressing the switch.

Jam protection system

General information

If the closing force when closing the glass sunroof exceeds a certain value, the closing movement is stopped, beginning at approximately the middle of the opening in the roof, or from the tilted position during closing.

The glass sunroof opens slightly.

Closing from the open position without jam protection

If there is an external danger, proceed as follows:



- 1. Push the switch forward past the resistance point and hold.
 - The glass sunroof closes with limited jam protection. If the closing force exceeds a specific threshold, closing is interrupted.
- Push the switch forward again past the resistance point and hold until the glass sunroof closes without jam protection. Make sure that the closing area is clear.

Closing from the raised position without jam protection



If there is an external danger, push the switch forward past the resistance point and hold it.

The glass sunroof closes without jam protection .

Initializing after a power interruption

General information

After a power failure during the opening or closing process, the glass sunroof can only be operated to a limited extent.

The system can be initialized under the following conditions.

- The vehicle is parked in a horizontal position.
- The drive-ready state is established.
- ► The external temperature is above 41 °F/5 °C.

During initialization, the glass sunroof closes without jam protection.

Make sure that the closing area is clear.

Initializing the system



Press the switch up and hold it until the initialization is complete:

Initialization begins within 15 seconds and is completed

when the glass sunroof and sliding visor are completely closed.

Settings

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Sitting safely

An ideal seating position that meets the needs of the occupants can make a vital contribution to relaxed, fatigue-free driving.

In the event of an accident, the correct seating position plays an important role. Observe the information in the following chapters:

- Seats, refer to page 79.
- Safety belts, refer to page 82.
- Head restraints, refer to page 84.
- Airbags, refer to page 137.

Seats

Safety information

WARNING

WARNING

Seat adjustments while driving can lead to unexpected movements of the seat. Vehicle control could be lost. There is a risk of an accident. Only adjust the seat on the driver's side when the vehicle is stationary.

With a backrest inclined too far to the rear, the protective effect of the safety belt cannot be ensured anymore. There is a risk of


sliding under the safety belt in an accident. There is a risk of injuries or danger to life. Adjust the seat prior to starting the trip. Adjust the backrest so that it is in the most upright position as possible and do not adjust again while driving. ◀

★ WARNING

There is a risk of jamming when moving the seats. There is a risk of injury or risk of property damage. Make sure that the area of movement of the seat is clear prior to any adjustment.◄

Semi-electrically adjustable seats

Overview

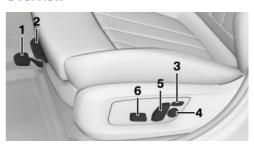

- Forward/backward
- 2 Thigh support
- 3 Backrest width
- 4 Lumbar support
- 5 Backrest tilt
- 6 Height, seat tilt

Seat tilt



Move switch up or down.


Forward/backward



Pull the lever and slide the seat in the desired direction.

After releasing the lever, move the seat forward or back slightly, making sure it engages properly.

Height

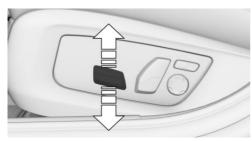


Push switch up or down.

Backrest tilt



Move switch forward or backward.


Thigh support

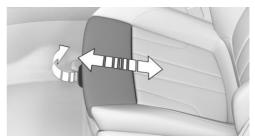

Pull the lever at the front of the seat and push the thigh support forward or back.

Electrically adjustable seats

Overview

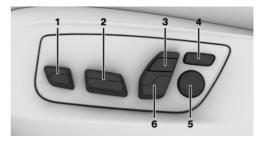

- 1 Thigh support
- 2 Forward/backward, height, seat tilt
- 3 Upper backrest adjustment
- 4 Backrest width


- 5 Lumbar support
- 6 Backrest tilt, head restraint

General information

The seat adjustment for the driver's seat is stored for the driver profile currently used. When the vehicle is unlocked via the remote control, the position is automatically retrieved if the function, refer to page 72, is activated for this purpose.


The current seat position can be stored using the memory function, refer to page 89.

Forward/backward

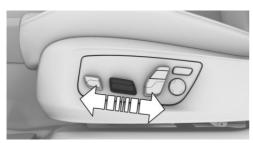


Push switch forward or backward.

Height

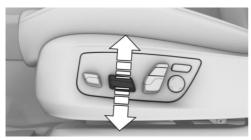

Push switch up or down.

Seat tilt

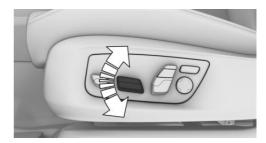


Move switch up or down.

Backrest tilt



Move switch forward or backward.

Thigh support

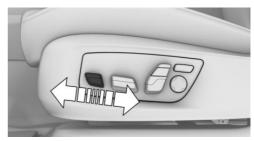

Push switch forward or backward.

Lumbar support

Concept

The curvature of the seat backrest can be adjusted in a way that it supports the lumbar re-

gion of the spine. The lower back and the spine are supported for upright posture.

Settings



- Press the front/rear section of the switch:
 - The curvature is increased/ decreased.
- Press the upper/lower section of the switch:

The curvature is shifted up/down.

Backrest width

General information

You can change the backrest width by adjusting the side wings of the backrest.

Settings



- Press the front section of the switch:
 - The backrest width decreases.
- Press the rear section of the switch:

The backrest width increases.

Upper backrest adjustment

Concept

The upper backrest supports the back in the shoulder area. A correct setting leads to a relaxed seating position and reduces strain on the shoulder muscles.

Settings



Press the button on the respective side.

Safety belts

Number of safety belts

The vehicle is fitted with five safety belts to ensure occupant safety. Optimal protection is only achieved if the safety belts are correctly applied.

The two outer safety belt buckles of the rear seat are intended for the persons sitting on the left and right.

The center safety belt buckle of the rear seat is intended for the person sitting in the middle.

General information

Always make sure that safety belts are being worn by the occupants before driving off. The airbags supplement the safety belts as an additional safety device. The airbags are not a substitute for safety belts.

The upper shoulder strap's anchorage point will be correct for adult seat occupants of every build if the seat is correctly adjusted.

Safety information

WARNING

If the safety belt is used to buckle more than one person, the protective effect of the safety belt can no longer be ensured. There is a risk of injuries or danger to life. Do not allow more than one person to wear a single safety

belt. Infants and children are not allowed on an occupant's lap, but must be transported and secured in designated child restraint systems.◀

WARNING

The protective effect of the safety belts can be limited or lost when safety belts are fastened incorrectly. An incorrectly fastened safety belt can cause additional injuries, e.g., in the event of an accident or during braking and evasive maneuvers. There is a risk of injuries or danger to life. Make sure that all occupants are wearing safety belts correctly.

WARNING

The protective effect of the safety belts may not be fully functional or fail in the following situations:

- Safety belts are damaged, soiled or changed in any other way.
- Safety belt buckle is damaged or heavily soiled.
- Belt tensioners or belt retractors were modified.

Safety belts can be imperceptibly damaged in the event of an accident. There is a risk of injuries or danger to life. Do not modify safety belts, safety belt buckles, belt tensioners, belt retractors or belt anchors and keep them clean. Have the safety belts checked after an accident at the dealer's service center or another qualified service center or repair shop. ◀

Correct use of safety belts

- Wear the safety belt twist-free and as tight to your body as possible over your lap and shoulders.
- Wear the safety belt deep on your hips over your lap. The safety belt may not press on your stomach.
- Do not rub the safety belt against sharp edges, or guide it or jam it in across hard or fragile objects.

- Avoid thick clothing.
- Re-tighten the safety belt frequently upward around your upper body.

Buckling the safety belt

- 1. Slowly guide the safety belt out of the holder when fastening it.
- 2. Insert the tongue plate into the safety belt buckle. The safety belt buckle must engage audibly.



When the safety belt is fastened, the driver's and passenger's belt straps are automatically tightened once after driving away.

Unbuckling the safety belt

- 1. Hold the safety belt firmly.
- 2. Press the red button in the safety belt buckle.
- Guide the safety belt back into its roll-up mechanism.

Safety belt reminder for driver's seat and front passenger seat

Display



The indicator light lights up and a signal sounds. Make sure that the safety belts are positioned correctly. The

safety belt reminder is active at speeds above approx. 6 mph/10 km/h. It can also be activated if objects are placed on the front passenger seat.

Safety mode

In critical situations, for instance during an emergency stop, the front safety belts tighten automatically.

If the situation passes without an accident occurring, the belt tension relaxes.

If the belt tension does not loosen automatically, stop the vehicle and unbuckle the safety belt using the red button in the safety belt buckle. Fasten the safety belt before continuing on your trip.

Front head restraints

General information

The current head restraint position can be stored using the memory function, refer to page 89.

Correctly adjusted head restraint

General information

A correctly adjusted head restraint reduces the risk of injury to cervical vertebrae in the event of an accident.

Height

Adjust the head restraint so that its center is approximately at eye level.

Distance

Adjust the distance so that the head restraint is as close as possible to the back of the head.

Safety information WARNING

A missing protective effect due to removed or not correctly adjusted head restraints can cause injuries in the head and neck area. There is a risk of injury. Before driving, install the head restraints on the occupied seats. Ensure that the middle of the head re-

straint supports the back of the head approximately at eye level. ◀

WARNING

Body parts can be jammed when moving the head restraint. There is a risk of injury.

Make sure that the area of movement is clear when moving the head restraint.

WARNING

Objects on the head restraint reduce the protective effect in the head and neck area. There is a risk of injury.


- Do not use seat or head restraint covers.
- Do not hang objects, e.g., clothes hangers, directly on the head restraint.
- Only use accessories that have been determined to be safe for attachment to a head restraint.
- Do not use any accessories, e.g., pillows, while driving. ◀

Active head restraint

In the event of a rear-end collision with a certain severity, the active head restraint automatically reduces the distance from the head.

Have the active head restraint checked and if necessary replaced in the case of damage or if it was exposed to an accident.


Adjusting the height: manual head restraints

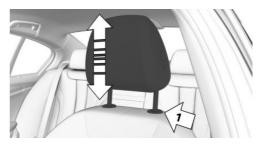

➤ To lower: press the button, arrow 1, and push the head restraint down.

▶ To raise: push the head restraint up.

Adjusting the height: power head restraints

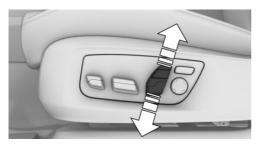

Push switch up or down.

Distance to back of head: manual head restraints



- Back: press the button and push the head restraint toward the rear.
- Forward: pull the head restraint toward the front.

Distance to back of head: electrical head restraints

The head restraint is automatically repositioned when the upper backrest is adjusted.

Adjusting the side extensions



Fold the side extensions on the head restraint forward for increased lateral support in the resting position.

Removing

The head restraints cannot be removed.

Rear head restraints

Correctly adjusted head restraint

General information

A correctly adjusted head restraint reduces the risk of injury to cervical vertebrae in the event of an accident.

Height

Adjust the head restraint so that its center is approximately at eye level.

Distance

Adjust the distance so that the head restraint is as close as possible to the back of the head.

Safety information WARNING

A missing protective effect due to removed or not correctly adjusted head restraints can cause injuries in the head and neck area. There is a risk of injury. Before driving, install the head restraints on the occupied seats. Ensure that the middle of the head re-

straint supports the back of the head approximately at eye level. ◀

WARNING

Body parts can be jammed when moving the head restraint. There is a risk of injury.

Make sure that the area of movement is clear when moving the head restraint.

WARNING


Objects on the head restraint reduce the protective effect in the head and neck area. There is a risk of injury.

- Do not use seat or head restraint covers.
- Do not hang objects, e.g., clothes hangers, directly on the head restraint.
- Only use accessories that have been determined to be safe for attachment to a head restraint.
- Do not use any accessories, e.g., pillows, while driving. ◀

Folding down the middle head restraint


To improve the view to the rear, the center head restraint can be folded to the rear.

Only push the head restraint down if no one will be sitting in the center seat.

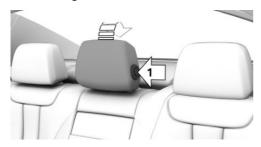

- To the rear: press the button, arrow 1, and fold the head restraint backward.
- To the front: fold head restraint forward until the head restraint engages.

Adjusting the height

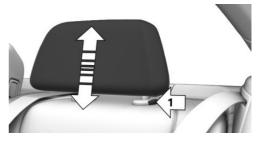

The height of the outer head restraints can be adjusted.

- ▶ To lower: press the button, arrow 1, and push the head restraint down.
- To raise: push the head restraint up.

Removing

Only remove the head restraint if no one will be sitting in the seat in question.



- Raise the head restraint up against the resistance.
- 2. Press the button, arrow 1, and pull the head restraint out completely.

Mirrors

Exterior mirrors

General information

The mirror on the passenger side is more curved than the driver's side mirror.

The mirror setting is stored for the driver profile currently in use. When the vehicle is unlocked via the remote control, the position is automatically retrieved if the function, refer to page 72, is activated for this purpose.

The current exterior mirror position can be stored using the memory function, refer to page 89.

Safety information

MARNING Objections

Objects reflected in the mirror are closer than they appear. The distance to the traffic behind could be incorrectly estimated, e.g., while changing lanes. There is a risk of an accident. Estimate the distance to the traffic behind by looking over your shoulder.

Overview



- 1 Settings 87
- 2 Left/right, Automatic Curb Monitor
- 3 Folding in and out 87

Selecting a mirror



To change over to the other mirror: Slide the switch.

Adjusting electrically

Press button.
The selected mirror moves along with the button movement.

Adjusting manually

In case of an electrical malfunction, adjust the mirror by pressing the edges of the mirror glass.

Folding in and out

↑ No

NOTE

Depending on the vehicle width, the vehicle can be damaged in vehicle washes. There is a risk of property damage. Before washing, fold in the mirrors by hand or with the button.



Press button.

The mirror can only be folded in up to a speed of approx. 15 mph/20 km/h.

Fold the mirrors in and out is advantageous in the following situations:

- ▶ In vehicle washes.
- On narrow roads.

Mirrors that were folded in are folded out automatically at a speed of approx. 25 mph/40 km/h.

Automatic heating

Both exterior mirrors are automatically heated whenever drive-ready state is switched on.

Automatic dimming feature

The exterior mirror on the driver's side is automatically dimmed. Photocells in the interior mirror, refer to page 88, are used to control this.

Automatic Curb Monitor, exterior mirror

Concept

If reverse gear is engaged, the mirror glass on the front passenger side is tilted downward. This improves your view of the curb and other low-lying obstacles when parking, e.g.

Activating

- 1. Slide the switch to the driver's side mirror position.
- 2. Engage selector lever position R.

Deactivating

Slide the switch to the passenger's side mirror position.

Interior mirror, automatic dimming feature

Overview



Photocells are used for control:

- In the mirror glass.
- On the back of the mirror.

Functional requirements

- Keep the photocells clean.
- Do not cover the area between the inside rearview mirror and the windshield.


Steering wheel

Safety information

WARNING

Steering wheel adjustments while driving can lead to unexpected steering wheel movements. Vehicle control could be lost. There is a risk of an accident. Adjust the steering wheel while the vehicle is stationary only.

Manual steering wheel adjustment

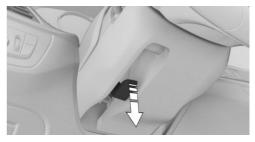

- Fold the lever down.
- Move the steering wheel to the preferred height and angle to suit your seating position.
- 3. Fold the lever back up.


Electric steering wheel adjustment

General information

The steering wheel setting is stored for the driver profile currently in use. When the driveready state is switched on, the position is automatically retrieved if the function, refer to page 72, is activated for this purpose.

The current steering wheel position can be stored using the memory function, refer to page 89.

Settings

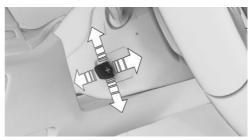

Move the steering wheel to the preferred height and angle to suit your seating position by pressing the switch.

Assistance getting in and out

The steering wheel temporarily moves into the highest position to make it easier to enter and exit the vehicle.

Heated steering wheel

Overview





Heated steering wheel

Switching on/off



Press button.

A Check Control message is displayed.

If the trip is resumed within approx. 15 min after an intermediate stop, the heated steering wheel activates automatically.

Memory function

Concept

The following settings can be stored and, if necessary, retrieved using the memory function:

- Seat position.
- Exterior mirror position.
- Steering wheel position.
- Height of the Head-up Display.

General information

Two memory locations with different settings can be set for each driver profile, refer to page 68.

The following settings are not stored:

- Backrest width.
- Lumbar support.

Safety information

WARNING

Using the memory function while driving can lead to unexpected seat or steering wheel movements. Vehicle control could be lost. There is a risk of an accident. Only retrieve the memory function when the vehicle is stationary.

WARNING

There is a risk of jamming when moving the seats. There is a risk of injury or risk of property damage. Make sure that the area of movement of the seat is clear prior to any adjustment. ◀

Overview



The memory buttons are located on the front doors.

Storing

- 1. Set the desired position.
- 2. Press button. The writing on the button lights up.

Press desired button 1 or 2 while the LED is lit. A signal sounds.

Calling up settings

The stored position is called up automatically. Press selected button 1 or 2.

The procedure stops when a switch for setting the seat is pressed or one of the memory buttons is pressed again.

While driving, the seat position adjustment on the driver's side is interrupted after a short time.

Massage function

Concept

Depending on the program, the massage function ensures relaxed muscles and better blood circulation and can avoid fatigue.

General information

Eight different massage programs can be selected:

- Pelvis activation.
- Upper body activation.
- Full body activation.
- Back massage.
- Shoulder massage.
- Lumbar massage.
- Upper body training.
- Full body training.

Overview





Massage function

Switching on



Press button once for each intensity level.

The maximum intensity level is reached when three LEDs are lit.

Switching off



Press and hold the button, until the LEDs go out.

Adjusting the massage program

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Seat comfort"
- 4. Select desired seat.
- 5. "Seat massage"
- 6. Select the desired setting.

Seat heating

Overview

Front





Seat heating

Rear





Seat heating

Switching on



Press button once for each temperature level.

Highest level if three bars are shown on the climate control display.

If the trip is continued within approx. 15 minutes after a stop, seat heating is activated automatically with the temperature selected last.

When ECO PRO, refer to page 247, is activated, the heater output is reduced.

Switching off



Press button and hold until bar display on the climate control display goes

out.

Seat heating distribution

The heating action in the seat cushion and backrest can be distributed in different ways.

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Climate functions"
- 4. "Seat and surface heating"
- Select desired seat.
- 6. Press the controller and turn it to set the seat heating distribution.

Active seat ventilation

Concept

The seat cushion and backrest surfaces are cooled by means of integrated fans.

The ventilation cools the seat, e.g., if the vehicle interior is overheated or for continuous cooling at high temperatures.

Overview





Active seat ventilation

Switching on



Press button once for each ventilation level.

Highest level if three bars are shown on the climate control display.

The ventilation switches back by one level after a short time.

Switching off



out.

Press button and hold until bar display on the climate control display goes

Individual activation

Concept

A number of heating and cooling functions can be automatically activated depending on the external temperature.

General information

The external temperature at which the functions are to be automatically activated can be set via iDrive.

Depending on the equipment package, the following functions can be automatically activated:

- Seat heating.
- Heated steering wheel.
- Seat ventilation.

Functional requirements

- The safety belt of the corresponding seat is buckled.
- The external temperature exceeds or drops below the set external temperature for approx. 30 seconds.

Activating/deactivating

Using iDrive:

- 1. "My Vehicle"
- "Vehicle settings"
- 3. "Climate functions"
- 4. "Seat and surface heating"
- 5. Select desired seat.
- Select the menu item of the desired function.
- Set the external temperature at which the function is to be activated.
- 8. Set the desired level.

Transporting children safely

Vehicle features and options

This chapter describes all standard, countryspecific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

The right place for children

Safety information WARNING

tions:

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, e.g., due to the following ac-

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle. ◀

Always transport children in the rear seat

General information

Accident research shows that the safest place for children is in the rear seat.

Transport children younger than 13 years of age or shorter than 5 ft/150 cm only in the rear seat in suitable child restraint systems designed for the age, weight and size of the child. Children 13 years of age or older must wear a safety belt as soon as a suitable child restraint

system can no longer be used due to their age, weight and size.

Safety information

WARNING

The safety belt cannot be fastened correctly on children shorter than 5 ft, 150 cm without suitable additional child restraint systems. The protective effect of the safety belts can be limited or lost when safety belts are fastened incorrectly. An incorrectly fastened safety belt can cause additional injuries, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injuries or danger to life. Secure children shorter than 5 ft, 150 cm using suitable child restraint systems.

Children on the front passenger seat

General information

Before using a child restraint system on the front passenger seat, ensure that the front, knee, and side airbags on the front passenger side are deactivated. Automatic deactivation of front-seat passenger airbags, refer to page 139.

Safety information

WARNING

Active front-seat passenger airbags can injure a child in a child restraint system when the airbags are activated. There is a risk of injury. Make sure that the front-seat passenger airbags are deactivated and that the PASSENGER AIRBAG OFF indicator lamp lights up.

Installing child restraint systems

General information

Pay attention to the information, operating and safety information of the child restraint system manufacturer when selecting, installing and using child restraint systems.

Safety information

WARNING
The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged. If possible, adjust the height of the head restraints or remove them.

On the front passenger seat

Deactivating airbags WARNING

Active front-seat passenger airbags can injure a child in a child restraint system when the airbags are activated. There is a risk of injury. Make sure that the front-seat passenger airbags are deactivated and that the PASSENGER AIRBAG OFF indicator lamp lights up.

After installing a child restraint system in the front passenger seat, make sure that the front, knee and side airbags on the front passenger side are deactivated.

Deactivate the front-seat passenger airbags automatically, refer to page 139.

Seat position and height

Before installing a child restraint system, move the front passenger seat as far back as possible and bring it possibly up to medium height to obtain the best possible position for the belt and to offer optimal protection in the event of an accident.

If the upper anchor of the safety belt is located in front of the belt guide of the child seat, move the front passenger seat carefully forward until the best possible belt guide position is reached.

Backrest width

Adjustable backrest width: before installing a child restraint system in the front passenger seat, open the backrest width completely. Do not change the backrest width again and do not call up a memory position.

Child seat security



The safety belts in the rear and the front passenger safety belt can be permanently locked to fasten child restraint systems.

Locking the safety belt

1. Pull out the belt strap completely.

- 2. Secure the child restraint system with the safety belt.
- Allow the belt strap to be pulled in and pull it tight against the child restraint system. The safety belt is locked.

Unlocking the safety belt

- Unbuckle the belt buckle.
- 2. Remove the child restraint system.
- Allow the belt strap to be pulled in completely.

system on the middle seat. Use the vehicle seat belt instead for the middle seat.

LATCH child restraint fixing system

General information

LATCH: Lower Anchors and Tether for Children.

Pay attention to the information, operating and safety information of the child restraint system manufacturer when selecting, installing and using LATCH child restraint fixing systems.

Before installing LATCH child restraint fixing systems

Pull the safety belt away from the area of the child restraint system.

Mounts for the lower LATCH anchors

General information

The lower anchors may be used to attach the CRS to the vehicle seat up to a combined child and CRS weight of 65 lb/30 kg when the child is restrained by the internal harnesses.

Assembly of LATCH child restraint fixing systems

- Install child restraint system, see manufacturer's information.
- Ensure that both LATCH anchors are properly connected.

Safety information WARNING

If the LATCH child restraint fixing systems are not correctly engaged, the protective effect of the LATCH child restraint fixing system can be limited. There is a risk of injuries or danger to life. Make sure that the lower anchors are securely engaged and that the LATCH child restraint fixing system fits securely against the backrest.

Child restraint system with a tether strap

Safety information

№ NOTE

The mounting points for the upper retaining straps of child restraint systems are only provided for these retaining straps. When other objects are mounted, the anchors can be damaged. There is a risk of property damage. Only mount child restraint systems to the upper retaining straps.

Position



The corresponding symbol shows the mounts for the lower LATCH anchors. Seats equipped with lower anchors are marked with a pair, 2, of LATCH symbols. It is not recommended to use the inner lower anchors of standard outer

LATCH positions to fasten a child restraint

WARNING

If the upper retaining strap is incorrectly used for the child restraint system, the protective effect can be reduced. There is a risk of injury. Make sure that the upper retaining strap is not guided across sharp edges and without twisting to the upper retaining strap.

Mounting points




The respective symbol shows the anchor for the upper retaining strap.

Seats with an upper top tether are

marked with this symbol. It can be found on the rear seat backrest or the rear window shelf.

Routing the retaining strap

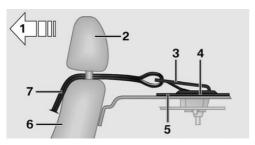

- Direction of travel
- 2 Head restraint
- 3 Hook for upper retaining strap
- 4 Mounting point
- 5 Rear window shelf
- 6 Seat backrest
- 7 Upper retaining strap

Attaching the upper retaining strap to the mounting point

- 1. Open the mounting point cover.
- 2. Raise the head restraint.
- Guide the upper retaining strap between the supports of the head restraint.
 - Guide it over the head restraint of the middle seat.
- Attach the hook of the retaining strap to the anchor.
- Tighten the retaining strap by pulling it down.
- Lower and lock head restraints as needed.

Locking the doors and windows in the rear

General information

In certain situations, it may be useful to secure the rear doors and windows so that they cannot be opened from the inside, e.g. when transporting children.

Doors



Push the locking lever on the rear doors up.

The door can now be opened from the outside only.

Safety switch for the rear



Press button on the driver's door.

This locks various functions so that they cannot be operated from the rear. Safety switch, refer to page 75.

Driving

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Start/Stop button

Concept



Pressing the Start/Stop button switches drive-ready state on or off, refer to page 19.

Steptronic transmission: the drive-ready state is switched on

when you depress the brake pedal while pressing the Start/Stop button.

Pressing the Start/Stop button again switches drive-ready state back off and standby state, refer to page 19, is switched back on.

Drive-ready state

Safety information

DANGER
If the exhaust pipe is blocked or ventilation is insufficient, harmful exhaust gases can enter into the vehicle. The exhaust gases contain carbon monoxide, an odorless and colorless but highly toxic gas. In enclosed areas, exhaust gases can also accumulate outside of the vehicle. There is danger to life. Keep the exhaust pipe free and ensure sufficient ventilation.

WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, observe the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, e.g., with a wheel chock. ◄

NOTE

In the case of repeated starting attempts or repeated starting in quick succession, the fuel is not burned or is inadequately burned. The catalytic converter can overheat. There is a risk of property damage. Avoid repeated starting in quick succession.

Switching on drive-ready state

Steptronic transmission

- 1. Depress the brake pedal.
- 2. Press the Start/Stop button.

The ignition is activated automatically for a brief time and is stopped as soon as the engine starts.

Most of the indicator and warning lights in the instrument cluster light up for a varied length of time.

Display in the instrument cluster



When the drive-ready state is switched on, READY is displayed in the instrument cluster.

Switching off drive-ready state

Steptronic transmission

- Engage selector lever position P with the vehicle stopped.
- Press the Start/Stop button. The engine is switched off.
- 3. Set the parking brake.

Before driving into a vehicle wash

So that the vehicle can roll into a vehicle wash, observe instructions for going into an automatic vehicle wash, refer to page 309.

Auto Start/Stop function

Concept

The Auto Start/Stop function helps save fuel. The system switches off the engine during a stop, for instance in traffic congestion or at traffic lights. Drive-ready state remains switched on. The engine starts automatically for driving off.

General information

After every engine start via the Start/Stop button, the Auto Start/Stop function is activated or deactivated, according to the last setting, refer to page 100. If the Auto Start/Stop function is active, it is available as soon as a speed of approx. 3 mph/5 km/h is exceeded.

Depending on the selected driving mode, refer to page 112, the system is automatically activated or deactivated.

Engine stop

Functional requirements

Steptronic transmission

The engine is switched off automatically during a stop under the following conditions:

- The selector lever is in selector lever position D.
- The brake pedal remains pressed while the vehicle is stationary or the vehicle is held by Automatic Hold.
- ▶ The driver's safety belt is buckled or the driver's door is closed.

Steptronic transmission: manual engine stop

If the engine was not switched off automatically when the vehicle stopped, the engine can be switched off manually:

- Press the brake pedal forcefully again from the current pedal position.
- Engage selector lever position P.

If all functional preconditions are fulfilled, the engine switches off.

Air conditioner when the engine is switched off

The air flow from the air conditioner is reduced when the engine is switched off.

Displays in the instrument cluster

General information



The display in the tachometer indicates that the Auto Start/ Stop function is ready for an Automatic engine start.



The display indicates that the conditions for an automatic engine stop have not been met.

Total time with switched-off engine



If the vehicle is equipped for this feature, the total time that the engine has been switched off using the Auto Start/Stop function is displayed during an auto-

matic engine stop in the ECO PRO driving mode.

The total time is automatically reset every time the vehicle is refueled.

System limits

The engine is not switched off automatically in the following situations:

- In case of a steep downhill grade.
- Brake not engaged strongly enough.
- The external temperature is high and automatic climate control is running.
- The vehicle's interior has not yet been heated or cooled to the required level.
- If window condensation is imminent.
- Engine or other parts not at operating temperature.
- Engine cooling is required.
- ➤ The wheels are at a sharp angle or the steering wheel is being turned.
- Vehicle battery is heavily discharged.
- At higher elevations.
- The engine compartment lid is unlocked.
- ▶ The parking assistant is activated.
- Stop-and-go traffic.
- Steptronic transmission: selector lever position in N or R.
- After driving in reverse.
- Use of fuel with high ethanol content.

Starting the engine

Functional requirements

Steptronic transmission

The engine starts automatically under the following preconditions:

- By releasing the brake pedal.
- When Automatic Hold is activated: press the accelerator pedal.

Driving away

After the engine starts, accelerate as usual.

Safety mode

After the engine switches off automatically, it will not start again automatically if any one of the following conditions are met:

- ► The driver's safety belt is unbuckled and the driver's door is open.
- The hood was unlocked.

Some indicator lights light up for a varied length of time.

The engine can only be started via the Start/Stop button.

System limits

Even if driving off was not intended, the deactivated engine starts up automatically in the following situations:

- Excessive warming of the vehicle's interior when the cooling function is switched on.
- Excessive cooling of the vehicle's interior when the heating is switched on.
- If window condensation is imminent.
- The steering wheel is turned.
- Steptronic transmission: change from selector lever position D to N or R.
- Steptronic transmission: change from selector lever position P to N, D or R.
- Vehicle battery is heavily discharged.

Start of an oil level measurement.

Activating/deactivating the system manually

Concept

gine stop.

The engine is not automatically switched off.

The engine is started during an automatic en-

Using the button





Press button.

Steptronic transmission: via selector lever position

The Auto Start/Stop function is also deactivated in selector lever position M/S.

Via the Driving Dynamics Control

The Auto Start/Stop function is also deactivated in SPORT driving mode of the Driving Dynamics Control.

Display

- LED comes on: Auto Start/Stop function is deactivated.
- LED goes out: Auto Start/Stop function is activated.

Switching off the vehicle during an automatic engine stop

General information

During an automatic engine stop, the vehicle can be switched off permanently, for instance when leaving it.

Steptronic transmission

- 1. Press the Start/Stop button.
 - Drive-ready state is switched off.
 - Standby state is switched on.
 - Selector lever position P is engaged automatically.
- 2. Set the parking brake.

Automatic deactivation

General information

In certain situations, the Auto Start/Stop function is deactivated automatically for safety reasons, e.g., if no driver is detected.

Malfunction

The Auto Start/Stop function no longer switches off the engine automatically. A Check Control message is displayed. It is possible to continue driving. Have the system checked by a dealer's service center or another qualified service center or repair shop.

Parking brake

Concept

The parking brake is used to prevent the vehicle from rolling when it is parked.

Safety information

WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, observe the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, e.g., with a wheel chock. ◄

WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, e.g., due to the following actions:

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle.◀

Overview





Parking brake

Setting

With a stationary vehicle



Pull the switch.

The LED lights up.



The indicator light in the instrument cluster illuminates red. The parking brake is set.

While driving

To use as emergency brake while driving:

Pull the switch and hold it. The vehicle brakes hard while the switch is being pulled.



The indicator lamp in the instrument cluster illuminates red, a signal sounds, and the brake lights illuminate.

A Check Control message is displayed.

If the vehicle is slowed down to a speed of approx. 2 mph/3 km/h the parking brake is set.

Releasing

Releasing manually

With drive-ready state switched on:



Steptronic transmission: press the switch while the brake is pressed or se-

lector lever position P is set.

The LED and indicator light go out.

The parking brake is released.

Automatic release

The parking brake is released automatically when you drive away.

The LED and indicator light go out.

Automatic Hold

Concept

This system assists the driver by automatically setting and releasing the brake, such as when moving in stop-and-go traffic.

The vehicle is automatically held in place when it is stationary.

On inclines, the system prevents the vehicle from rolling backward when driving off.

General information

Under the following conditions, the parking brake is automatically engaged:

- Drive-ready state is switched off.
- The driver's door is opened while the vehicle is stationary.
- ▶ The moving vehicle is brought to a standstill using the parking brake.

Display



The indicator light changes from green to red.

Safety information

WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, observe the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- > On uphill grades or on a downhill slope, also secure the vehicle, e.g., with a wheel chock.◄

WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, e.g., due to the following actions:

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle. ◀

NOTE

If the vehicle is stationary, Automatic Hold engages the parking brake. It prevents the vehicle from rolling in a vehicle wash. There is a risk of property damage. Deactivate Automatic Hold prior to entering the vehicle wash.

Overview



AUTO H

Automatic Hold

Establishing function readiness from Automatic Hold

With drive-ready state switched on:



Press button.

The LED lights up.



The indicator lamp lights up green.

Automatic Hold is functional.

After every new vehicle start, the last selected setting is active.

Automatic Hold holding the vehicle

Function readiness is established and the driver's door is closed.

After stepping on the brake pedal, e.g., when stopping at a traffic light, the vehicle is automatically secured against rolling.



The indicator lamp lights up green.

Driving away

Step on the accelerator pedal to drive off.

The brake is released automatically.

The indicator light goes out.

Activating the parking brake automatically

The parking brake is automatically set if driveready state is switched off while the vehicle is being held by Automatic Hold or if the vehicle is exited.



The indicator light changes from green to red.

The parking brake is not set automatically, if the drive-ready state is switched off, while the vehicle is coasting to a halt. Automatic Hold is deactivated.

Switching function readiness off



Press button.

The LED goes out.



The indicator lamp goes out.

Automatic Hold is switched off.

If the vehicle is being held by Automatic Hold, press additionally on the brake pedal, when switching off.

Malfunction

In the event of a failure or malfunction of the parking brake:

Secure the vehicle against rolling away, e.g., with a wheel chock, after existing the vehicle.

After a power failure

To reestablish parking brake functionality after a power failure:

- 1. Turn on standby state.
- 2. Pull the switch while stepping on the brake pedal or selector lever position P is set and then push.

This process may take a few seconds. Any sounds associated with this are normal.



The indicator light is no longer illuminated as soon as the parking brake is ready for operation again.


Turn signal, high beams, headlight flasher

Turn signal

Turn signal in exterior mirror

When driving and during operation of the turn signals or hazard warning system, do not fold in the exterior mirrors, so that the signal lights on the exterior mirror are easy to see.

Using turn signals

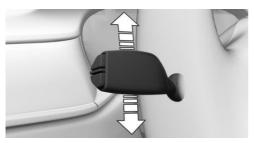

Press the lever past the resistance point.



Lightly tap the lever up or down.

The triple turn signal duration can be adjusted. Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. "One-touch turn signal"
- Select the desired setting.

The setting is stored for the driver profile currently used.

Signaling briefly

Press the lever to the resistance point and hold it there for as long as you want the turn signal to flash.

High beams, headlight flasher

Push the lever forward or pull it backward.



- High beams on, arrow 1.
- High beams off/headlight flasher, arrow 2.

Washer/wiper system

General information

Do not use the wipers if the windshield is dry, as this may damage the wiper blades or cause them to become worn more quickly.

Safety information

WARNING

If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of property damage. Make sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.

NOTE

If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of property damage. Defrost the windshield prior to switching the wipers on. ◄

Switching on



Press the lever up until the desired position is reached.

- Resting position of the wipers, position 0.
- ▶ Rain sensor, position 1.
- Normal wiper speed, position 2.
 The wipers switch to intermittent operation when the vehicle is stationary.
- ▶ Fast wiper speed, position 3.
 The wipers change to their normal speed when the vehicle comes to a standstill.

When travel is interrupted with the wiper system switched on: when travel continues, the wipers resume at their previous speed.

Switching off and brief wipe



Press the lever down.

- Switching off: press the lever down until it reaches its standard position.
- Brief wipe: press the lever down from the standard position.

The lever automatically returns to its initial position when released.

Rain sensor

Concept

The rain sensor automatically controls the time between wipes depending on the intensity of the rainfall.

General information

The sensor is located on the windshield, directly in front of the interior mirror.

Safety information

NOTE

If the rain sensor is activated, the wipers can accidentally start moving in vehicle washes. There is a risk of property damage. Deactivate the rain sensor in vehicle washes.

Activating/deactivating



Press the lever up once from its standard position, arrow 1.

Wiping is started.

The LED in the wiper lever lights up.

Adjusting the rain sensor sensitivity



Turn the thumbwheel to adjust the sensitivity of the rain sensor.

Upward: high rain sensor sensitivity.

Downward: low rains sensor sensitivity.

Windshield washer system

Safety information WARNING

The washer fluid can freeze onto the window at low temperatures and obstruct the view. There is a risk of an accident. Only use the washer systems, if the washer fluid cannot freeze. Use antifreeze, if needed.

A NOTE

When the washer fluid reservoir is empty, the wash pump cannot work as intended.

There is a risk of property damage. Do not use the washer system when the washer fluid reservoir is empty. ◀

Cleaning



Pull the lever.

The system sprays washer fluid on the windshield and activates the wipers briefly.

Windshield washer nozzles

The windshield washer nozzles are automatically heated while standby state is switched on.

Fold-away position of the wipers

Concept

The wipers can be folded away from the windshield in the fold-away position.

General information

Important, e.g., when changing the wiper blades or when folding out under frosty conditions.

Safety information WARNING

If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of property damage. Make sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.

NOTE

If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of property damage. Defrost the windshield prior to switching the wipers on. ◄

Folding away the wipers

1. Turn on standby state.

Press and hold the wiper level down, until the wipers stop in a close to vertical position.



Fold the wipers all the way away from the windshield.



Folding down the wipers

After the wipers are folded back down, the wiper system must be reactivated.

- Fold the wipers back down onto the windshield
- 2. Switch on drive-ready state and press and hold the wiper lever down again.
- 3. Wipers return to their resting position and are ready again for operation.

Washer fluid

General information

All washer nozzles are supplied from one reservoir.

Use a mixture of tap water and windshield washer concentrate. If desired, a windshield

washer concentrate containing antifreeze can be used.

Recommended minimum fill quantity: 0.2 US gal/1 liter.

Safety information

WARNING

Some antifreeze agents can contain harmful substances and are flammable. There is a risk of fire and a risk of injury. Observe the instructions on the containers. Keep antifreeze away from ignition sources. Do not refill operating materials into different bottles. Store operating materials out of reach of children.

United States: The washer fluid mixture ratio is regulated by the U.S. EPA and many individual states; do not exceed the allowable washer fluid dilution ratio limits that apply. Follow the usage instructions on the washer fluid container.

Use of BMW's Windshield Washer Concentrate or the equivalent is recommended. ◀

I WARNING

Washer fluid can ignite and catch fire on contact with hot engine parts. There is a risk of injury or risk of property damage. Only add washer fluid when the engine is cooled down. Next, fully close the lid of the washer fluid reservoir.

NOTE

Silicon-containing additives in the washer fluid for the water-repelling effect on the windows can lead to damage to the washing system. There is a risk of property damage. Do not add silicon-containing additives to the washer fluid.

NOTE

Mixing different windshield washer concentrates or antifreeze agents can damage the washing system. There is a risk of property damage. Do not mix different windshield washer concentrates or antifreeze agents. Ob-

serve the information and mixing ratios provided on the containers. ◀

Overview



The washer fluid reservoir is located in the engine compartment.

Malfunction

The use of undiluted windshield washer concentrate or alcohol-based antifreeze can lead to incorrect readings at temperatures below +5 °F/-15 °C.

Steptronic transmission

Concept

The Steptronic transmission combines the functions of an automatic transmission with the possibility of manual shifting, if needed.

Safety information

↑ WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, observe the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.

> On uphill grades or on a downhill slope, also secure the vehicle, e.g., with a wheel chock.◄

Selector lever positions

Drive mode D

Selector lever position for normal vehicle operation. All gears for forward travel are activated automatically.

Reverse R

Engage selector lever position R only when the vehicle is stationary.

Neutral N

The vehicle may be pushed or roll without engine power in selector lever position N, for instance in vehicle washes, refer to page 309.

Parking position P

Selector level position, for instance for parking the vehicle. The transmission blocks the drive wheels in selector lever position P.

Engage selector lever position P only when the vehicle is stationary.

Selector lever position P is engaged automatically in the following situations:

- ▶ After drive-ready state is switched off and selector lever position R or D is engaged.
- ▶ If, with the vehicle stationary and the selector lever in position D or R, the driver's safety belt unbuckled, the driver's door is opened, and the brake pedal is not depressed.

Engaging selector lever positions

General information

To prevent the vehicle from creeping after you select a drive mode, maintain pressure on the brake pedal until you are ready to start.

Functional requirements

Only when the drive-ready state is switched on and the brake pedal is depressed is it possible to change from selector lever position P to another selector lever position.

Engaging selector lever position D, N, R

A selector lever lock prevents the following faulty operation:

- Unintentional shifting into selector lever position R.
- Unintentional shifting from selector lever position P into another selector lever position.
- Press and hold the button to release the selector lever lock.



 With the driver's safety belt fastened, briefly push the selector lever in the desired direction, past a resistance point, if needed. The selector lever automatically returns to the center position when released.



Engaging selector lever position P



Press button P.

Kickdown

Kickdown is used to achieve maximum driving performance.

Step on the accelerator pedal beyond the resistance point at the full throttle position.

Sport program M/S

Concept

The shifting points and shifting times in the Sport program are designed for a sportier driving style. The transmission, for instance shifts up later and the shifting times are shorter.

Activating the sport program



Press the selector lever to the left out of selector lever position D.

The engaged gear is displayed in the instrument cluster, for instance S1.

The sport program of the transmission is activated.

Ending the Sport program

Push the selector lever to the right.

D is displayed in the instrument cluster.

Manual mode M/S

Concept

Manual gear-shifting is possible in manual mode.

Activating manual mode



Press the selector lever to the left out of selector lever position D, arrow 1. Next, push the selector lever forward or pull it backward, arrow 2.

Manual mode becomes active and the gear is changed.

The engaged gear is displayed in the instrument cluster, for instance M1.

Shifting

To shift down: press the selector lever forward.

To shift up: pull the selector lever rearwards.

The transmission continues shifting automatically in certain situations, for instance when speed limits are reached.

Steptronic Sport transmission: prevent automatic upshifting in M/S manual mode

If driving mode SPORT, refer to page 113, is selected, the Steptronic Sport transmission does not automatically upshift in M/S manual mode once the maximum speed is reached.

In addition, there is no downshifting for kick-down.

Ending the manual mode

Push the selector lever to the right.

D is displayed in the instrument cluster.

Shift paddles

Concept

The shift paddles on the steering wheel allow you to shift gears quickly while keeping both hands on the steering wheel.

General information

Shifting

The vehicle only shifts at suitable engine and road speeds.

Switching into manual mode

In selector lever position S, actuating a shift paddle switches into manual mode permanently.

In selector lever position D, actuating a shift paddle switches into manual mode temporarily.

Switching into automatic mode

In selector lever position D, after conservative driving for a certain amount of time in manual mode or if there has been no acceleration or shifting of the shift paddles within a certain amount of time, the transmission switches back to automatic mode.

It is possible to switch into the automatic mode as follows:

- Pull and hold right shift paddle.
- ▶ In addition to the briefly pulled right shift paddle, briefly pull the left shift paddle.

Steptronic Sport transmission

With the respective transmission version, the lowest possible gear can be selected by simultaneously operating the kickdown and the left shift paddles. This is not possible by switching briefly via the shift paddles from selector lever position D to manual mode.

Shifting



- To shift up: briefly pull right shift paddle.
- ▶ To shift down: briefly pull left shift paddle.
- The lowest possible gear can be selected by pulling and holding the left shift paddle.

The selected gear is briefly displayed in the instrument cluster, followed by the current gear.

Displays in the instrument cluster



The selector lever position is displayed, for example P.

Electronic unlocking of the transmission lock

General information

Electronically unlock the transmission lock to maneuver vehicle from a danger area.

Unlocking is possible, if the starter can spin the engine.

Before unlocking the transmission lock, set the parking brake to prevent the vehicle from rolling away.

Engaging selector lever position N

- 1. Press and hold down brake pedal.
- Press the Start/Stop button. The starter must audibly start. Hold the Start/Stop button pressed.
- With your free hand, press the button on the selector lever, arrow 1, and press the selector lever into selector lever position N and hold, arrow N, until selector lever position N is displayed in the instrument cluster.

A Check Control message is displayed.



- Release Start/Stop button and selector lever.
- Release brake, as soon as the starter stops.
- Maneuver the vehicle from the danger area and secure it against moving on its own.

For additional information, see the chapter on tow-starting and towing, refer to page 306.

Launch Control

Concept

Launch Control enables optimum acceleration on surfaces with good traction under dry surrounding conditions.

General information

The use of Launch Control causes premature component wear since this function represents a very heavy load for the vehicle.

Do not use Launch Control during the break-in, refer to page 242, period.

Do not steer the steering wheel when driving off with Launch Control.

Functional requirements

Launch Control is available when the engine is warmed up, that is, after uninterrupted driving of at least 6 miles/10 km.

Start with launch control

- 1. Switch on drive-ready state.
- 2. Press button.

TRACTION is displayed in the instrument cluster and the indicator light for DSC OFF lights up.

- Engage selector lever position S.
- 4. With the left foot, forcefully press down on the brake.
- 5. Press and hold down the accelerator pedal beyond the resistance point at the full throttle position, kickdown.
 - A flag symbol is displayed in the instrument cluster.
- 6. The starting engine speed adjusts. Within 3 seconds, release the brake.

Repeated use during a trip

After Launch Control was used, the transmission must cool down for approx. 5 minutes, before Launch Control can be used again. Launch Control adjusts to the surrounding conditions, when used again.

After using Launch Control

To increase vehicle stability, activate DSC Dynamic Stability Control again as soon as possible.

System limits

An experienced driver may be able to achieve better acceleration values in DSC OFF mode.

Driving Dynamics Control

Concept

The Driving Dynamics Control influences the driving dynamics properties of the vehicle. The vehicle can be adjusted depending on the situation using various driving modes.

General information

The following systems are affected:

- Engine characteristics.
- Steptronic transmission.
- Dynamic Damping Control.
- Adaptive Drive.
- Active roll stabilization.
- Integral Active Steering.
- Display in the instrument cluster.
- Cruise control.
- Backrest width for comfort seats.

When the drive-ready state is switched on, the COMFORT or ECO PRO driving mode is selected automatically, depending on the equipment.

Overview



Displays in the instrument cluster



The selected driving mode is displayed in the instrument cluster.

Driving modes

Button	Driving mode	Configuration
SOUR BODY COMON CEMO	SPORT SPORT PLUS	INDIVIDUAL
	COMFORT	
	ECO PRO	INDIVIDUAL
	ADAPTIVE	

Driving modes in detail

COMFORT

Concept

Balanced tuning between dynamic and consumption-optimized driving.

Switching on



Press button repeatedly until COM-FORT is displayed in the instrument

SPORT

Concept

Dynamic tuning for higher agility.

Switching on



Press button repeatedly until SPORT is displayed in the instrument cluster.

SPORT INDIVIDUAL

Concept

Individual settings can be adjusted in the SPORT INDIVIDUAL driving mode.

Configuration

Usina iDrive:

- 1. "My Vehicle"
- "Vehicle settings"
- 3. If necessary, "Driving Experience Control"
- 4. "Configure SPORT INDIVIDUAL"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

Reset SPORT INDIVIDUAL to the standard settings:

"Reset to SPORT STANDARD".

SPORT PLUS

Concept

Dynamic tuning for maximum agility with optimized chassis and suspension and adjusted drive.

Switching on



Press the button repeatedly until SPORT PLUS is displayed in the instrument cluster.

ECO PRO

Concept

Consumption-optimized tuning.

Switching on



Press button. ECO PRO is displayed in the instrument cluster.

ECO PRO INDIVIDUAL

Concept

Individual settings can be adjusted in the ECO PRO INDIVIDUAL driving mode.

Configuration

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Driving Experience Control"
- 4. "Configure ECO PRO INDIVIDUAL"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

Reset ECO PRO INDIVIDUAL to the standard settings:

"Reset to ECO PRO STANDARD".

ADAPTIVE

Concept

Comfort-oriented driving mode, whose tuning is automatically adjusted to the driving situation and driving style.

If the navigation system is active, upcoming road sections are considered.

Switching on



Press button. ADAPTIVE is displayed in the instrument cluster.

INDIVIDUAL configuration

General information

The individual configuration of the driving mode is stored for the active driver profile. The last set configuration is activated directly when the driving mode is called up again.

Activating configuration of the driving mode

Press button for the desired driving mode several times.

Displays

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.


Instrument cluster

General information

The display change can be deactivated via iDrive.

Some of the displays in the instrument cluster may differ from the way they are shown in this Owner's Manual.

Overview

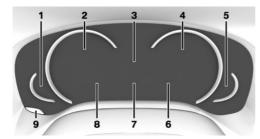

- 1 Fuel gauge 119 Instrument cluster with enhanced features: range 121
- 2 Speedometer3 Time 121
- External temperature 121

 Driver assistance system displays

 Service requirements 121

- 4 Instrument cluster with enhanced features:
 - Tachometer 120
 - Instrument cluster with enhanced features: ECO PRO displays 247
- 5 Engine temperature 120
- 6 Navigation display.Gear display
 - Status, Driving Dynamics Control 112
- 7 Messages, for instance Check ControlOnboard computer 125
- 8 Driver assistance system displays Speed Limit Info 123 Instrument cluster without enhanced features; range 121
- 9 Reset miles 125

Adjusting the view

Concept

Depending on the equipment, the instrument cluster can be set to three different operating modes in addition to the driving mode.

Settings

Using iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"
- Select the desired setting.
 - "STANDARD": all displays on the instrument cluster are active.
 - "REDUCED" all displays on the instrument cluster are reduced to the essential.

"INDIVIDUAL": all displays on the instrument cluster are active. Individual displays can be individually configured.

Configuring INDIVIDUAL

- Driving mode display": when the driving mode is switched into ECO PRO or SPORT. the instrument cluster automatically switches into the respective view.
- "Speed limit exceeded": if the speed recognized by Speed Limit Info is exceeded, the exceeded range is marked red in the speedometer.
- Instrument cluster with enhanced features: "Magnifier function": the current speed is shown enlarged in the speedometer.

Check Control

Concept

The Check Control system monitors functions in the vehicle and notifies you of malfunctions in the monitored systems.

General information

A Check Control message is displayed as a combination of indicator or warning lights and SMS text messages in the instrument cluster and, if applicable, in the Head-up Display.

In addition, an acoustic signal may sound and an SMS text message may appear on the Control Display.

Indicator/warning lights

Concept

Indicator/warning lights in the instrument cluster display the status of some functions in the vehicle and indicate when a malfunction is present in the monitored systems.

General information

The indicator and warning lights can light up in a variety of combinations and colors.

Several of the lamps are checked for proper functioning and light up temporarily when drive-ready state is switched on.

Red lights

Safety belt reminder



Indicator lamp flashes or is illuminated: safety belt on the driver or passenger side is not buckled. The safety belt re-

minder can also be activated if objects are placed on the front passenger seat.

Make sure that the safety belts are positioned correctly.

Airbag system



Airbag system and belt tensioner are not working.

Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.

Parking brake



The parking brake is set.

Release the parking brake, refer to page 101.

Brake system



Braking system impaired. Continue to drive moderately.



Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.

Yellow lights

Anti-lock Braking System ABS



Braking force boost may not be working. Avoid abrupt braking. Take the longer braking distance into account.



ABS Have the system immediately checked by a dealer's service center or another

qualified service center or repair shop.

DSC Dynamic Stability Control



The indicator light flashes: DSC controls the drive and braking forces. The vehicle is stabilized. Reduce speed and

adapt driving style to the driving circumstances.

The indicator light lights up: DSC has malfunctioned.

Have the system immediately checked by a dealer's service center or another qualified service center or repair shop.

DSC Dynamic Stability Control, refer to page 167.

DSC Dynamic Stability Control is deactivated or DTC Dynamic Traction Control is activated



DSC Dynamic Stability Control is deactivated or DTC Dynamic Traction Control is activated.

DSC Dynamic Stability Control, refer to page 167, and DTC Dynamic Traction Control, refer to page 168.

Flat Tire Monitor FTM



The Flat Tire Monitor signals a loss of tire inflation pressure in a tire.

Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.

Flat Tire Monitor, refer to page 279.

Tire Pressure Monitor TPM



The indicator light illuminates.

The Tire Pressure Monitor reports a low tire inflation pressure or a flat tire.

Observe the information in the Check Control message.

The indicator light flashes and then illuminates continuously.

No flat tire or loss of tire inflation pressure can be detected.

- Interference caused by systems or devices with the same radio frequency: after leaving the area of the interference, the system automatically becomes active again.
- TPM was unable to complete the reset. Reset the system again.
- A wheel without TPM electronics is mounted: have it checked by a dealer's service center or another qualified service center or repair shop as needed.
- Malfunction: have the system checked by a dealer's service center or another qualified service center or repair shop.

Tire Pressure Monitor, refer to page 273.

Steering system



Steering system may not be working.

Have the steering system checked by a dealer's service center or another

qualified service center or repair shop.

Emissions



- The warning light lights up: Emissions are deteriorating. Have the vehicle checked as soon as possible.
- The warning light flashes under certain circumstances:
 - This indicates that there is excessive misfiring in the engine.

Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.

Socket for Onboard Diagnosis, refer to page 295.

Green lights

Turn signal



Turn signal switched on.

Unusually rapid flashing of the indicator light indicates that a turn signal bulb

has failed.

Turn signal, refer to page 103.

Parking lights, headlight

€DŒ

Parking lights or headlights are activated.

Parking light/low beams, automatic headlight control, refer to page 131.

Lane departure warning



The indicator light lights up: the system is activated At least one lane marking was detected and warnings can be is-

sued.

Lane departure warning, refer to page 154.

Front fog lights



Front fog lights are activated. Front fog lights, refer to page 134.

High-beam Assistant



High-beam Assistant is switched on. High beams are switched on and off automatically depending on the traffic situation.

High-beam Assistant, refer to page 133.

Automatic Hold



Automatic Hold is activated. The vehicle is automatically held in place when it is stationary.

Automatic Hold, refer to page 102.

Blue lights


High beams



High beams are activated.

High beams, refer to page 104.

Hiding Check Control messages

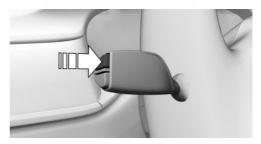

Press and hold button on signal lever.

Continuous display

Some Check Control messages are displayed continuously and are not cleared until the malfunction is eliminated. If several malfunctions occur at once, the messages are displayed consecutively.

These messages can be hidden for approx. 8 seconds. After this time, they are displayed again automatically.

Temporary display

Other Check Control messages are hidden automatically after approx. 20 seconds. They are stored and can be displayed again later.

Displaying stored Check Control messages

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- ∴ Check Control
- 4. Select the SMS text message.

Display

Check Control



At least one Check Control message is displayed or is stored.

SMS text messages

SMS text messages in combination with a symbol in the instrument cluster explain a Check Control message and the meaning of the indicator and warning lights.

Supplementary SMS text messages

Additional information, such as the reason for an error or malfunction or the required action, can be called up via Check Control.

With urgent messages the added text will be automatically displayed on the Control Display.

Further help

Depending on the Check Control message, further help can be selected.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- ↑ "Check Control"
- Select the desired text message.
- Select the desired setting.
 - "Owner's Manual"

Display additional information about the Check Control message in the Integrated Owner's Manual.

- "Service request"
 - Contact a dealer's service center or another qualified service center or repair shop.
- "BMW Roadside Assistance"
 Contact Roadside Assistance.

Messages after trip completion

Special messages displayed while driving are displayed again after drive-ready state is switched off.

Fuel gauge

Instrument cluster without enhanced features



Vehicle tilt position may cause the display to vary.

An arrow beside the fuel pump symbol shows which side of the vehicle the fuel filler flap is on.

Information on refueling, refer to page 256.

Instrument cluster with enhanced features



Vehicle tilt position may cause the display to vary.

The current range is displayed as numerical value.

An arrow beside the fuel pump symbol shows which side of the vehicle the fuel filler flap is on.

Information on refueling, refer to page 256.



The yellow indicator lamp illuminates, once the fuel reserve is reached.

Tachometer

General information

Always avoid engine speeds in the red warning field. In this range, the fuel supply is reduced to protect the engine.

Shift point indicator

Concept

If the vehicle is equipped accordingly, the shift point indicator indicates the maximum shift point at which the best possible acceleration can be achieved.

Functional requirement

Shift lights are shown when the SPORT or SPORT PLUS driving program is activated.

Switching on shift lights

Steptronic Sport transmission:

- Select SPORT or SPORT PLUS using Driving Dynamics Control.
- 2. Activate the M/S manual mode of the transmission.

Manual transmission:

Select SPORT or SPORT PLUS using Driving Dynamics Control.

Display



 Current engine speed is displayed in the tachometer.

- Arrow 1: successive yellow illuminated fields indicate an increase in the speed.
- Arrow 2: successive orange illuminated fields indicate the upcoming shift moment.
- Arrow 3: the field lights up red. Do not wait any further to shift.

When the maximum possible speed is reached, the entire display flashes. When the maximum speed is exceeded, the supply of fuel is interrupted in order to protect the engine.

Standby state and driveready state



The letters OFF in the tachometer indicate that drive-ready state is switched off and standby state is switched on.



The letters READY in the tachometer indicate that the driveready state is switched on.

For further information, see Idle state, standby state, and drive-ready state, refer to page 19.

Engine temperature



- Cold engine: the pointer is at the low temperature end.
 Drive at moderate engine and vehicle speeds.
- Normal operating temperature: the pointer is in the middle or in the lower half of the temperature display.
- Hot engine: the pointer is at the high end of the temperature range. A Check Control message is also displayed.



A red indicator lamp is displayed.

Check the coolant level, refer to page 292.

External temperature

№ WARNING

Even at temperatures above +37 °F/+3 °C there can be a risk of icy roads, e.g., on bridges or shady sections of road. There is a risk of an accident. Adjust your driving style to the weather conditions at low temperatures. ◀

If the indicator drops to +37 $^{\circ}\text{F/+3}$ $^{\circ}\text{C}$ or lower, a signal sounds.

A Check Control message is displayed.

There is an increased risk of ice on roads.

Time

The time is displayed in the instrument cluster. Setting the time and time format, refer to page 36.

Range

Concept

The range indicates the distance that can still be covered with the current fuel level.

General information

The estimated range available with the remaining fuel is permanently displayed in the instrument cluster.

With a low remaining range, a Check Control message is briefly displayed. With a dynamic driving style, e.g., taking curves aggressively, the engine function is not always ensured.

The Check Control message appears continuously below a range of approx. 30 miles/50 km.

Safety information

 Λ

NOTE

With a range of less than 30 miles/50 km it is possible that the engine will no longer have sufficient fuel. Engine functions are not ensured anymore. There is a risk of property damage. Refuel promptly.◀

Display

Instrument cluster without enhanced features



The current range is displayed as numerical value at the bottom of the speedometer.

Instrument cluster with enhanced features



The current range is displayed as numerical value next to the fuel gauge.

Service requirements

Concept

The function displays the service requirements and the corresponding maintenance scopes.

General information

After switching on drive-ready state, the instrument cluster briefly displays available driving distance or time to the next scheduled maintenance.

A service advisor can read out the current service requirements from your remote control.

Some information regarding the service requirements can also be shown on the remote control with display.

Display

Detailed information on service requirements

More information on the scope of service required can be displayed on the Control Display.

Via iDrive:

- "My Vehicle"
- "Vehicle status"
- 3. Service required"

Required maintenance procedures and legally mandated inspections are displayed.

Select an entry to call up detailed information.

Symbols

Sym- D bols

Description

OK

No service is currently required.



The deadline for scheduled maintenance or a legally mandated inspection is approaching.



The service deadline has already passed.

Entering appointment dates

Enter the dates for the required vehicle inspections.

Make sure that the vehicle's date and time are set correctly.

Via iDrive:

- "My Vehicle"
- 2. "Vehicle status"
- 3. Service required"
- 4. "Vehicle inspection"
- "Date:"
- 6. Select the desired setting.
- 7. Confirm.

The entered date is stored.

Automatic Service Request

Data regarding the service status or legally mandated vehicle inspections is automatically transmitted to your dealer's service center before a service due date.

You can check when your dealer's service center was notified.

Via iDrive:

- 1. "My Vehicle"
- "Vehicle status"
- 3. V "Teleservice Call"

Gear shift indicator

Concept

The system recommends the most fuel efficient gear for the current driving situation.

General information

The gear shift indicator is active in the manual mode of the Steptronic transmission.

Steptronic transmission: displaying

Suggestions to shift gear up or down are displayed in the instrument cluster.

On vehicles without a gear shift indicator, the engaged gear is displayed.

Example Description Fuel efficient gear is set. Shift into fuel efficient gear.

Speed Limit Info

Speed Limit Info

Concept

Speed Limit Info shows the current maximum permitted speed in the instrument cluster.

General information

The camera in the area of the interior mirror detects traffic signs at the edge of the road as well as variable overhead sign posts.

Traffic signs with extra symbols, for instance for nighttime conditions, are considered and compared with the vehicle's onboard data, such as for the set time. The traffic sign will then be either displayed or ignored depending on the situation.


The system takes into account the information stored in the navigation system and also displays speed limits present on routes without signs.

Safety information WARNING

The system does not release from the personal responsibility to correctly assess visibility and traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

Overview

Camera

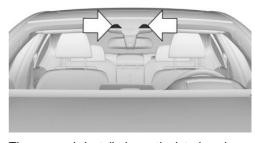

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

Display

General information

Speed Limit Info is displayed in the instrument cluster and, if applicable, in the Head-up Display.

Adjusting the display

The Speed Limit Info displays are shown or hidden via the operating mode of the instrument cluster.

The Speed Limit Info is displayed in the following operating modes: "STANDARD" or "INDIVIDUAL"

Speed Limit Info is not displayed in the following operating mode: "REDUCED"

Adjusting the operating mode of the instrument cluster, refer to page 115.

Speed Limit Info

75_{mph}

Current speed limit.



Speed Limit Info not available.

System limits

In the following situations, the system may not be fully functional and may provide incorrect information or, depending on the vehicle equipment, may issue either an incorrect wrong way warning or fail to issue a wrong way warning at all:

- ▶ In heavy fog, rain or snowfall.
- When signs are fully or partially concealed by objects, stickers or paint.
- When driving very close to the vehicle in front of you.
- When driving toward bright lights or strong reflections.
- When the windshield in front of the interior mirror is fogged over, dirty or covered by a sticker, etc.
- In the event of incorrect detection by the camera.
- If the speed limits or road data stored in the navigation system are incorrect.
- ▶ If the speed limits vary with the time of day and the day of the week.
- In areas not covered by the navigation system.
- When roads differ from the navigation, such as due to changes in road routing.
- In case of electronic traffic signs.
- When passing buses or trucks with traffic signs applied to them.
- If the traffic signs are non-conforming.
- During calibration of the camera immediately after vehicle delivery.
- When signs that are valid for a parallel road are detected.

In the presence of country-specific signs and road configurations.

Selection lists

General information

Depending on your vehicle's equipment, the following can be displayed or operated using the buttons and the thumbwheel on the steering wheel as well as the displays in the instrument cluster and the Head-up Display:

- Current audio source.
- Redial phone feature.
- Turn on voice activation system.

Activating a list and adjusting the setting



On the right side of the steering wheel, turn the thumbwheel to activate the corresponding list.

- Turn the thumbwheel and select the desired setting.
- 2. Press the thumbwheel.

Display




Depending on your vehicle's optional features, the list in the instrument cluster can differ from the illustration shown.

Onboard computer in the instrument cluster

Concept

The onboard computer displays different vehicle data in the instrument cluster, such as average values.

Calling up information

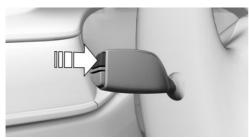

Press and hold button on signal lever.

Pressing the button repeatedly displays additional information.

Information at a glance

The following information can be displayed on the onboard computer:

- Miles and trip miles.
- Fuel consumption display.

- Average fuel consumption and average speed.
- Time of arrival and distance to destination.
 When destination guidance is activated in the navigation system.

Adjusting information for onboard computer

For some information of the onboard computer, it is possible to set whether it can be called up in the instrument cluster.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"
- "Onboard info"
- 6. Select the desired setting.

The setting is stored for the driver profile currently used.

Information in detail

Odometer and trip odometer


Displaying/resetting miles



Press the button.

- When the drive-ready state is switched off, miles and trip miles are displayed.
- When drive-ready state is switched on, the trip odometer is reset.

Display

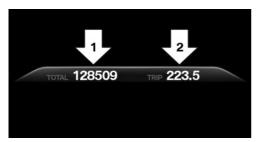

- Odometer, arrow 1.
- Trip odometer, arrow 2.

Fuel consumption display

Concept


During energy recovery, the kinetic energy of the vehicle is converted into electric energy during coasting. The vehicle battery is partially charged and fuel consumption can be reduced.

The current fuel consumption displays the current consumption of fuel. Check whether you are currently driving in an efficient and environmentally-friendly manner.

General information

Energy recovery and current fuel consumption can be displayed as bar displays in the onboard computer.

Display

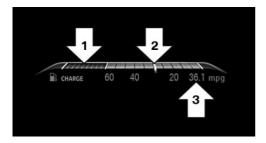

- Energy recovery, arrow 1.
- Current fuel consumption, arrow 2.

- Average fuel consumption, arrow 3.
- Odometer for electric driving, arrow 4.


Average speed and average fuel consumption

General information

Average speed and average fuel consumption are calculated for the distance traveled since the last reset in the onboard computer.

Periods in which the vehicle is parked with the engine manually stopped are not included in the calculation of the average speed.

Resetting average values

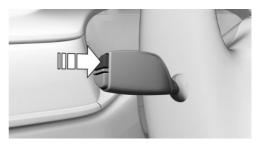

Press and hold button on turn signal lever.

Display




- Average speed, arrow 1.
- Average fuel consumption, arrow 2.

Time of arrival and distance to destination

General information

The estimated time of arrival and the distance remaining to the destination are displayed if a destination is entered in the navigation system before the trip is started.

Display

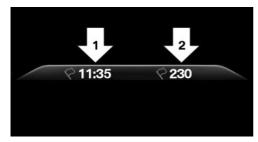

- Time of arrival, arrow 1.
- Distance to destination, arrow 2.

Onboard computer on the Control Display

Concept

The onboard computer displays different vehicle data on the Control Display, such as average values.

General information

Two types of onboard computers are available on the Control Display:

- "Onboard info": Average values, such as the fuel consumption, are displayed. The values can be reset individually.
- "Trip computer": the values deliver an overview of a certain distance and can be reset as often as necessary.

Calling up the onboard computer or trip computer

Via iDrive:

- 1. "My Vehicle"
- 2. "Driving information"
- "Onboard info" or "Trip computer"

Resetting the onboard computer

Via iDrive:

- 1. "My Vehicle"
- 2. "Driving information"
- "Onboard info"
- 4. "Consumption" or "Speed"
- 5. "OK"

Resetting the trip computer

Via iDrive:

- 1. "My Vehicle"
- 2. "Driving information"
- "Trip computer"
- 4. Move the controller to the left, if needed.
 - ▶ "Reset": all values are reset.
 - •+A "Automatic reset": all values are reset approx. 4 hours after the vehicle has come to a standstill.

Sport displays

General information

On the Control Display, the current values for performance and torque can be displayed if the vehicle is appropriately equipped.

Displays

Using iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- "Sport displays"

Speed warning

Concept

A speed limit can be set that when reached will cause a warning to be issued.

General information

The warning is repeated if the vehicle speed drops below the set speed limit once by at least 3 mph/5 km/h.

Displaying, setting or changing the speed warning

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Speed warning"
- 4. "Warning at:"
- 5. Turn the controller until the desired speed is displayed.
- Press the controller.

Activating/deactivating the speed warning

Via iDrive:

- 1. "My Vehicle"
- "Vehicle settings"
- "Speed warning"
- 4. "Speed warning"
- 5. Press the controller.

Setting your current speed as the speed warning

Via iDrive:

- 1. "My Vehicle"
- "Vehicle settings"
- 3. "Speed warning"
- 4. "Select current speed"
- 5. Press the controller.

Vehicle status

General information

The status can be displayed and actions performed for several systems.

Opening the vehicle status

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"

Information at a glance

- ▷ (!) "Flat Tire Monitor": Status of the Flat Tire Monitor, refer to page 279.
- ▶ Resetting the Tire Pressure Monitor, refer to page 275.
- "Engine oil level": Electronic engine oil level check, refer to page 288.
- Service required": Displaying service requirements, refer to page 121.
- ▶ "Teleservice Call": Service Request.

Head-up Display

Concept

This system projects important information into the driver's field of vision, e.g., the speed.

The driver can get information without averting his or her eyes from the road.

General information

Read the information for cleaning the Head-up Display, refer to page 312.

Overview



Switching on/off

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Head-Up Display"
- 5. "Head-Up Display"

Display

Overview

The following information is displayed on the Head-up Display:

- Speed.
- Navigation system.
- Check Control messages.
- Selection list in the instrument cluster.
- Driver assistance systems.

Some of this information is only displayed briefly as needed.

Selecting displays in the Head-up Display

Via iDrive:

- "Mv Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Head-Up Display"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

View

Three different views are available for the Head-up Display:

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Head-Up Display"
- 5. Select the desired setting.
 - "STANDARD": all displays in the Headup Display are active.
 - "REDUCED": the displays in the Headup Display are reduced to the minimum.
 - "INDIVIDUAL": all displays in the Headup Display are active. Individual displays, e.g., Check Control messages, can be individually configured.

The setting is stored for the driver profile currently used.

Setting the brightness

The brightness is automatically adjusted to the ambient brightness.

The basic setting can be adjusted.

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- "Displays"
- 4. "Head-Up Display"
- 5. "Brightness"
- Turn the controller until the desired brightness is set.
- 7. Press the controller.

When the low beams are activated, the brightness of the Head-up Display can be additionally influenced using the instrument lighting.

Adjusting the height

Using iDrive:

- "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Head-Up Display"
- 5. "Height"
- Turn the controller until the desired height is reached.
- Press the controller.

The setting is stored for the driver profile currently used.

The height of the Head-up Display can also be stored using the memory function, refer to page 89.

Setting the rotation

The screen of the Head-up Display can be rotated around its own axis.

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Displays"
- "Head-Up Display"
- 5. "Rotation"
- Turn the controller until the desired setting is selected.
- Press the controller.

Visibility of the display

The visibility of the displays in the Head-up Display is influenced by the following factors:

- Certain sitting positions.
- Objects on the cover of the Head-up Display.
- Sunglasses with certain polarization filters.
- Wet roads.
- Unfavorable light conditions.

If the image is distorted, have the basic settings checked by a dealer's service center or another qualified service center or repair shop.

Special windshield

The windshield is part of the system.

The shape of the windshield makes it possible to display a precise image.

A film in the windshield prevents double images from being generated.

For this reason, it is strongly suggested to have the special windshield replaced by a dealer's service center or another qualified service center or repair shop, if necessary.

Lights

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Overview

Switches in the vehicle



The light switch element is located next to the steering wheel.

Symbol	Function
初	Front fog lights
0	Lights off Daytime running lights
∋D O€	Parking lights
EC	Automatic headlight control Adaptive Light Control

Symbol	Function
 ■D	Low beams
: از ع	Instrument lighting
P≑	Right roadside parking light
∋P	Left roadside parking light

Parking lights, cornering lights and roadside parking lights

General information

Position of switch: 0, ▮D, ▮D

If the driver's door is opened when the driveready state is switched off, the exterior lighting is automatically switched off.

Parking lights

Position of switch: ED 05

The vehicle is illuminated on all sides.

Do not use the parking lights for extended periods; otherwise, they might drain the battery and it would then be impossible to switch on drive-ready state.

Low beams

Position of switch: **ID**

The low beams illuminate when drive-ready state is switched on.

Roadside parking lights

When the vehicle is parked, a one-sided roadside parking light can be switched on.

ordo partir guit carrido ottitorios ciri		
Button	Function	
D=	Right roadside parking light on/off	



Welcome lights and headlight courtesy delay feature

Welcome lights

General information

Depending on the equipment, the exterior lighting of the vehicle can be set individually.

Activating/deactivating

Position of switch: **■D** , **■D**

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. Select the desired setting.
 - "Welcome lights"
 Parking lights and tail lights are switched on for a limited time.

Headlight courtesy delay feature.

General information

The low beams stay lit for a particular time if the high beams are switched on after standby state is switched on.

Setting the duration

Usina iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. "Pathway lighting"
- 6. Select the desired setting.

Automatic headlight control

Concept

The low beams are switched on and off automatically depending on the ambient brightness, for instance in tunnels, in twilight or if there is precipitation.

General information

A blue sky with the sun low on the horizon can cause the lights to be switched on.

Activating

Position of switch:

The indicator light in the instrument cluster is illuminated when the low beams are switched on.

System limits

The automatic headlight control cannot serve as a substitute for your personal judgment of lighting conditions.

For example, the sensors are unable to detect fog or hazy weather. To avoid safety risks under these conditions, you should always switch on the lights manually.

Daytime running lights

General information

In some countries, daytime running lights are mandatory, so it may not be possible to switch the daytime running lights off.

Switching on/off

Position of switch: 0, ₹D 0€, ≰C

The daytime running lights light up when drive-ready state is switched on. After drive-ready state is switched off, the parking lights light up in position **DQ**:

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

Adaptive Light Control

Concept

Adaptive Light Control is a variable headlight control system that enables dynamic illumination of the road surface.

General information

Depending on the steering angle and other parameters, the light from the headlight follows the course of the road.

To avoid blinding oncoming traffic, the Adaptive Light Control does not swivel to the driver's side when the vehicle is at a standstill.

Depending on the equipment version, Adaptive Light Control consists of one or several systems:

Cornering light, refer to page 133.

Activating

The Adaptive Light Control is active, when the drive-ready state is switched on.

Cornering light

In tight curves, for instance on mountainous roads or when turning, an additional, cornering light is switched on that lights up the inside of the curve when the vehicle is moving below a certain speed.

The cornering light is automatically switched on depending on the steering angle or the use of turn signals.

When driving in reverse, the cornering lights may be automatically switched on regardless of the steering angle.

Self-leveling headlights

The self-leveling headlights compensate for acceleration and braking operations in order not to blind the oncoming traffic and to achieve optimum illumination of the roadway.

High-beam Assistant

Concept

The high-beam Assistant detects other traffic participants early on and automatically switches the high beams on or off depending on the traffic situation.


General information

The high-beam Assistant ensures that the high beams are switched on, whenever the traffic situation allows. In the low speed range, the high beams are not switched on by the system.

The system responds to light from oncoming traffic and traffic driving ahead of you, and to adequate illumination, for instance in towns and cities.

The high beams can be switched on and off at any time as usual.

Activating/deactivating

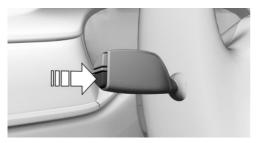

Position of switch: (₹)

Press and hold button on signal lever.



The indicator light in the instrument cluster is illuminated when the low beams are switched on.

The headlights are automatically switched between low beams and high beams.



The blue indicator light in the instrument cluster lights up when the system switches on the high beams.

The high-beam Assistant is deactivated when manually switching the high beams on and off, refer to page 104.

To reactivate the high-beam Assistant, press the button on the turn signal lever.

System limits

The high-beam Assistant cannot serve as a substitute for the driver's personal judgment of when to use the high beams. In situation that require this, therefore switch off manually.

The system is not fully functional in the following situations, and driver intervention may be necessary:

- In very unfavorable weather conditions, such as fog or heavy precipitation.
- When detecting poorly-lit road users such as pedestrians, cyclists, horseback riders

- and wagons; when driving close to train or ship traffic; or at animal crossings.
- In tight curves, on hilltops or in depressions, in cross traffic or half-obscured oncoming traffic on highways.
- In poorly-lit towns and cities or in the presence of highly reflective signs.
- When the windshield in front of the interior mirror is fogged over, dirty or covered with stickers, etc.

Fog lights

Front fog lights

Functional requirement

The low beams must be switched on before switching on the front fog lights.

Switching on/off



Press button.

The green indicator light lights up.

If the automatic headlight control, refer to page 132, is activated, the low beams will come on automatically when you switch on the front fog lights.

When the high beams or headlight flasher are activated, the front fog lights are not switched on.

Instrument lighting

Functional requirement

The parking lights or low beams must be switched on to adjust the brightness.

Settings



Adjust the brightness with the thumbwheel.

Interior lights

General information

Depending on the equipment version, interior lights, footwell lights, entry lights, ambient lighting, and speaker lighting are automatically controlled.

Overview

Buttons in the vehicle





Interior lights



Reading lights

Switching the interior lights on/off



Press button.

To switch off permanently: press the button and hold for approx. 3 seconds.

The interior lights in the rear of the vehicle can be switched on and off independently. The button is located in the rear roofliner.

Switching the reading lights on/off



Press button.

Depending on the vehicle equipment, the reading lights are located next to the interior lights in the front and rear.

Ambient light

General information

Depending on the equipment version, lighting can be adjusted for some lights in the vehicle's interior.

If the ambient light was deactivated via iDrive, it will not be switched on when the vehicle is unlocked

Switching on/off

The ambient light is switched on when the vehicle is unlocked, and switched off when the vehicle is locked.

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Interior lighting"
- 5. "Ambient lighting"

The selected setting is stored for the driver profile currently used.

Selecting color scheme

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Interior lighting"
- 5. "Color"
- Select the desired setting.

Setting the brightness

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Interior lighting"
- 5. "Brightness"
- 6. Select the desired setting.

Dimmed while driving

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Interior lighting"
- 5. "Dimmed while driving"

Some lights of the interior lighting are dimmed when the vehicle is driven in the dark.

The selected setting is stored for the driver profile currently used.

Bowers & Wilkins Diamond Surround Sound System

General information

Some speakers in the vehicle are illuminated. Brightness can be individually set.

If the speakers are muted, speaker lighting will be switched off.

Switching on/off

The speaker lighting is switched on when the vehicle is unlocked, and switched off when the vehicle is locked.

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"

- 4. "Interior lighting"
- 5. "Bowers & Wilkins"

The selected setting is stored for the driver profile currently used.

Setting the brightness

Using iDrive:


- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Interior lighting"
- 5. "Brightness"
- Select the desired setting.

Safety

Vehicle features and options

This chapter describes all standard, countryspecific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Airbags

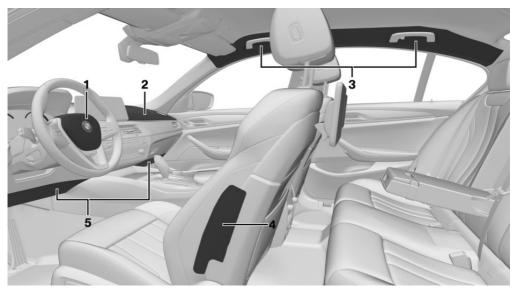

- Front airbag, driver
- Front airbag, front passenger
- Head airbag

- Side airbag
- Knee airbag

Front airbags

Front airbags help protect the driver and the front passenger by responding to frontal impacts in which safety belts alone would not provide adequate protection.

Side airbag

In a lateral impact, the side airbag supports the side of the body in the chest and lap area.

Head airbag

In a lateral impact, the head airbag supports the head.

Ejection Mitigation

The head airbag system is designed as an ejection mitigation countermeasure to reduce the likelihood of ejections of vehicle occupants through side windows during rollovers or side impact events.

Knee airbag

The knee airbag supports the legs in a frontal impact.

Protective action

General information

Airbags are not triggered in every impact situation, e.g., in less severe accidents or rear-end collisions.

Information on optimum effect of the airbags

A WARNING

If the seat position is incorrect or the deployment area of the airbags is impaired, the airbag system cannot provide protection as intended and may cause additional injuries due to triggering. There is a risk of injuries or danger to life. Follow the information on optimum protective effect of the airbag system.◀

- Keep a distance from the airbags.
- Always grasp the steering wheel on the steering wheel rim. Hold your hands at the 3 o'clock and 9 o'clock positions, to keep the risk of injury to your hands or arms as low as possible when the airbag is triggered.
- Make sure that the front passenger is sitting correctly, i.e., keeps his or her feet and legs in the floor area and does not support them on the dashboard.
- Make sure that occupants keep their heads away from the side airbag.

- There should be no additional persons, animals or objects between an airbag and a person.
- Do not use the cover of the front airbag on the front passenger side as a storage area.
- Dashboard and windshield on the front passenger side must stay clear - do not attach adhesive labels or coverings and do not attach brackets or cables, for instance for GPS devices or mobile phones.
- Do not apply adhesive materials to the airbag cover panels, do not cover them or modify them in any way.
- Do not place slip covers, seat cushions or other objects on the front passenger seat that are not specifically suited for seats with integrated side airbags.
- Do not hang pieces of clothing, such as jackets, over the backrests.
- Never modify either the individual components or the wiring in the airbag system.
 This also applies to steering wheel covers, the dashboard, and the seats.
- Do not remove the airbag system.

Even when you follow all instructions very closely, injury from contact with the airbags cannot be fully ruled out in certain situations.

The ignition and inflation noise may lead to short-term and, in most cases, temporary hearing impairment in sensitive occupants.

Vehicle modifications for a person with disabilities may affect the air bag system; therefore, contact BMW Customer Relations or your authorized BMW service center.

Warnings and information on the airbags are also found on the sun visors.

Functional readiness of the airbag system

Safety information

WARNING

Individual components can be hot after triggering of the airbag system. There is a risk of injury. Do not touch individual components. ◀

WARNING

Improperly executed work can lead to failure, malfunction or unintentional triggering of the airbag system. In the case of a malfunction, the airbag system might not trigger as intended in the event of an accident despite respective accident severity. There is a risk of injuries or danger to life. Have the airbag system checked, repaired, dismantled and scrapped by a dealer's service center or another qualified service center or repair shop.

Display in the instrument cluster



When drive-ready state is switched on, the warning lamp in the instrument cluster lights up briefly and thereby in-

dicates the function readiness of the entire airbag system and the belt tensioners.

Malfunction



Warning light does not come on when drive-ready state is switched on.

▶ The warning light lights up continuously.Have the system checked.

Automatic deactivation of the frontseat passenger airbags

Concept

The system reads if the front passenger seat is occupied by measuring the human body's resistance.

Front, knee and side airbag on the front passenger's side are either activated or deactivated.

General information

Before transporting a child on the front passenger seat, refer to the safety notes and instructions for children on the front passenger seat, see Children.

Safety information



WARNING

To ensure the front-seat passenger airbag function, the system must be able to detect whether a person is sitting in the front passenger seat. The entire seat cushion area must be used for this purpose. There is a risk of injuries or danger to life. Make sure that the front passenger keeps his or her feet in the floor area.

Malfunction of the automatic deactivation system

When transporting older children and adults, the front-seat passenger airbags may be deactivated in certain sitting positions. In this case, the indicator lamp for the front-seat passenger airbags lights up.

In this case, change the sitting position so that the front-seat passenger airbags are activated and the indicator lamp goes out.

If it is not possible to activate the airbags, have the person sit in the rear.

To enable correct recognition of the occupied seat cushion

- Do not attach covers, cushions, ball mats or other items to the front passenger seat unless they are specifically determined to be safe for use on the front passenger seat.
- Do not place any electronic devices on the passenger seat if a child restraint system is to be installed on it.

- Do not place objects under the seat that could press against the seat from below.
- No moisture in or on the seat.

Indicator lamp for the front-seat passenger airbags

The indicator lamp for the front-seat passenger airbag in the roofliner indicates the operating state of the front-seat passenger airbag.

The lamp indicates whether the airbags are either activated or deactivated.

After drive-ready state is switched on, the lamp briefly lights up and then indicates whether the airbags are either activated or deactivated.



- The indicator lamp lights up when a child is properly seated in a child restraint fixing system or when the seat is empty. The airbags on the front passenger side are not activated.
- The indicator lamp does not light up when, e.g., a correctly seated person of sufficient size is detected on the seat. The airbags on the front passenger side are activated.

Detected child restraint systems

The system generally detects children seated in a child restraint system, particularly in child restraint systems required by NHTSA at the point in time when the vehicle was manufactured. After installing a child restraint system, make sure that the indicator light for the front-seat passenger airbags lights up. This indicates that the child restraint system has been detected and the front-seat passenger airbags are not activated.

Strength of the driver's and front-seat passenger airbag

The explosive power that activates driver's/ front passenger's airbags very much depends

on the positions of the driver's/front passenger's seat.

To maintain the accuracy of this function over the long term, calibrate the front seats as soon as a respective message appears on the Control Display.

Calibrating the front seats

WARNING

justment. ◀

There is a risk of jamming when moving the seats. There is a risk of injury or risk of property damage. Make sure that the area of movement of the seat is clear prior to any ad-

A corresponding message appears on the Control Display.

- Press the switch and move the respective seat all the way forward.
- 2. Press the switch forward again. The seat still moves forward slightly.
- 3. Readjust the seat to the desired position.

The calibration procedure is completed when the message on the Control Display disappears.

If the message continues to be displayed, repeat the calibration.

If the message does not disappear after a repeat calibration, have the system checked as soon as possible.

Intelligent Safety

Concept

Intelligent Safety enables central operation of the driver assistance system.

General information

Depending on how the vehicle is equipped, Intelligent Safety consists of one or more systems that can help prevent an imminent collision.

- Approach control warning with light braking function, refer to page 142.
- ▶ Evasion assistance, refer to page 146.
- Person warning with City light braking function, refer to page 148.
- Night Vision with pedestrian and animal detection, refer to page 151.
- ▶ Lane departure warning, refer to page 154.
- Active Blind Spot Detection, refer to page 157.
- Side collision warning, refer to page 160.

Safety information

WARNING

Indicators and warnings do not relieve the driver from personal responsibility. Due to system limits, warnings or reactions of the system may not be output or they may be output too late or incorrectly. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

WARNING

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated, e.g., approach control warning with light braking function. There is a risk of an accident. Switch all Intelligent Safety systems off prior to tow-starting/towing.

Overview

Button in the vehicle





Intelligent Safety

Switching on/off

Some Intelligent Safety systems are automatically active after every departure. Some Intelligent Safety systems activate according to the last setting.

Button Status



Button lights up green: all Intelligent Safety systems are switched on.



Button lights up orange: some Intelligent Safety systems are switched off.



Button does not light up: all Intelligent Safety systems are switched off.

Press button:

The menu for the intelligent safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a set-

ting is changed on the menu, all settings of the menu are activated.



Press button repeatedly. The following settings are switched between:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the sub-functions, for instance setting for warning time.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings.

Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button:
All Intelligent Safety systems are switched off.

Approach control warning with light braking function

Concept

The system can help prevent accidents. If an accident cannot be prevented, the system will help reduce the collision speed.

The system sounds a warning before an imminent collision and actuates brakes independently, if needed.

General information

The system is controlled using a camera.

If the vehicle is equipped with a radar sensor, the approach control warning is additionally controlled via the cruise control radar sensor.


Intersection warning when equipped with a radar sensor: in addition, a warning is issued at intersections and junctions if a risk of collision with crossing traffic is detected.

The approach control warning is available even if cruise control has been deactivated.

With the vehicle approaching another vehicle intentionally, the approach control warning and braking are delayed in order to avoid false system reactions.

The system issues a two-phase warning of a possible risk of collision with vehicles at speeds above approx. 3 mph/5 km/h. Time of warnings may vary with the current driving situation.

Detection range

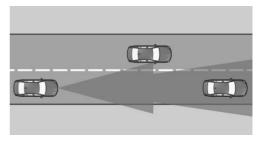

Objects that the system can detect are taken into account.

Intersection warning: the system is also able to detect vehicles crossing your direction of travel when these vehicles enter into the detection range of the system.

Safety information

WARNING

Indicators and warnings do not relieve the driver from personal responsibility. Due to system limits, warnings or reactions of the system may not be output or they may be output too late or incorrectly. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

WARNING

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated, e.g., approach control warning with light braking function. There is a risk of an accident.

Switch all Intelligent Safety systems off prior to tow-starting/towing. ◀

Overview


Button in the vehicle





Intelligent Safety

Camera

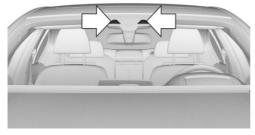

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

With Active Cruise Control: radar sensor



The radar sensor is located in the lower area of the front bumper.

Always keep radar sensor clean and unobstructed.

Switching on/off

Switching on automatically

The system is automatically active after every driving off.

Switching on/off manually

Press button.

The menu for the in

The menu for the intelligent safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.

Press button repeatedly.
The following settings are switched between:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settinas.

Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button. All Intelligent Safety systems are switched off.

Button Status



Button lights up green: all Intelligent Safety systems are switched on.



Button lights up orange: some Intelligent Safety systems are switched off.



Button does not light up: all Intelligent Safety systems are switched off.

Setting the warning time

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Intelligent Safety"
- 4. "Frontal Collision Warn."
- Select the desired setting.

The selected time is stored for the driver profile currently used.

Warning with braking function

Display

A warning symbol appears in the instrument cluster and in the Head-up Display if a collision with a detected vehicle is imminent.

Symbol Measure



Symbol lights up red: prewarning. Brake and increase distance.



Symbol flashes red and an acoustic signal sounds: acute warning.

You are requested to intervene by braking or make an evasive maneuver.



Crossing traffic warning

or

Symbol flashes red and an acoustic signal sounds: acute warning when vehicles cross your direction of



You are requested to intervene by braking or make an evasive maneuver.

Prewarning

This warning is issued, for instance when there is the impending danger of a collision or the distance to the vehicle ahead is too small.

If a prewarning is issued, intervene in the situation yourself.

Acute warning with braking function

Acute warning is displayed in case of the imminent danger of a collision when the vehicle approaches another object at a high differential speed.

If an acute warning is issued, intervene in the situation yourself. If necessary, the system provides assistance, such as with an automatic braking intervention, in a possible risk of collision.

Acute warnings can also be triggered without previous forewarning.

Brake intervention, City light braking function

The warning prompts the driver himself/herself to react. During a warning, the maximum braking force is used when the brake is actuated. Prerequisite is sufficiently quick and hard stepping on the brake pedal.

The system can additionally assist possibly with automatic braking intervention if there is a risk of a collision.

At low speeds the vehicle can be decelerated to a complete stop.

The braking intervention takes place up to approx. 50 mph/80 km/h.

The braking intervention is executed only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

The braking intervention can be interrupted by stepping on the accelerator pedal or by actively moving the steering wheel.

Object detection can be restricted. Observe the limitations of the detection range and functional restrictions.

With radar sensor and Active Cruise Control: braking intervention

The warning prompts the driver himself/herself to react. During a warning, the maximum braking force is used when the brake is actuated. Prerequisite is sufficiently quick and hard stepping on the brake pedal.

The system can assist with automatic braking intervention if there is a risk of a collision.

The braking intervention can bring the vehicle to a complete stop.

The braking intervention is executed only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

Above approx. 130 mph/210 km/h the braking intervention occurs as a brief braking pressure. No automatic delay occurs.

The braking intervention can be interrupted by stepping on the accelerator pedal or by actively moving the steering wheel.

Cross-traffic warning: brake intervention is not performed in the event of cross traffic.

Object detection can be restricted. Observe the limitations of the detection range and functional restrictions.

System limits

Safety information

A

WARNING

The system can react incorrectly or not at all due to the system limits. There is a risk of accidents or risk of property damage. Observe the information regarding the system limits and actively intervene, if needed.

Upper speed limit

If the vehicle speed exceeds approx.

155 mph/250 km/h, the system is deactivated temporarily. As soon as the speed drops back down below this value, the system once again responds according to the setting.

Intersection warning: the vehicle responds to crossing traffic if its own speed is below approx. 50 mph/80 km/h.

Detection range

The system's detection potential is limited.

Thus, a system reaction might not come or might come late.

The following situations may not be detected, for instance:

- Slow moving vehicles when you approach them at high speed.
- Vehicles that suddenly swerve in front of you, or sharply decelerating vehicles.
- Vehicles with an unusual rear appearance.
- > Two-wheeled vehicles ahead of you.
- Intersection warning: crossing vehicles if their speed is higher than your own speed.

Functional limitations

The system may not be fully functional in the following situations:

- In heavy fog, rain, sprayed water or snowfall.
- In tight curves.
- If the driving stability control systems are limited or deactivated, for instance DSC OFF
- If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- ▶ Depending on the equipment: if the radar sensors are dirty or covered.
- ▶ Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.

Warning sensitivity

The more sensitive the warning settings are, such as the warning time, the more warnings are displayed. However, there may also be an excess of premature warnings.

Evasion assistance

Concept


The system supports the driver in making evasive maneuvers in certain situations, such as when obstacles suddenly appear.

General information

The system issues a warning and intervenes to support the driver if a lateral evasive maneuver is possible. Sensors monitor and detect the clearance around the vehicle. If the system identifies space alongside the vehicle, it sup-

ports an evasive maneuver begun by the driver by safely providing targeted steering support.

Detection range

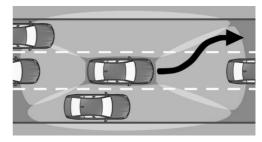

Objects that the system can detect are taken into account.

Safety information

№ WARNING

The system does not release from the personal responsibility to correctly assess visibility and traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

Overview

Radar sensors


The radar sensors are located in the bumpers.



Front center bumper.




Front side bumper.

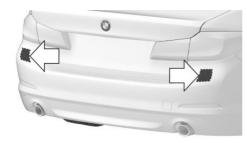

Rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

Camera

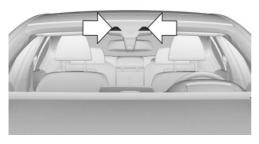

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

Functional requirements

 Approach control warning with light braking function, refer to page 142, is switched on. Sensors detect sufficient clearance around the vehicle.

Switching on/off

The system is automatically active after every driving off.

Warning with evasion support

Display in the instrument cluster

A warning symbol appears in the instrument cluster and in the Head-up Display if a collision with a detected vehicle is imminent.

Symbol Measure



Symbol lights up red: prewarning.

Brake and increase distance.



Symbol flashes red and an acoustic signal sounds: acute warning.

You are requested to intervene by braking or make an evasive maneuver.

Acute warning with evasion support

Acute warning is displayed in case of the imminent danger of a collision when the vehicle approaches another object at a high differential speed.

If an acute warning is issued, intervene in the situation yourself. If there is a risk of collision, the driver's evasive maneuvers are supported by the system.

Acute warnings can also be triggered without previous forewarning.

System limits

Safety information

WARNING

The system can react incorrectly or not at all due to the system limits. There is a risk of accidents or risk of property damage. Observe

the information regarding the system limits and actively intervene, if needed. ◀

Detection range

The system's detection potential is limited.

Thus, a system reaction might not come or might come late.

E.g., the following situations may not be detected:

- Slow moving vehicles when you approach them at high speed.
- Vehicles that suddenly swerve in front of you, or sharply decelerating vehicles.
- Vehicles with an unusual rear appearance.
- Two-wheeled vehicles ahead of you.

Functional limitations

The system may not be fully functional in the following situations:

- In heavy fog, rain, sprayed water or snowfall.
- In tight curves.
- If the driving stability control systems are limited or deactivated, for instance DSC OFF.
- If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- ▶ Depending on the equipment: if the radar sensors are dirty or covered.
- Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.
- ▶ If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.

Person warning with City light braking function

Concept

The system can help prevent accidents with pedestrians.

When driving at city speeds, the system will issue a warning if there is imminent risk of a collision with pedestrians, and support with a braking function.


General information

The system is active at speeds of approx. 6 mph/10 km/h up to approx. 35 mph/60 km/h.

The system reacts to people who are within the detection range of the system.

The camera in the area of the interior mirror controls the system.

Detection range

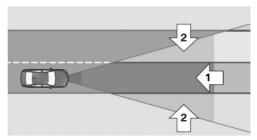

The detection area in front of the vehicle is divided into two areas:

- Central area, arrow 1, directly in front of the vehicle.
- Expanded area, arrow 2, to the right and left of the central area.

A collision is imminent if pedestrians are located within the central area. A warning is issued about pedestrians who are located within the extended area only if they are moving in the direction of the central area.

Safety information

WARNING

Indicators and warnings do not relieve the driver from personal responsibility. Due to system limits, warnings or reactions of the system may not be output or they may be output too late or incorrectly. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

WARNING

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated, e.g., approach control warning with light braking function. There is a risk of an accident. Switch all Intelligent Safety systems off prior to tow-starting/towing.

Overview


Button in the vehicle



8

Intelligent Safety

Camera

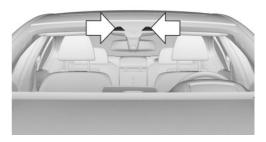

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

Switching on/off

Switching on automatically

The system is automatically active after every driving off.

Switching on/off manually

8

Press button.

The menu for the intelligent safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.

Press button repeatedly.

The following settings are switched between:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings.

Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button.

All Intelligent Safety systems are switched off.

Button Status



Button lights up green: all Intelligent Safety systems are switched on.



Button lights up orange: some Intelligent Safety systems are switched off.



Button does not light up: all Intelligent Safety systems are switched off.

Warning with braking function

Display

If a collision with a person detected in this way is imminent, a warning symbol appears on the instrument cluster and in the Head-up Display.



The red symbol is displayed and a signal sounds.



If the vehicle is equipped accordingly, a red warning triangle alternatively lights up in the instrument cluster.

Intervene immediately by braking or make an evasive maneuver.

Braking intervention

The warning prompts the driver himself/herself to react. During a warning, the maximum braking force is used when the brake is actuated. Prerequisite for the brake booster is sufficiently quick and hard stepping on the brake pedal.

The system can additionally assist with braking intervention if there is a risk of a collision.

At low speeds the vehicle can be decelerated to a complete stop.

The braking intervention is executed only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

The braking intervention can be interrupted by stepping on the accelerator pedal or by actively moving the steering wheel.

Object detection can be restricted. Observe the limitations of the detection range and functional restrictions.

System limits

Safety information

WARNING

The system can react incorrectly or not at all due to the system limits. There is a risk of accidents or risk of property damage. Observe the information regarding the system limits and actively intervene, if needed. ◄

Detection range

The detection potential of the camera is limited.

Thus, a warning might not be issued or be issued late.

The following situations may not be detected, e.g.:

- Partially covered pedestrians.
- Pedestrians that are not detected as such because of the viewing angle or contour.
- Pedestrians outside of the detection range.
- Pedestrians having a body size less than 32 in/80 cm.

Functional limitations

The system may not be fully functional or may not be available in the following situations:

 In heavy fog, rain, sprayed water or snowfall.

- In tight curves.
- If the driving stability control systems are deactivated, for instance DSC OFF.
- If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- ▶ Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.
- When it is dark outside.

Night Vision with pedestrian and animal detection

Concept

Night Vision with pedestrian and animal detection is a night vision system.

An infrared camera scans the area in front of the vehicle and issues a warning if it detects pedestrians and animals on the street. The system detects warm objects that are similar in shape to human beings or animals. If necessary, the thermal image can be displayed on the Control Display.

General information

Thermal image



The image shows the heat radiated by objects in the field of view of the camera.

Warm objects have a light appearance and cold objects a dark appearance.

The ability to detect an object depends on the temperature difference between the object and the background and on the level of heat radiation emitted by the object. Objects that are similar in temperature to the environment or that radiate very little heat are difficult to detect.

For safety reasons, when driving at speeds above approx. 3 mph/5 km/h and in low ambient light, the image is only displayed when the low beams are activated.

A still image is displayed at regular intervals for a fraction of a second.

Pedestrian and animal detection



Object detection and warning only functions in darkness.

Objects whose form is similar to people with sufficient heat radiation are detected.

In addition, the system also detects animals above a certain minimum size, e.g., deer.

Display on the Control Display with thermal image activated:

- People detected by the system: in light vellow.
- Animals detected by the system: in dark vellow.

Range of object detection, with good ambient conditions:

- Pedestrian detection: up to approx. 330 ft/100 m
- Detection of large animals: up to approx.
 490 ft/150 m
- Detection of medium animals: up to approx. 230 ft/70 m

Environmental influences can limit the availability of object detection.

If the vehicle systems detect that the vehicle is located in a residential area, the animal detection is temporarily switched off.

Safety information WARNING

The system does not release from the personal responsibility to correctly assess visibility and traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

Overview

Buttons in the vehicle




Intelligent Safety



Thermal image

Camera

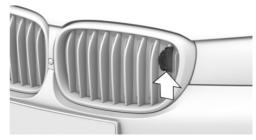

The camera is automatically heated when the external temperatures are low.

When the vehicle lighting is switched on, the camera objective is cleaned at regular intervals when the windshield washer system, refer to page 106, is activated.

Switching on/off

Switching on automatically

When it is dark outside, the system is automatically active after every driving off.

Switching on the thermal image

The thermal image from the Night Vision camera can be displayed on the Control Display in addition to the warning function. This function has no effect on object detection.



Press button.

The image from the camera is displayed on the Control Display.

Adjusting the thermal image

Brightness and contrast can be adjusted, when the thermal image is switched on.

Via iDrive:

- 1. Select brightness or contrast.
 - ▶ ☼ "Brightness".
 - ▶ "Contrast".
- 2. Set the desired value.

Warning function

Display

Symbol	Meaning
着中	Person warning.
/	Animal warning.
Symbol lights up red.	Prewarning.

Symbol	Meaning
Symbol flashes red and a signal sounds.	Acute warning.
\triangle	If the vehicle is equipped accordingly, a red warning triangle alternatively lights up or flashes in the instrument cluster.


The displayed symbol may vary and shows the side of the road on which the person or animal was detected.

Warning of people or animals in danger

If a collision with a person or an animal detected in this way is imminent, a warning symbol appears on the instrument cluster and in the Head-up Display.

Although both the shape and the heat radiation are analyzed, false warnings cannot be ruled out.

Warning area in front of the vehicle

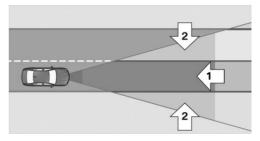

The warning area for the person warning consists of two parts:

- Central area, arrow 1, directly in front of the vehicle.
- Expanded area, arrow 2, to the right and left of the central area.

With animal warnings, no distinction is made between the central or expanded area.

The entire area moves along with the vehicle in the direction of the steering angle and changes with the vehicle speed. As the vehicle speed increases, the area becomes, for instance longer and wider.

Prewarning

Prewarning for persons is displayed when a person is detected in the central area immediately in front of the vehicle as well as on the left or right side in the extended area.

Prewarning for animals is displayed when an animal is detected in the front of the vehicle.

If a prewarning is issued, intervene by braking or making an evasive maneuver.

Acute warning

Acute warning is displayed if a person or an animal is detected in direct proximity in front of the vehicle.

If an acute warning is issued, brake or make an evasive maneuver immediately.

Display in the Head-up Display

The warning is displayed simultaneously in the Head-up Display and on the instrument cluster.

System limits

Basic limits

The system may not be fully functional in the following situations:

- On steep hills, in steep depressions or in tight curves.
- If the camera is soiled or damaged.
- In heavy fog, rain or snowfall.
- At very high external temperatures.

Limits of pedestrian and animal detection

In some situations, it may occur that pedestrians are detected as animals or animals as pedestrians.

Small animals are not detected by the object detection function, even if they are clearly visible in the image.

Limited detection, e.g., in the following circumstances:

- People or animals who are fully or partially covered, especially when their heads are covered.
- People who are not in an upright position, e.g., lying down.
- Cyclists on unconventional bicycles (e.g., recumbent bicycles).
- After physical damage to the system, e.g., after an accident.

Lane departure warning

Concept

The lane departure warning alerts when the vehicle on roads with lane markings is about to leave the lane.

General information

This camera-based system warns starting at a minimum speed.

The minimum speed is country-specific and is displayed in the menu for the Intelligent Safety systems.

The steering wheel begins vibrating gently in the event of warnings. The time of the warning may vary depending on the current driving situation.

The system does not provide a warning if the turn signal is set before leaving the lane.

Vehicles with side collision warning: if in the speed range up to 130 mph/210 km/h, a lane marking is crossed, the system intervenes with

a brief active steering intervention in addition to vibrating and helps to keep the vehicle in the lane.

Safety information WARNING

The system does not release the driver from the personal responsibility to correctly assess route and traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations. In the event of a warning, do not unnecessarily jerk the steering wheel.

Functional requirements

The camera must detect the lane markings for the lane departure warning to be active.

Overview


Button in the vehicle



8

Intelligent Safety

Camera

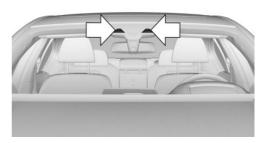

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

Switching on/off

Switching on automatically

The lane departure warning activates automatically after departure if the function was switched on at the end of the last trip.

Switching on/off manually

Press button.

The menu for the int

The menu for the intelligent safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.

Press button repeatedly.

The following settings are switched between:


"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.


"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings.

Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button.
All Intelligent Safety systems are switched off.

Button Status

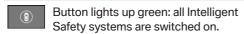

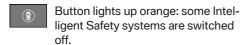

Button does not light up: all Intelligent Safety systems are switched off.

Setting warning sensitivities

Via iDrive:

- "My Vehicle"
- 2. "Vehicle settings"
- "Intelligent Safety"
- 4. "Lane Departure Warn."
- 5. Select the desired setting.
 - "Always": the system always alerts within the technical limitations.
 - "Reduced": some warning are suppressed depending on the situation, e.g., during passing without turn signal or when purposefully driving over lane markings in curves.
 - ▶ "Off": no warnings are issued.

The selected setting is stored for the driver profile currently used.

Setting the force of the steering wheel vibration

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Steering wheel vibration"
- Select the desired setting.

The setting is applied to all Intelligent Safety systems and stored for the driver profile currently used.

Vehicles with side collision warning: switching steering intervention on/off

The steering intervention can be switched on and off separately for Active Blind Spot Detection and lane departure warning.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Intelligent Safety"
- 4. "Steering intervention"

The selected setting is stored for the driver profile currently used.

Display in the instrument cluster



The system illuminates green: at least one lane marking was detected and warnings can be issued.

Warning function

If you leave the lane

If you leave the lane and if a lane marking has been detected, the steering wheel begins vibrating.

If the turn signal is set before changing the lane, a warning is not issued.

With side collision warning

If in the speed range up to 130 mph/210 km/h a lane marking is crossed, the system inter-

venes with a brief active steering intervention in addition to vibrating and helps to keep the vehicle in the lane. The steering intervention can be noticed on the steering wheel and can be manually overridden at any time.

End of warning

The warning is canceled in the following situations:

- Automatically after approx. 3 seconds.
- When returning to your own lane.
- When braking hard.
- When using the turn signal.
- When DSC is actively controlling stability.

System limits

Safety information

WARNING

The system can react incorrectly or not at all due to the system limits. There is a risk of accidents or risk of property damage. Observe the information regarding the system limits and actively intervene, if needed. ◄

Functional limitations

The system may not be fully functional in the following situations:

- In heavy fog, rain or snowfall.
- In the event of missing, worn, poorly visible, merging, diverging, or multiple lane markings such as in construction areas.
- When lane markings are covered in snow, ice, dirt or water.
- In tight curves or on narrow lanes.
- When the lane markings are covered by objects.
- When driving very close to the vehicle in front of you.

- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.
- If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- During calibration of the camera immediately after vehicle delivery.

A Check Control message is displayed when the system is not fully functional.

Warning sensitivity


The more sensitive the warning settings are, the more warnings are displayed. However, there may also be an excess of undesired warnings.

Active Blind Spot Detection

Concept

Active Blind Spot Detection detects vehicles in the blind spot or vehicles approaching from behind in the adjacent lane. This is signaled by a warning.

General information

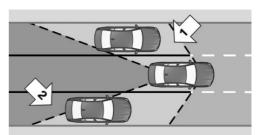

Two radar sensors in the rear bumper monitor the area behind and next to the vehicle starting from a preset minimum speed.

The minimum speed is country-specific and is displayed in the menu for the Intelligent Safety systems.

The system indicates whether there are vehicles in the blind spot, arrow 1, or approaching from behind in the adjacent lane, arrow 2.

The lamp in the exterior mirror lights up dimmed.

Before you change lanes after setting the turn signal, the system issues a warning in the situations described above.

The lamp in the exterior mirror flashes and the steering wheel vibrates.

Vehicles with side collision warning: at speeds between 45 mph/70 km/h and

130 mph/210 km/h, the system can intervene with a brief active steering intervention and help to return the vehicle into the lane.

Safety information

WARNING

The system does not release from the personal responsibility to correctly assess visibility and traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

Overview


Button in the vehicle



lnt

Intelligent Safety

Radar sensors

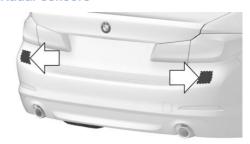

The radar sensors are located in the rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

Switching on/off

Switching on automatically

The Active Blind Spot Detection is automatically activated after departure if the function was switched on at the end of the last trip.

Switching on/off manually

Press button.

The menu for the intelligent safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.

Press button repeatedly.

The following settings are switched between:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings.

Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button.
All Intelligent Safety systems are switched off.

Button Status

- Button lights up green: all Intelligent Safety systems are switched on.
- Button lights up orange: some Intelligent Safety systems are switched off.
- Button does not light up: all Intelligent Safety systems are switched off.

Setting the warning time

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Intelligent Safety"
- 4. "Blind Spot Detection"
- Select the desired setting."Off": With this setting, no warning is output.

The setting is stored for the driver profile currently used.

Setting the force of the steering wheel vibration

Via iDrive:

- 1. "My Vehicle"
- "Vehicle settings"
- 3. "Steering wheel vibration"
- 4. Select the desired setting.

The setting is applied to all Intelligent Safety systems and stored for the driver profile currently used.

Vehicles with side collision warning: switching steering intervention on/off

The steering intervention can be switched on and off separately for Active Blind Spot Detection and lane departure warning.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Intelligent Safety"
- 4. "Steering intervention"

The setting is stored for the driver profile currently used.

Warning function

Light in the exterior mirror



Prewarning

The dimmed light in the exterior mirror indicates when there are vehicles in the blind spot or approaching from behind.

Acute warning

If the turn signal is set while a vehicle is in the critical zone, the steering wheel vibrates briefly and the light in the exterior mirror flashes brightly.

The warning stops when the turn signal is switched off, or the other vehicle leaves the critical zone.

With side collision warning

If at speeds between 45 mph/70 km/h and 130 mph/210 km/h, the vibrating steering wheel is ignored and the lane marking crossed, the system intervenes with a brief active steering intervention and helps to return the vehicle into the lane. The steering intervention can be noticed on the steering wheel and can be manually overridden at any time.

Flashing of the light

A flashing of the light during vehicle unlocking serves as system self-test.

System limits

Safety information

WARNING
The system can react incorrectly or not all due to the system limits. There is a rick of

at all due to the system limits. There is a risk of accidents or risk of property damage. Observe the information regarding the system limits and actively intervene, if needed. ◄

Upper speed limit

If the vehicle speed exceeds approx.

155 mph/250 km/h, the system is deactivated temporarily. As soon as the speed drops back down below this value, the system once again responds according to the setting.

Functional limitations

The system may not be fully functional in the following situations:

- When a vehicle is approaching at a speed much faster than your own.
- ▶ In heavy fog, rain or snowfall.
- In tight curves or on narrow lanes.
- If the bumper is dirty or iced up, or covered with stickers.
- If cargo protrudes.

For vehicles with side collision warning, the steering intervention can be limited, for instance in the following situation:

- In the event of missing, worn, poorly visible, merging, diverging, or multiple lane markings such as in construction areas.
- When lane markings are covered in snow, ice, dirt or water.
- When the lane markings are not white.
- When the lane markings are covered by objects.
- When driving very close to the vehicle in front of you.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.
- If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- During calibration of the camera immediately after vehicle delivery.

A Check Control message is displayed when the system is not fully functional.

Displaying warnings


Depending on the selected warning settings, for instance warning time, more warnings can be displayed. However, there may also be an excess of premature warnings of critical vehicles.

Side collision warning

Concept

The system helps to avoid imminent side collisions.

General information

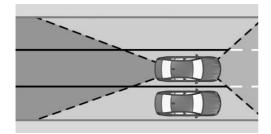

Four radar sensors in the bumpers monitor the area next to the vehicle in the speed range from approx. 45 mph/70 km/h to approx. 130 mph/210 km/h.

The front camera determines the lane marking positions.

If, e.g., another vehicle is detected next to the vehicle and if there is a risk of collision with this vehicle, the system helps the driver to avoid the collision via steering intervention.

Safety information

MARNING
The system

The system does not release from the personal responsibility to correctly assess visibility and traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

Functional requirements

The camera must detect the lane markings for the side collision warning with steering intervention to be active.

Overview

Button in the vehicle






Radar sensors

The radar sensors are located in the bumpers.




Front bumper.

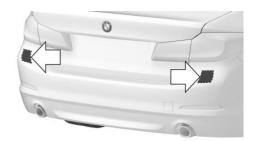

Rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

Camera

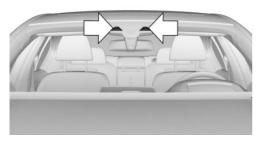

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

Switching on/off

Switching on automatically

The side collision warning activates automatically after departure if the function was switched on at the end of the last trip.

Switching on/off manually

Press button.
The menu for the intelligent safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.

Press button repeatedly.
The following settings are switched between:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings.

Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button.
All Intelligent Safety systems are switched off.

Button Status

- Button lights up green: all Intelligent Safety systems are switched on.
- Button lights up orange: some Intelligent Safety systems are switched off.
- Button does not light up: all Intelligent Safety systems are switched off.

Warning function

Light in the exterior mirror



If there is a risk of collision

If there is a risk of collision, the light in the exterior mirror flashes and the steering wheel vibrates. An active steering intervention takes place to prevent collisions and maintain the vehicle within its own lane. The steering intervention can be noticed on the steering wheel and can be manually overridden at any time.

System limits

Safety information WARNING

The system can react incorrectly or not at all due to the system limits. There is a risk of accidents or risk of property damage. Observe the information regarding the system limits and actively intervene, if needed. ◄

Functional limitations

The system may not be fully functional in the following situations:

- When a vehicle is approaching at a speed much faster than your own.
- In heavy fog, rain or snowfall.
- In tight curves or on narrow lanes.
- If the bumpers are dirty or iced up, or covered with stickers.
- If cargo protrudes.
- In the event of missing, worn, poorly visible, merging, diverging, or multiple lane markings such as in construction areas.
- When lane markings are covered in snow, ice, dirt or water.
- When the lane markings are covered by objects.
- When driving very close to the vehicle in front of you.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.
- If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- During calibration of the camera immediately after vehicle delivery.


A Check Control message is displayed when the system is not fully functional.

Rear collision prevention

Concept

The system reacts to vehicles approaching from behind.

General information

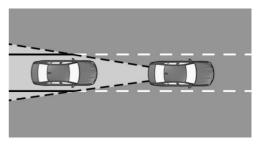

Two radar sensors in the rear bumper monitor the area behind the vehicle.

If a vehicle approaches from the rear at a certain speed, the system responds as follows:

 Active Protection, refer to page 164: if a collision seems to be unavoidable, Pre-Crash functions are triggered.

The system is automatically active after every driving off.

The system is deactivated in the following situations:

- When driving in reverse.
- If the trailer power socket is in use, e.g., during operation with trailer or bicycle rack.


Safety information

WARNING

The system does not release from the personal responsibility to correctly assess visibility and traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

Overview

Radar sensors

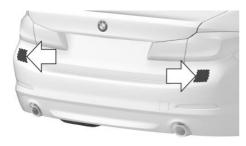

The radar sensors are located in the rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

System limits

The system may not be fully functional in the following situations:

- When a vehicle is approaching at a speed much faster than your own.
- When the approaching vehicle approaches slowly.
- In heavy fog, rain or snowfall.
- In tight curves or on narrow lanes.
- If the bumper is dirty or iced up, or covered with stickers.
- If cargo protrudes.

Brake force display

Concept

Additional brake lamps indicate emergency braking to the traffic behind. This can reduce the risk of a rear-end collision.

General information



- During normal brake application, the outer brake lights light up.
- During heavy brake application, the inner brake lights additionally light up.

Active Protection

Concept

Active Protection prepares occupants and the vehicle for a possible accident in critical driving or collision situations.

General information

Active Protection consists of various PreCrash functions, which can vary depending on the equipment.

The system is used to detect certain critical driving situations that might lead to an accident. This includes the following critical driving situations:

- Emergency stop.
- Severe understeering.
- Severe oversteering.

Certain functions of several systems can within the system limits - lead to Active Protection triggering:

- Approach control warning with light braking function: automatic brake intervention.
- Approach control warning with light braking function or Night Vision with pedestrian and animal detection: brake booster.

Rear collision prevention: detection of imminent rear collisions.

Safety information

WARNING

The system does not release from the personal responsibility. Due to the system limits, critical situation could not be detected reliably or in time. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

Function

When the safety belt is fastened, the driver's and passenger's belt straps are automatically tightened once after driving away.

In accident-critical situations, the following individual functions become active as needed:

- Automatic pretensioning of the front safety belts.
- Automatic window closing up to a narrow gap.
- Automatic closing of the glass sunroof, including sliding visor.
- For vehicles equipped with comfort seats in the front: automatic positioning of the backrest for the front passenger seat.

After a critical driving situation without an accident, the front safety belts are loosened again.

If the belt tension does not loosen automatically, stop the vehicle and unbuckle the safety belt using the red button in the buckle. Fasten the safety belt before continuing on your trip.

All other systems can be restored to the desired setting.

Post Crash — iBrake

Concept

In the event of an accident, the system can bring the vehicle to a halt automatically without

intervention by the driver in certain situations. This can reduce the risk of a further collision and the consequences thereof.

At standstill

After coming to a halt, the brake is released automatically.

Harder vehicle braking

It can be necessary to bring the vehicle in certain situations to a halt quicker.

Here, a higher braking pressure must be generated for a short period when pressing the brake pedal than during automatic braking. This interrupts automatic braking.

Interrupting automatic braking

It can be necessary to interrupt automatic braking in certain situations, for instance for an evasive maneuver.

Interrupt automatic braking:

- By pressing the brake pedal.
- > By pressing the accelerator pedal.

Attentiveness assistant

Concept

The system can detect decreasing alertness or fatigue of the driver during long, monotonous trips, e.g., on highways. In this situation, it is recommended that the driver takes a break.

Safety information

WARNING

The system does not release from the personal responsibility to correctly assess one's physical state. An increasing lack of alertness or fatigue may not be detected or not be detected in time. There is a risk of an accident. Make sure that the driver is rested and alert. Adjust the driving style to the traffic conditions.

Function

The system is switched on each time driveready state is switched on.

After travel has begun, the system monitors certain aspects of the driver's behavior, so that decreasing alertness or fatigue can be detected.

This procedure takes the following criteria into account:

- Personal driving style, e.g., steering behavior.
- Driving conditions, e.g., length of trip.

The system is active starting from approx. 43 mph/70 km/h and can display a break recommendation in addition to the alertness assistant.

Break recommendation

Switching on/off, adjusting

The Attentiveness Assistant is active automatically with each switching on of drive-ready state and can thus display a break recommendation.

The break recommendation can also be switched on or off via iDrive and adjusted:

Via iDrive:

- "My Vehicle"
- "Vehicle settings"
- "Driver attention control"
- 4. Select the desired setting.
 - "Off": no break recommendation is made.
 - "Standard": the break recommendation is made with a defined value.
 - "Sensitive": the break recommendation is issued earlier.

Display

If the driver becomes less alert or fatigued, a message is displayed in the Control Display with the recommendation to take a break.

During the display, the following settings can be selected:

- "Do not ask again"
- ▶ "Places to stop"
- "Remind me later"
 The break recommendation is repeated after 20 minutes.

After a break, another recommendation to take a break cannot be displayed until after approximately 45 minutes.

System limits

The function may be limited in the following situations, e.g., and will either output an incorrect warning or no warning at all:

- When the clock is set incorrectly.
- ▶ When the vehicle speed is mainly below about 43 mph/70 km/h.
- With a sporty driving style, such as during rapid acceleration or when cornering fast.
- In active driving situations, such as when changing lanes frequently.
- When the road surface is poor.
- In the event of strong side winds.

The system is reset approx. 45 minutes after parking the vehicle, e.g., in the case of a break during longer trips on highways.

Driving stability control systems

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Anti-lock Braking System ABS

ABS prevents locking of the wheels during braking.

The vehicle maintains its steering power even during full brake applications, thus increasing active safety.

ABS is operational every time you start the enqine.

Brake assistant

When you apply the brakes rapidly, the system automatically produces the greatest possible braking force boost. It reduces the braking distance to a minimum during emergency stop. This system utilizes all of the benefits provided by ABS.

Do not reduce the pressure on the brake pedal for the duration of the emergency stop.

Adaptive brake assistant

In combination with Active Cruise Control, this system ensures that the brakes respond even more rapidly when braking in critical situations.

Drive-off assistant

Concept

This system supports driving off on inclines.

Driving away

- Hold the vehicle in place with the foot brake.
- Release the foot brake and drive off without delay.

After the foot brake is released, the vehicle is held in place for approx. 2 seconds.

After the accelerator pedal is depressed, the vehicle is held until it is driven off.

Depending on the vehicle loading, the vehicle may roll back slightly.

DSC Dynamic Stability Control

Concept

Within the physical limits, the system helps to keep the vehicle on a steady course by reducing engine speed and by braking the individual wheels.

General information

Dynamic Stability Control detects, for instance the following unstable driving conditions:

- ▶ Fishtailing, which can lead to oversteering.
- Loss of traction of the front wheels, which can lead to understeering.

Safety information

★ WARNING

The system does not release from the personal responsibility to correctly assess the traffic situation. Based on the limits of the sys-

tem, it cannot independently react to all traffic situations. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

WARNING

When driving with roof load, e.g., with roof-mounted luggage rack, driving safety may not be ensured in driving-critical situations due to the elevated center of gravity. There is a risk of accidents or risk of property damage. Do not deactivate Dynamic Stability Control DSC when driving with roof load.

Overview

Button in the vehicle





DSC OFF

Deactivating/activating DSC

General information

When DSC is deactivated, driving stability is reduced during acceleration and when driving in curves.

Stabilizing interventions by the Integral Active Steering system are only performed by the rear axle steering.

To increase vehicle stability, activate DSC again as soon as possible.

Deactivating DSC



Hold the button down until DSC OFF is displayed in the instrument cluster

and the DSC OFF indicator lamp is illuminated.

Activating DSC



Press button.

DSC OFF and the DSC OFF indicator lamp go out.

Display

In the instrument cluster

When DSC is deactivated, DSC OFF is displayed in the instrument cluster.

Indicator/warning lights



The indicator lamp lights up: DSC is deactivated.



The indicator lamp flashes: DSC controls the drive and braking forces.

The indicator lamp lights up: DSC has malfunctioned.

DTC Dynamic Traction Control

Concept

DTC is a version of the DSC where forward momentum is optimized.

The system ensures maximum headway on special road conditions or loose road surfaces, e.g., unplowed snowy roads, but with somewhat limited driving stability.

General information

When DTC is activated, the vehicle has maximum traction. Driving stability is limited during acceleration and when driving in curves.

You may find it useful to briefly activate DTC in the following situations:

- When driving in slush or on uncleared, snow-covered roads.
- When freeing vehicle from deep snow or driving off from loose ground.
- When driving with snow chains.

Overview

Button in the vehicle





DSC OFF

Activating/deactivating DTC

Activating DTC

Press button.

TRACTION is displayed in the instrument cluster and the indicator lamp for DSC OFF lights up.

Deactivating DTC

Press button again.

TRACTION and the DSC OFF indicator lamp go out.

Display

Display in the instrument cluster

If DTC is activated, TRACTION is displayed in the instrument cluster.

Indicator/warning lights



The indicator lamp lights up: DTC is activated.

xDrive

xDrive is the all-wheel-drive system of the vehicle. The interaction of xDrive and DSC Dynamic Stability Control further optimizes traction and driving dynamics. xDrive variably distributes the driving forces to the front and rear axles as demanded by the driving situation and road surface.

Integral Active Steering

Concept

Integral Active Steering is a combination of Active Steering and rear axle steering.

The system varies the steering angle of the wheels in relation to the steering wheel movement.

With strong steering movements and low speeds, e.g., when parking, the wheel angle is magnified, that is, the steering is more direct.

The rear axle steering acts to increase maneuverability by turning the rear wheels slightly in a direction opposite to the front wheels.

At higher speeds, the rear wheels are turned in the same direction as the front wheels.

In critical driving situations, the Integral Active Steering can stabilize the vehicle through purposeful steering of the rear wheels before the driver intervenes, e.g., in case of oversteering.

General information

The system offers several different tunings.

Driving mode	Integral Active Steering
COMFORT/ECO PRO	comfortable, for optimal travel comfort
SPORT	dynamic, for greater agility

The different tunings are assigned to the different driving modes of the Driving Dynamics Control, refer to page 112.

Using snow chains

When snow chains are in use, refer to page 273, rear wheel steering is deactivated.

Malfunction

In the event of a malfunction, the steering wheel must be turned further, while the vehicle responds more sensitively to steering wheel movements in the higher speed range.

The stability-enhancing intervention may be deactivated.

Proceed cautiously and drive defensively.

Have the system checked by a dealer's service center or another qualified service center or repair shop.

Driver assistance systems

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Cruise control

Concept

Using this system, a desired speed can be adjusted using the buttons on the steering wheel. The system maintains the desired speed. The system accelerates and brakes automatically as needed.

General information

Depending on the vehicle setting, the cruise control characteristic can change in certain ranges. For instance, the acceleration in ECO PRO driving mode is more gentle.

Safety information WARNING

The system does not release from the personal responsibility to correctly assess the traffic situation. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

WARNING

The use of the system can lead to an increased risk of accidents in the following situations:

- On winding roads.
- In heavy traffic.
- On slippery roads, in fog, snow or rain, or on a loose road surface.

There is a risk of accidents or risk of property damage. Only use the system if driving at constant speed is possible. ◀

WARNING

The desired speed can be incorrectly adjusted or called up by mistake. There is a risk of an accident. Adjust the desired speed to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

Overview

Buttons on the steering wheel

Ö.

Button Function

Cruise control on/off, refer to page 172.



Pause cruise control, refer to page 172.

Continue cruise control with the last setting, refer to page 173.



Store speed, refer to page 172.



Rocker switch: adjust speed, refer to page 172.

Switching cruise control on/off

Switching on



Press button on the steering wheel.

The indicator lights in the instrument cluster light up and the mark in the speedometer is set to the current speed.

Cruise control is active. The current speed is maintained and stored as desired speed.

DSC will be switched on, if needed.

Switching off




Press button on the steering wheel.

The displays go out. The stored desired speed is deleted.

Setting the speed

Maintaining and storing the speed

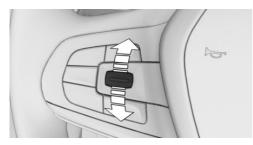

Press the rocker switch while the system is interrupted.

When the system is switched on, the current speed is maintained and stored as the desired speed.

The stored speed is displayed, refer to page 173, in the speedometer and briefly in the instrument cluster.


DSC will be switched on, if needed.

The speed can also be stored by pressing a button.

SET

Press button.

Changing the speed

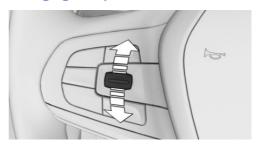

Press the rocker switch up or down repeatedly until the desired speed is set.

If active, the displayed speed is stored and the vehicle reaches the stored speed when the road is clear.

- Each time the rocker switch is pressed to the resistance point, the desired speed increases or decreases by 1 mph/1 km/h.
- Each time the rocker switch is pressed past the point of resistance, the desired speed increases or decreases by a maximum of 5 mph/10 km/h.
 - The maximum speed that can be set depends on the vehicle.
- Pressing the rocker switch to the resistance point and holding it accelerates or decelerates the vehicle without requiring pressure on the accelerator pedal.

After the rocker switch is released, the vehicle maintains its final speed. Pressing the switch beyond the resistance point causes the vehicle to accelerate more rapidly.

Pausing cruise control

Interrupting manually



When active, press the button.

Interrupting automatically

The system is automatically interrupted in the following situations, for example:

- When the driver applies the brakes.
- Steptronic transmission: when selector lever position D is disengaged.
- When DTC is activated or DSC is deactivated.
- When DSC is actively controlling stability.
- When SPORT PLUS is activated with Driving Dynamics Control.

Continuing cruise control

An interrupted cruise control can be continued by calling up the stored speed.

Make sure that the difference between current speed and stored speed is not too large before calling up the stored speed. Otherwise, unintentional braking or accelerating may occur.



Press button with the system interrupted.

Cruise control is continued with the saved values.

In the following cases, the stored speed value is deleted and cannot be called up again:

- When the system is switched off.
- When drive-ready state is switched off.

Displays in the instrument cluster

Display in the speedometer



- Green marking: system is active, the marking indicates the desired speed.
- Orange/white marking: system is interrupted, the marking indicates the stored speed.
- No marking: system is switched off.

Indicator lamp



- Indicator lamp green: system is active.
- Gray indicator lamp: the system has been interrupted.
- No indicator lamp: system is switched off.

Status display



The selected desired speed is hidden after a brief time.

Displays in the Head-up Display

Some system information can also be displayed in the Head-up Display.



The symbol is displayed when the set desired speed is reached.

System limits

The desired speed is also maintained downhill. The speed may not be maintained on uphill grades if the engine power is insufficient.

Due to the driving style that minimizes fuel consumption in ECO PRO driving mode, the vehicle may drop below the set desired speed in some situations, e.g., on uphill grades.

Active Cruise Control with Stop&Go function, ACC

Concept

Using this system, a desired speed and a distance to a vehicle ahead can be adjusted using the buttons on the steering wheel.

The system maintains the desired speed on clear roads. For this purpose, the vehicle accelerates or brakes automatically.

If a vehicle is driving ahead of you, the system adjusts the speed of your vehicle within the given system limits so that the set distance to the vehicle ahead is maintained.

General information

A radar sensor is located in the front bumper and a camera on the interior mirror to detect vehicles driving ahead of you.

Depending on the vehicle setting, the cruise control characteristic can change in certain ranges. For instance, the acceleration in ECO PRO driving mode is more gentle.

The distance can be adjusted in several steps. For safety reasons, it depends on the respective speed.

If the vehicle ahead of you brakes to a halt, and then proceeds to drive again within a brief period, the system is able to detect this within the given system limits.

Safety information WARNING

The system does not release from the personal responsibility to correctly assess the traffic situation. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, observe the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- > On uphill grades or on a downhill slope, also secure the vehicle, e.g., with a wheel chock.◄

WARNING

The desired speed can be incorrectly adjusted or called up by mistake. There is a risk of an accident. Adjust the desired speed to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

№ WARNING

Risk of accident due to too high speed differences to other vehicles, e.g., in the following situations:

- When fast approaching a slowly moving vehicle.
- Suddenly swerving vehicle onto the own lane.
- When fast approaching standing vehicles.

There is a risk of injuries or danger to life. Watch traffic closely and actively intervene in the respective situations. ◄

Overview

Buttons on the steering wheel

Button Function



Cruise control on/off, refer to page 175.



Store/maintain, refer to page 176, speed.



Pause, refer to page 175, cruise control.

Continue, refer to page 177, cruise control with the last setting.



Without steering and lane control assistant:

Increase, refer to page 177, distance.



Without steering and lane control assistant:

Reduce, refer to page 177, distance.

Button Function



With steering and lane control assistant:

Adjust, refer to page 176, distance.



Rocker switch:

Set, refer to page 176, speed.



With steering and lane control assistant:

Steering and lane control assistant incl. Traffic Jam Assist on/off, refer to page 180.


Radar sensor



The radar sensor is located in the front bumper.

Always keep radar sensor clean and unobstructed.

Camera

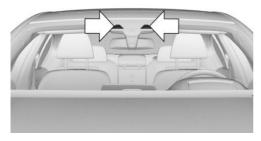

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

Area of application

The system is best used on well-constructed roads.

The minimum speed that can be set is 20 mph/30 km/h.

The maximum speed that can be set is 115 mph/180 km/h.

The system can also be activated when stationary.

Switching on/off and interrupting cruise control

Switching on



Press button on the steering wheel.

The indicator lights in the instrument cluster light up and the mark in the speedometer is set to the current speed.

Cruise control is active. The current speed is maintained and stored as desired speed.

DSC will be switched on, if needed.

Switching off

To switch off the system while standing, step on brake pedal at the same time.



Press button on the steering wheel.

The displays go out. The stored desired speed is deleted.

Interrupting manually



When active, press the button on the steering wheel.

If interrupting the system while stationary, press on the brake pedal at the same time.

Interrupting automatically


The system is automatically interrupted in the following situations:

When the driver applies the brakes.

- When selector lever position D is disengaged.
- When DTC is activated or DSC is deactivated.
- When DSC is actively controlling stability.
- If the safety belt is unbuckled and the driver's door is opened while the vehicle is standing still.
- If the system has not detected objects for an extended period, for instance on a road with very little traffic without curb or shoulder markings.
- ▶ If the detection range of the radar is impaired, for instance by dirt or heavy fog.
- After a longer stationary period when the vehicle has been braked to a stop by the system.

Setting the speed

Maintaining and storing the speed

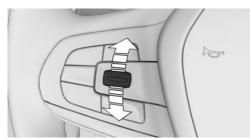

Press the rocker switch while the system is interrupted.

When the system is switched on, the current speed is maintained and stored as the desired speed.

The stored speed is displayed, refer to page 177, in the speedometer and briefly in the instrument cluster.


DSC will be switched on, if needed.

The speed can also be stored by pressing a button.



Press button.

Changing the speed

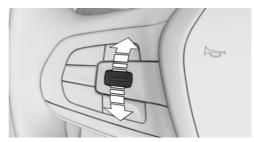

Press the rocker switch up or down repeatedly until the desired speed is set.

If active, the displayed speed is stored and the vehicle reaches the stored speed when the road is clear.

- Each time the rocker switch is pressed to the resistance point, the desired speed increases or decreases by 1 mph/1 km/h.
- Each time the rocker switch is pressed past the point of resistance, the desired speed increases or decreases by a maximum of 5 mph/10 km/h.

Hold the rocker switch in position to repeat the action.

Adjusting distance

Safety information

WARNING

The system does not release from the personal responsibility. Due to the system limits, braking can be late. There is a risk of accidents or risk of property damage. Be aware to the traffic situation at all times. Adjust the distance to the traffic and weather conditions and maintain the prescribed safety distance, possibly by braking.

Without steering and lane control assistant: reducing distance



Press button repeatedly until the desired distance is set.

Instrument cluster will display selected distance, refer to page 177.

Without steering and lane control assistant: increasing distance



Press button repeatedly until the desired distance is set.

Instrument cluster will display selected distance, refer to page 177.

With steering and lane control assistant: adjusting distance



Press button repeatedly until the desired distance is set.

Continuing cruise control

An interrupted cruise control can be continued by calling up the stored speed.

Make sure that the difference between current speed and stored speed is not too large before calling up the stored speed. Otherwise, unintentional braking or accelerating may occur.



Press button with the system interrupted.

Cruise control is continued with the saved values.

In the following cases, the stored speed value is deleted and cannot be called up again:

- When the system is switched off.
- When drive-ready state is switched off.

Displays in the instrument cluster

Display in the speedometer



- Green marking: system is active, the marking indicates the desired speed.
- Orange/white marking: system is interrupted, the marking indicates the stored speed.
- No marking: system is switched off.

Status display



The selected desired speed is hidden after a brief time.

Distance to vehicle ahead of you

Selected distance to the vehicle ahead of you is shown.

Symbol

Description



Distance 1



Distance 2



Distance 3



Distance 4

This value is set automatically after the system is switched on.

Symbol

Description



System interrupted.



No distance control display, as the accelerator pedal is being pressed.

Detected vehicle

Symbol

Description



Green symbol:

A vehicle has been detected ahead of you. The system maintains the set distance to the vehicle in front.

As soon as the detected vehicle drives off, the vehicle symbol in the distance indicator will move away.

To accelerate, activate ACC by briefly stepping on the accelerator pedal or pressing the rocker switch.

Indicator/warning lights

Symbol

Description



Vehicle symbol flashes:

The conditions are not adequate for the system to work.

The system was deactivated but applies the brakes until you actively resume control by pressing on the brake pedal or accelerator pedal.



The vehicle symbol and distance bars flash red and an acoustic signal sounds:

You are requested to intervene by braking or make an evasive maneuver.

Displays in the Head-up Display

Desired speed

Some system information can also be displayed in the Head-up Display.



The symbol is displayed when the set desired speed is reached.

Distance information




The symbol is displayed when the distance from the vehicle traveling ahead is too short.

The distance information is active in the following situations:

- Active Cruise Control switched off.
- Display in the Head-up Display selected, refer to page 128.
- Distance too short.
- Speed greater than approx. 40 mph/70 km/h.

System limits

Detection range

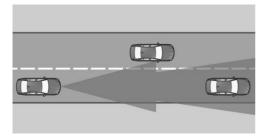

The detection capacity of the system and the automatic braking capacity are limited.


Two-wheeled vehicles for instance might not be detected.

Deceleration

The system also does not decelerate in the following situations:

- ▶ For pedestrians or similarly slow-moving road users.
- For red traffic lights.
- For cross traffic.
- For oncoming traffic.


Swerving vehicles

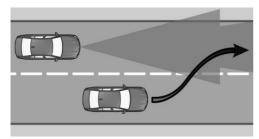

A vehicle driving in front of you is not detected until it is completely within the same lane as your vehicle.


If a vehicle driving ahead of you suddenly swerves into your lane, the system may not be able to automatically restore the selected distance. This also applies to major speed differences to vehicles driving ahead of you, e.g., when rapidly approaching a truck. When a vehicle driving ahead of you is reliably detected, the system requests that the driver intervene by braking and carrying out evasive maneuvers, if needed.

Cornering

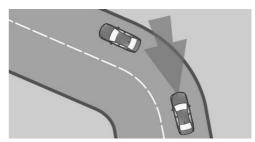

If the desired speed is too high for a curve, the speed is reduced slightly, although curves cannot be anticipated in advance. Therefore, drive into a curve at an appropriate speed.

In tight curves the system offers only restricted detection where a vehicle ahead of you might be detected late or not at all.

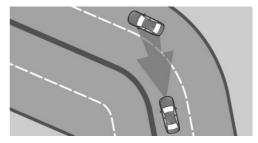

When you approach a curve the system may briefly report vehicles in the next lane due to the bend of the curve. If the system decelerates you may compensate it by briefly accelerating. After releasing the accelerator pedal the system is reactivated and controls speed independently.

Driving away

In some situations, the vehicle cannot drive off automatically; for example:

- On steep inclines.
- From bumps in the road.

In these cases, step on the accelerator pedal.

Weather

In the event of unfavorable weather and light conditions, e.g., if there is rain, snowfall, slush, fog or glare, this may result in poorer recognition of vehicles as well as short-term interruptions for vehicles that are already detected. Drive attentively, and react to the current traffic situation. If necessary, intervene actively, e.g., by braking, steering or evading.

Engine power

The desired speed is also maintained downhill. The speed may not be maintained on uphill grades if the engine power is insufficient.

Due to the driving style that minimizes fuel consumption in ECO PRO driving mode, the vehicle may intentionally exceed or drop below the set desired speed in some situations, for instance on downhill or uphill grades.

Malfunction

The system cannot be activated if the radar sensor is not aligned correctly. This may be caused by damage incurred, e.g., during parking.

A Check Control message is displayed if the system fails.

Have the system checked by a dealer's service center or another qualified service center or repair shop.

The function for detecting and responding when approaching stationary vehicles may be limited in the following situations:

During calibration of the camera immediately after vehicle delivery.

If the camera is malfunctioning or dirty. A Check Control message is displayed.

Steering and lane control assistant

Concept

The system assists the driver in keeping the vehicle within the lane. For this purpose, the system executes supporting steering movements, for instance when driving in a curve.

General information

The system determines the position of the lane markings and the vehicle driving ahead using five radar sensors and a camera.

Depending on the speed, the system orients itself according to the lane markings or vehicles in front.

Sensors on the steering wheel detect whether the steering wheel is being touched.

Safety information

WARNING

The system does not release from the personal responsibility to correctly assess the traffic situation. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

Overview

Button on the steering wheel

Button Function



Switch steering and lane control assistant incl. Traffic Jam Assist on/off, refer to page 181.

Radar sensors


The radar sensors are located in the bumpers.



Front center bumper.




Front side bumper.

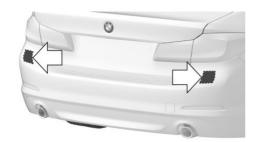

Rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

Camera

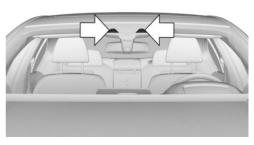

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

Functional requirements

- Speed below 130 mph/210 km/h.
- Sufficient lane width.
- Above approx. 43 mph, 70 km/h: lane marking on both sides is detected.
- Below approx. 43 mph, 70 km/h: lane marking on both sides or a vehicle driving ahead is detected.
- Hands on the steering wheel rim.
- Wide curves.
- Drive in the center of the lane.
- Turn signal not actuated.
- Camera calibration immediately after vehicle delivery is completed.

Switching on/off

Switching on



Press button on the steering wheel.



Steering wheel symbol lights up gray.

The system is on standby and does no

The system is on standby and does not manipulate steering.

System activates automatically as soon as all function conditions are fulfilled, refer to page 181.



Steering wheel symbol lights up green. The system is active.

With the system switched on, the person warning with City light braking and the side collision warning functions are active.

Switching off



Press button on the steering wheel.

The indicator goes out.

The system does not perform supportive steering wheel movements.

Interrupting automatically

The system is automatically interrupted in the following situations:

- At a speed above 130 mph/210 km/h.
- When the steering wheel is released.
- When you manipulate steering.
- When you leave your own lane.
- When the turn signal is on.
- When the lane is too narrow.
- If for a particular time no lane marking is detected and there is no vehicle driving in front.



Steering wheel symbol lights up gray. The system is on standby and does not manipulate steering.

System activates automatically as soon as all function conditions are fulfilled, refer to page 181.

Displays in the instrument cluster

Symbol

Description



Gray steering wheel symbol: The system is on standby.



Green steering wheel symbol: The system is activated.



Green steering wheel symbol and lane marking:

The system supports the driver in keeping the vehicle within the lane



Green steering wheel symbol, gray lane marking:

No lane marking detected or vehicle outside of lane marking.

Outside of the lane marking, steering support continues toward the center of the lane.

If a lane marking is not detected, the vehicle follows the vehicle ahead.



Yellow steering wheel symbol:

The hands are not grasping the steering wheel. The system is still active.



Red steering wheel symbol and a signal sounds:

The hands are not grasping the steering wheel. System interrupted.

The system does not perform supportive steering wheel movements.

Displays in the Head-up Display

All system information can also be displayed in the Head-up Display.

System limits

General information

The system cannot be activated or meaningfully used in certain situations.

Safety information

WARNING

The system can react incorrectly or not at all due to the system limits. There is a risk of accidents or risk of property damage. Observe the information regarding the system limits and actively intervene, if needed. ◄

Hands on the steering wheel

The sensors cannot detect hand-steering wheel contact in the following situations:

- Driving with gloves.
- Protective covers on the steering wheel.

Narrow lanes

When driving within narrow lanes, the system cannot be activated or effectively used, for instance in the following situations:

- In construction areas.
- In rescue lanes.
- Within city limits.

Weather

The following restrictions can occur under unfavorable weather or light conditions:

- Poorer vehicle recognition.
- Short-term interruptions for vehicles that are already recognized.

Examples of unfavorable weather or light conditions:

- Rain.
- Snowfall.
- Slush.
- ▶ Fog.
- Glare.

Drive attentively, and react to the current traffic situation. If necessary, intervene actively, e.g., by braking, steering or evading.

PDC Park Distance Control

Concept

PDC is a support when parking. Objects that you are approaching slowly in front of or behind the vehicle are indicated with:

- Signal tones.
- Visual display.

With parking assistant: obstacles on the side of the vehicle that are detected by the sensors of the parking assistant, may also be reported by the side protection function, refer to page 186.

General information

The ultrasound sensors for distance measurements are located in the bumpers and possibly on the sides of the vehicle.

The maneuvering range, depending on the obstacle and environmental conditions, is approx. 6 ft/2 m.

An acoustic warning sounds in case of an impending collision at a distance to the object of approx. 27 in/70 cm.

For objects behind the vehicle, the acoustic warning is already issued at a distance to the object of approx. 5 ft/1.50 m.

Safety information

WARNING

The system does not release from the personal responsibility to correctly assess the traffic situation. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

WARNING

Due to high speeds when PDC is activated, the warning can be delayed due to physical circumstances. There is a risk of injury or risk of property damage. Avoid approaching an object too fast. Avoid driving off fast while PDC is not yet active. ◄

Overview

Button in the vehicle





Park assistance button

Ultrasound sensors



Ultrasound sensors of the PDC. e.g., in the bumpers.

Functional requirements

Ensure full functionality:

- Do not cover sensors, for instance with stickers, bicycle racks.
- Keep the sensors clean and unobstructed.

Switching on/off

Switching on automatically

The system switches on automatically in the following situations:

If selector lever position R is engaged when the engine is running.

While approaching detected obstacles if the speed is slower than approx. 2.5 mph/4 km/h. The activation distance depends on the situation in question.

You may switch automatic activation on and off when obstacles are detected.

Usina iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Parking"
- 4. "Automatic PDC activation": only with respective equipment.
- "Automatic PDC activation"

The setting is stored for the driver profile currently used.

Depending on equipment, an additional camera view is also switched on.

Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded.

Switch the system back on, if needed,

Switching on/off manually



Press park assistance button.

- On: the LED lights up.
- Off: the LED goes out.

The rearview camera image is displayed if the reverse gear is engaged when pressing the park assistance button.

WARNING

Signal tones

General information

When approaching an object, an intermittent sound indicates the position of the object. E.g., if an object is detected to the left rear of the

vehicle, a signal tone sounds from the left rear speaker.

The shorter the distance to the object, the shorter the intervals.

If the distance to a detected object is less than approx. 10 inches/25 cm, a continuous tone is sounded.

If there are objects in front of and behind the vehicle at the same time, with a distance smaller than approx. 10 in/25 cm, an alternating constant tone will sound.

Steptronic transmission: the intermittent tone and constant tone are switched off when the selector lever position P is engaged.

The intermittent tone is switched off after a short time when the vehicle is stationary.

Volume

The ratio of the PDC signal tone volume to the entertainment volume can be adjusted.

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Tone"
- 4. "Volume settings"
- 5. "PDC"
- Set the desired value.

The setting is stored for the driver profile currently used.

Visual warning



The approach of the vehicle to an object is shown on the Control Display. Objects that are farther away are already displayed on the Control Display before a signal sounds.

The display appears as soon as PDC is activated.

The range of the sensors is represented in the colors green, yellow and red.

Pathway lines are faded in for better estimation of the required space.

When the image of the rearview camera is displayed, the switch can be made to PDC or to a different view with obstacle markings as needed:

rc "Rear view camera"

Crossing traffic warning, refer to page 205: depending on the equipment, it is warned in the PDC display against vehicles approaching in the front or rear from the side.

With parking assistant and Steptronic transmission: emergency braking function, Active PDC

Concept

The emergency braking function of PDC initiates an emergency braking in case of acute risk of collision.

General information

Due to system limits, a collision cannot be prevented under all circumstances

The function is available from walking speed while backing up or rolling backward.

A press of the accelerator pedal interrupts the braking intervention.

After emergency braking to a stop, further creeping toward an obstacle is possible. To creep toward the obstacle, lightly press the accelerator pedal and release it again.

If the accelerator pedal is heavily depressed, the vehicle drives off as usual. Manual braking is possible at any time.

The system uses the ultrasound sensors of PDC and parking assistant.

Safety information

WARNING
The system does not relieve from the personal responsibility to correctly assess the traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic and vehicle surroundings closely and actively intervene in the respective situations.

Activating/deactivating the system

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Parking"
- 4. "Active PDC with braking interv."
- 5. "Active PDC with braking interv."

The setting is stored for the driver profile currently used.

With parking assistant: side protection

Concept

The system warns of obstacles on the side of the vehicle.

General information

The system uses the ultrasound sensors of PDC and parking assistant.

Display



To protect the sides of the vehicle, obstacle markings are displayed on the vehicle at the sides.

- Color markings: warning against detected obstacles.
- Gray markings, hatched area: no obstacles were detected.
- No markings, black area: the area next to the vehicle was not yet captured.

Limits of side protection

The system only displays stationary obstacles that were previously detected by sensors while passing them.

The system does not detect whether an obstacle moves later on. If the vehicle is stationary, the markings are shown in gray after some time. The area next to the vehicle must be newly captured.

System limits

Safety information

■ WARNING

The system can react incorrectly or not at all due to the system limits. There is a risk of accidents or risk of property damage. Observe

the information regarding the system limits and actively intervene, if needed. ◀

Limits of ultrasonic measurement

Ultrasonic measurements might not function in the following situations:

- For small children and animals.
- For persons with certain clothing, e.g., coats.
- With external interference of the ultrasound, e.g., from passing vehicles or loud machines.
- When sensors are dirty, iced over, damaged or out of position.
- Under certain weather conditions such as high relative humidity, rain, snowfall, extreme heat or strong wind.
- With tow bars and trailer couplings of other vehicles.
- ▶ With thin or wedge-shaped objects.
- With moving objects.
- With elevated, protruding objects such as ledges or cargo.
- With objects with corners, edges, and smooth surfaces.
- With objects with a fine surface structure such as fences.
- For objects with porous surfaces.
- If cargo protrudes.
- With small and low objects, e.g., boxes.
- With obstacles and persons at the edge of the lane.
- With soft obstacles or obstacles covered in foam material.
- With plants and bushes.
- Low objects already displayed, e.g., curbs, can move into the blind area of the sensors before or after a continuous tone sounds.
- Cargo that extends beyond the perimeter of the vehicle is not taken into account by the system.

False warnings

The system may issue a warning under the following conditions even though there is no obstacle within the detection range:

- In heavy rain.
- When sensors are very dirty or covered with ice.
- When sensors are covered in snow.
- On rough road surfaces.
- On uneven surfaces, such as speed bumps.
- In large buildings with right angles and smooth walls, for instance in underground garages.
- In automatic vehicle washes.
- Due to heavy exhaust.
- Due to other ultrasound sources, for instance sweeping machines, high pressure steam cleaners or neon lights.

If necessary, switch off, refer to page 184, automatic PDC activation on obstacle detection, for instance in vehicle washes, to reduce false alarms.

Malfunction

A Check Control message is displayed.



White symbol is displayed, and the range of the sensors is dimmed on the Control Display.

PDC has failed. Have the system checked by a dealer's service center or another qualified service center or repair shop.

Without Surround View: rearview camera

Concept

The rearview camera provides assistance in parking and maneuvering backwards. The area

behind the vehicle is shown on the Control Display.

Safety information

WARNING
The system does not relieve from the personal responsibility to correctly assess the traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic and vehicle surroundings closely and actively intervene in the respective situations.

Overview

Button in the vehicle





Park assistance button

Camera



The camera lens is located in the handle of the tailgate.

The image quality may be impaired by dirt. If necessary, clean the camera lens.

Switching on/off

Switching on automatically

The system is switched on automatically if selector lever position R is engaged when the engine is running.

Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded.

Switch the system back on, if needed.

Switching on/off manually



Press park assistance button.

- On: the LED lights up.
- Off: the LED goes out.

The PDC is shown on the Control Display.

The rearview camera image is displayed when the reverse gear is engaged when pressing the park assistance button.

Switching the view via iDrive

With PDC activated:

"Rear view camera"

The rearview camera image is displayed.

Functional requirements

- ▶ The rearview camera is switched on.
- The tailgate is fully closed.
- Keep the recording range of the camera clear. Protruding cargo or carrier systems and trailers that are not connected to a trailer power socket can restrict the visibility range of the camera.

Assistance functions

General information


More than one assistance function can be active at the same time.

The assistance functions can be manually activated.

- ▶ ¶ "Parking aid lines" Pathway lines and turning radius lines are displayed, refer to page 189.
- ▶ P₁ "Obstacle marking" Obstacles detected by PDC are displayed, refer to page 189, by markings.

Parking aid lines

Pathway lines

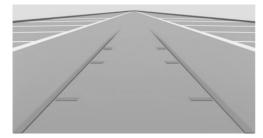

Pathway lines help you to estimate the space required when parking and maneuvering on level roads.

Pathway lines depend on the steering angle and are continuously adjusted to the steering wheel movements.

Turning radius lines



Turning radius lines can only be superimposed on the camera image together with pathway lines.


Turning radius lines show the course of the smallest possible turning radius on a level road.

Only one turning radius line is displayed after the steering wheel is turned past a certain anqle.

Parking using pathway and turning radius lines

- Position the vehicle so that the red turning radius line leads to within the limits of the parking space.
- Turn the steering wheel to the point where the green pathway line covers the corresponding turning radius line.

Obstacle marking

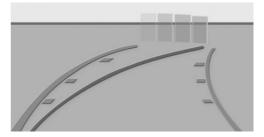

Obstacles behind the vehicle are detected by the PDC sensors.

Obstacle markings can be faded into the image of the rearriew camera

The colored thresholds of the obstacle markings match the markings of the PDC.

Setting brightness and contrast via iDrive

With the rearview camera switched on:

- Move the controller to the left.
- 2. ▷ ·☆ "Brightness"
 - ▶ "Contrast"
- Set the desired value.

System limits

Deactivated camera

If the camera is deactivated, e.g., if the tailgate is open, the camera image is displayed hatched in gray.

Detection of objects

Very low obstacles as well as high, protruding objects such as ledges may not be detected by the system.

Assistance functions also take into account data of the PDC.

Observe, refer to page 183, the notes in the PDC Park Distance Control chapter.

The objects displayed on the Control Display may be closer than they appear. Do not estimate the distance from the objects on the display.

Parking assistant Plus: Surround View

Concept

The system provides assistance in parking and maneuvering. The area around the vehicle is shown on the Control Display.

General information

Several cameras capture the area from different selectable perspectives. In addition, assistance functions, e.g., guidelines, can be faded into the display.

The following camera perspectives can be displayed:

- Automatic camera perspective, refer to page 191: the system shows the camera perspective suitable for the respective driving situation.
- Rearview camera, refer to page 191: to represent the areas behind the vehicle.

- Right-hand and left-hand side view, refer to page 194: for representing the areas on the sides of the vehicle.
- Camera perspective movable via iDrive, refer to page 191.
- ▶ Panorama View, refer to page 194: to present cross traffic, e.g., at junctions and driveways, depending on the currently engaged gear.

Depending on the view, the environment around the vehicle or a part of it is depicted.

Safety information

↑ WARNING

The system does not relieve from the personal responsibility to correctly assess the traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic and vehicle surroundings closely and actively intervene in the respective situations.

Overview

Buttons in the vehicle






Park assistance button



Panorama View


Cameras

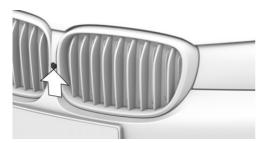

Front camera



Rearview camera

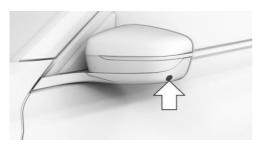

One camera is located at the bottom of each exterior mirror housing.

The image quality may be impaired by dirt on the camera lenses. Clean the camera lenses if necessary.

Switching on/off

Switching on automatically

The system is switched on automatically if selector lever position R is engaged when the engine is running.

The camera perspective suitable for the respective driving situation is displayed.

Switching on/off manually



Press park assistance button.

- On: the LED lights up.
- Off: the LED goes out.

The rearview camera cannot be switched off if the reverse gear is engaged.


Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded.

Switch the system back on, if needed.

Camera perspective

Overview

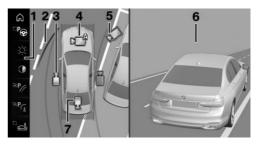

- Function bar
- 2 Selection window
- 3 Side view
- 4 Automatic camera perspective
- 5 Movable camera perspective
- 6 Camera image
- 7 Rearview camera

Selection window

The individual camera perspectives can be selected in the selection window via iDrive.

Side view

The side view can be selected for the right or left vehicle side.

This view helps when positioning the vehicle at the curb or with other obstacles on the side by displaying the side surroundings.

The side view looks from rear to front and in case of danger, focuses automatically on possible obstacles.

Automatic camera perspective

The automatic camera perspective shows a steering-dependent view in the respective driving direction.

This perspective adapts to the respective driving situation.

As soon as obstacles are detected, the view changes to a fixed display of the area in front or at the rear behind the bumper or, if necessary, changes to a side view.

When reverse gear is engaged, the automatic camera perspective is closed and the system uses a fixed perspective of the rearview camera. If necessary, manually select the automatic camera perspective when reverse gear is engaged. The automatic camera perspective will be retained for the current parking maneuver.

Movable camera perspective

With selection of the movable camera perspective, a circle appears on the Control Display.

By turning the controller or via touch function, specified perspectives on the circle can be selected.

The current perspective is marked with a camera symbol.

With BMW Gesture Control: an additional camera symbol appears on the circle. This camera symbol is freely movable via BMW Gesture Control, refer to page 30.

To leave the circle, move the controller sideways and press or tap the active camera symbol via the touchscreen.

Rearview camera

This view shows the picture of the rearview camera.

Function bar

Assistance functions, refer to page 192, can be activated via the function bar and settings applied.

- ▶ Parking Assistant", refer to page 197.
- ▶ ☼ "Brightness", refer to page 195.
- Contrast", refer to page 195.
- ▶ **%** "Parking aid lines", refer to page 193.
- ▶ ^P "Obstacle marking", refer to page 193.
- Settings": apply settings, for instance to use the activation points for Panorama View

Assistance functions

General information

More than one assistance function can be active at the same time.

The following assistance functions can be manually activated:


- ▶ "Parking aid lines"
- ▶ ^P "Obstacle marking"
- ▶ □ "Car wash"

The following assistance functions are automatically displayed:

- Side protection, refer to page 194.
- Door opening angle, refer to page 194.

Parking aid lines

Pathway lines

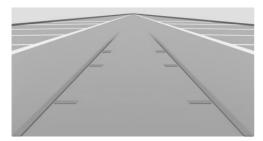

Pathway lines help you to estimate the space required when parking and maneuvering on level roads.

Pathway lines depend on the steering angle and are continuously adjusted to the steering wheel movements.

Turning radius lines



Turning radius lines can only be superimposed on the camera image together with pathway lines.


Turning radius lines show the course of the smallest possible turning radius on a level road.

Only one turning radius line is displayed after the steering wheel is turned past a certain angle.

Parking using pathway and turning radius lines

- Position the vehicle so that the red turning radius line leads to within the limits of the parking space.
- Turn the steering wheel to the point where the green pathway line covers the corresponding turning radius line.

Obstacle marking

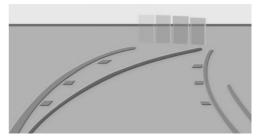

Obstacles behind the vehicle are detected by the PDC sensors.

Obstacle markings can be shown in the camera image.

The colored thresholds of the obstacle markings match the markings of the PDC.

Vehicle wash view



The vehicle wash view assists when entering a vehicle wash by displaying the floor and the vehicle's own track.

Side protection

Concept

To protect the sides of the vehicle, obstacle markings are displayed on the vehicle at the sides.

- No markings: no obstacles were detected.
- Color markings: warning against detected obstacles.

Limits of side protection

The system only displays stationary obstacles that were previously detected by sensors while passing them.


The system does not detect whether an obstacle moves later on. For this reason, at standstill, the markings are not shown anymore in the display after a certain time. The area next to the vehicle must be newly captured.

Door opening angle

Concept

The system indicates fixed obstacles that obstruct the opening angles of the doors.

The system does not provide a warning of approaching traffic.

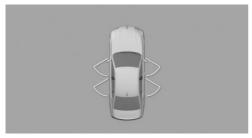

Steptronic transmission: the maximum opening angles of the doors are displayed in selector lever position P.

As soon as the vehicle begins moving, the opening angles are replaced by parking aid lines

Limits of the display

The vehicle surroundings are displayed with distorted image for technical reasons.

Even if the symbols for the door opening angles do not cross other objects on the Control Display, the following needs to be noted when parking next to other objects:

Because of the perspective, higher, protruding objects may be closer than they appear on the Control Display.

Panorama View

Concept



The system provides an early look at cross traffic at blind driveways and intersections.

General information

Road users concealed by obstacles to the left and right of the vehicle can only be detected relatively late from the driver's seat. The cameras in the front and rear capture the sideways traffic area to improve the view.

Yellow lines in the screen display mark the front and rear end of the vehicle.

The camera image shows different levels of distortion in some areas and is thus not suitable for distance estimations.

Display on the Control Display



Press the button when the engine is running.

Depending on the driving direction, the image of the respective camera is displayed:

- "front": front camera image.
- "rear": rear camera image.

If the vehicle is appropriately equipped, the crossing traffic warning, refer to page 205, can additionally warn against oncoming vehicles using radar sensors.

With navigation system: activation points

Concept

Positions at which Panorama View is to switch on automatically can be stored as activation points as soon as a GPS signal is received.

General information

Up to ten activation points can be stored.

Activation points can be used when driving forward for the front camera.

Storing activation points

- 1. Drive to the position at which the system is to be switched on, and stop.
- 2. Press button.
- 3. Move the controller to the left.
- 4. *C* "Add activation point"

 The current position is displayed.
- 5. "Add activation point"

Activation points are, if possible, stored with town/city and street address, or else with the GPS coordinates.

Using activation points

The use of activation points can be switched on and off.

- 1. Press button.
- 2. Move the controller to the left.
- 3. 🚳 "Settings"

- 4. "Panorama view, GPS-based"
- 5. "Panorama view, GPS-based"

Displaying activation points

- Press button.
- 2. Move the controller to the left.
- 3. 片子 "Show activation points"
 A list of all activation points is displayed.

Renaming or deleting activation points

- 1. Press button.
- 2. Move the controller to the left.
- 3. 片를 "Show activation points"
 A list of all activation points is displayed.
- 4. Select an activation point as needed.
- 5. ▷ "Rename"
 - "Delete this activation point"
 - ▶ "Delete all activation points"

Setting brightness and contrast

Brightness and contrast can be adjusted with Surround View or Panorama View switched on.

Via iDrive:

- 1. Move the controller to the left.
- ≥ ☼ "Brightness"
 - ▶ "Contrast"
- Set the desired value.

Functional limitations

The system can be used only to a limited extent in the following situations:

- In poor light.
- In case of soiled cameras.
- With a door open.
- With the tailgate open.
- With exterior mirrors folded in.

Gray hatched areas with symbol, for instance open door, in the camera image mark areas that are currently not displayed.

System limits

Non-visible areas

Because of the camera angle, the areas under the vehicle cannot be viewed by the cameras.

Detection of objects

Very low obstacles as well as high, protruding objects such as ledges may not be detected by the system.

Assistance functions also take into account data of the PDC.

Observe, refer to page 183, the notes in the PDC Park Distance Control chapter.

The objects displayed on the Control Display may be closer than they appear. Do not estimate the distance from the objects on the display.

Malfunction

A camera malfunction is displayed on the Control Display.



A yellow symbol is displayed and the recording range of the malfunctioning camera is displayed in black on the

Control Display.

Remote View 3D

Concept

Using the BMW Connected App and the camera images from Surround View, the vehicle surroundings can be displayed on a mobile device, e.g., a smartphone.

The function displays a momentary view of the situation.

Functional requirements

- Data transmission must be activated, refer to page 39.
- BMW Connected App must be installed on the mobile device.

Switching the function on/off

Using iDrive:

- With the standby state switched on: "My Vehicle"
- "iDrive settings"
- "Data privacy"
- 4. "Remote View 3D"


Functional limitations

The system may not be fully functional or may not be available at all in the following situations:

- ▶ In poor light.
- In case of soiled cameras.
- With a door or the tailgate open. Dark fields in the display indicate areas that are not recorded by the system.
- With exterior mirrors folded in.
- When other camera functions are being performed in the vehicle.
- When the vehicle moves faster than walking speed.
- ▶ It may not be possible to use the function in every country.
- For reasons of data protection, the function can only be used three times within two hours.

Parking assistant

Concept

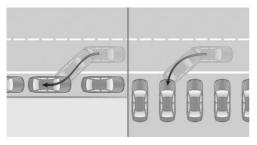

The system supports parking in the following situations:

- When parking parallel to the road.
- When reverse parking diagonally to the road.

General information

Handling

Parking assistant handling is divided into three steps:

- Switching on and activating.
- Parking space search.
- Parking.

System status and instructions on required actions are displayed on the Control Display.

Ultrasound sensors measure parking spaces on both sides of the vehicle.

Steptronic transmission

The parking assistant calculates the best possible parking line and takes control of the following functions during the parking procedure:

- Steering.
- Accelerating and braking.
- Changing the gears.

Press and hold the park assistance button for the duration of the parking procedure. Parking is automatic.

Remote Control Parking

The vehicle can be remotely parked and driven out, refer to page 201, in reverse if suitable forward-parking spaces are available.

Safety information

★ WARNING

The system does not release from the personal responsibility to correctly assess the traffic situation. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations.

NOTE

The parking assistant can steer the vehicle over or onto curbs. There is a risk of property damage. Watch traffic closely and actively intervene in the respective situations.

The safety information of the PDC Park Distance Control, refer to page 183, applies in addition.

Overview

Button in the vehicle





Park assistance button

Ultrasound sensors



With the four side ultrasound sensors, arrows, and the ultrasound sensors of the PDC in the bumpers, the parking spaces are measured and the distances to obstacles determined.

Functional requirements

Ultrasound sensors

Ensure full functionality:

- Do not cover sensors, for instance with stickers.
- Keep the sensors clean and unobstructed.

For measuring parking spaces

- Maximum speed while driving forward approx. 22 mph/35 km/h.
- Maximum distance to row of parked vehicles: 5 ft/1.5 m.

Suitable parking space

General information:

- Gap behind an object that has a min. length of 1.7 ft/0.5 m.
- ▶ Gap between two objects with a minimum length of approx. 1.7 ft/0.5 m.

Parallel parking to the road:

- Min. length of gap between two objects: your vehicle's length plus approx.
 2.6 ft/0.8 m.
- Minimum depth: approx. 5 ft/1.5 m.

Diagonal parking:

- Minimum width of the gap: own vehicle's width plus approx. 2.3 ft/0.7 m.
- ➤ Minimum depth: your vehicle's length. The depth of diagonal parking spaces must be estimated by the driver. Due to technical limitations, the system is only able to approximate the depth of diagonal parking spaces.

For parking

- Doors and tailgate are closed.
- The parking brake is released.

Steptronic transmission:

Driver's safety belt is fastened.

Switching on and activating

Switching on with the button



Press park assistance button.

The LED lights up.

The current status of the parking space search is indicated on the Control Display.

Parking assistant is activated automatically.

Switching on with reverse gear

Shift into reverse.

The current status of the parking space search is indicated on the Control Display.

To activate: Po "Parking Assistant"

Display on the Control Display

System activated/deactivated

Symbol	Meaning
°€	Gray: the system is not available. White: the system is available but not activated.
P⊚v	The system is activated.

Parking space search and system status



- Symbol P on the vehicle image: the parking assistant is activated and the parking space search is active.
- Control Display shows suitable parking spaces at the edge of the road next to the vehicle symbol. When the parking assistant is active, suitable parking spaces are highlighted in color and a signal sounds. Switch signal tone on/off, refer to page 200.
- If a diagonal or parallel parking space is clearly detected, the system automatically adjusts the suitable parking method. In the case of parking spaces suitable for parallel and diagonal parking, a selection menu is displayed. In this case, the desired parking method must be selected manually.

The parking procedure is active. Steering control has been taken over by system.

Parking space search is always active whenever the vehicle is moving forward slow and straight, even if the system is deactivated. When the system is deactivated, the displays on the Control Display are shown in gray.

Parking using the parking assistant

Parking

- 1. Press the park assistance button or shift into reverse gear to switch the parking assistant on, refer to page 198. Activate the parking assistant, if needed.
 - Parking assistant is activated.
- Drive by the row of parked vehicles at a speed of up to approx. 22 mph/35 km/h and at a distance of maximum 5 ft/1.5 m.
 - The status of the parking space search and possible parking spaces are displayed on the Control Display, refer to page 199.
- Follow the instructions on the Control Display.
 - Steptronic transmission:
 - Press and hold the park assistance button for the duration of the parking procedure. At the end of the parking procedure, the P selector lever position is set.
 - The end of the parking procedure is indicated on the Control Display.
- Adjust the parking position yourself, if needed.

Interrupting manually

The parking assistant can be interrupted at any time:

- Steptronic transmission: release the park assistance button during the parking procedure.
- ▶ Parking Assistant" Select the symbol on the Control Display.

Interrupting automatically

The system is interrupted automatically in the following situations:

▶ If the driver grasps the steering wheel or takes over steering.

- Possibly on snow-covered or slippery road surfaces.
- When there are obstacles that are hard to overcome, such as curbs.
- When there are obstacles that suddenly appear.
- ▶ If the Park Distance Control PDC displays clearances that are too small.
- If a maximum number of parking attempts or the time taken for parking is exceeded.
- When switching to another function on the Control Display.

Steptronic transmission:

- ▶ When the park assistance button is released.
- If the tailgate is open.
- If doors are open.
- When setting the parking brake.
- During acceleration.
- When the brake pedal remains pressed for an extended period while the vehicle is stationary.
- When unfastening the driver's safety belt.

A Check Control message is displayed.

Resuming

An interrupted parking procedure can be continued, if needed.

Reactivate the parking assistant, refer to page 198, and follow the instructions on the Control Display.

Switching off

The system can be switched off manually:



Press park assistance button.

Switching signal tone for suitable parking spaces on/off

Using iDrive:

- "My Vehicle"
- "Vehicle settings"
- 3. "Parking"
- 4. "Parking Assistant"
- "Sound if parking space detected"

The setting is stored for the driver profile currently used.

System limits

Safety information

WARNING

The system can react incorrectly or not at all due to the system limits. There is a risk of accidents or risk of property damage. Observe the information regarding the system limits and actively intervene, if needed. ◄

No parking assistance

The parking assistant does not offer assistance in the following situations:

- In tight curves.
- For diagonal parking spaces.

Functional limitations

The system may not be fully functional in the following situations:

- On bumpy road surfaces such as gravel roads.
- On slippery ground.
- On steep uphill or downhill grades.
- With accumulations of leaves/snow in the parking space.
- With a mounted emergency wheel.
- In case of changes to an already-measured parking space.

With ditches or edges, e.g., an edge of a port.

Limits of ultrasonic measurement

Ultrasonic measurements might not function in the following situations:

- For small children and animals.
- For persons with certain clothing, e.g., coats.
- With external interference of the ultrasound, e.g., from passing vehicles or loud machines.
- When sensors are dirty, iced over, damaged or out of position.
- Under certain weather conditions such as high relative humidity, rain, snowfall, extreme heat or strong wind.
- With tow bars and trailer couplings of other vehicles.
- ▶ With thin or wedge-shaped objects.
- With moving objects.
- With elevated, protruding objects such as ledges or cargo.
- With objects with corners, edges, and smooth surfaces.
- With objects with a fine surface structure such as fences.
- For objects with porous surfaces.
- If cargo protrudes.
- With small and low objects, e.g., boxes.
- With obstacles and persons at the edge of the lane.
- With soft obstacles or obstacles covered in foam material.
- With plants and bushes.
- Low objects already displayed, e.g., curbs, can move into the blind area of the sensors before or after a continuous tone sounds.
- Cargo that extends beyond the perimeter of the vehicle is not taken into account by the system.

Parking spaces that are not suitable may be detected or suitable parking spaces may not be detected at all.

Malfunction

A Check Control message is displayed.

The parking assistant failed. Have the system checked by a dealer's service center or another qualified service center or repair shop.

Remote Control Parking

Concept

The vehicle can be remotely parked and driven out in reverse in the case of suitable forward-parking spaces, e.g., a garage. The driver is not in the vehicle, but controls the parking procedure responsibly from the outside using the BMW display key, refer to page 57.

Stop the vehicles manually in the case of obstacles.

Using the BMW display key, the vehicle can be moved by approx. 1.5 times the vehicle length. The speed does not exceed 1.1 mph/1.8 km/h.

General information

The following systems are included in the system:

- Parking assistant, refer to page 197.
- ▶ BMW display key, refer to page 57.
- PDC Park Distance Control, refer to page 183.

Button on the BMW display key: the button on the side of the BMW display key must be pressed and held for the duration of the parking procedure so that the vehicle can move. Release the button for obstacles to manually stop the vehicle. The vehicle stops with emergency braking.

If the ultrasound sensors detect obstacles in the parking space or the end of the parking space, the system automatically stops the vehicle as needed.

The headlight is switched on for the duration of the procedure.

Safety information

WARNING

The system does not release from the personal responsibility to correctly assess traffic and parking situation. Based on the limits of the system, it cannot independently react to all situations. There is a risk of an accident. Watch traffic and parking situation closely and actively intervene in the respective situations.

WARNING


Unauthorized persons, e.g., children, can move the vehicle using the BMW display key without anybody in the vehicle. There is a risk of an accident. Protect the BMW display key against unauthorized use.

NOTE

The parking assistant can steer the vehicle over or onto curbs. There is a risk of property damage. Watch traffic closely and actively intervene in the respective situations.

Overview


Ultrasound sensors

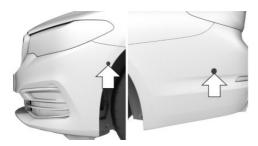

With the four side ultrasound sensors, arrows, and the ultrasound sensors of the PDC in the bumpers, the parking spaces are measured and the distances to obstacles determined.

Cameras

In addition to the ultrasonic sensors, the parking situation during Remote Control Parking is detected using four cameras.

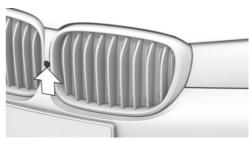

Front camera.



Rearview camera.



One camera is located at the bottom of each exterior mirror housing.


Functional requirements

Cameras and ultrasound sensors

 Do not cover sensors, for instance with stickers.

- Keep sensors clean and unobstructed.
 Clean them as needed.
- Keep camera lenses clean and unobstructed. Clean them as needed.

Suitable parking space

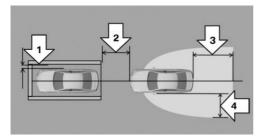

- It is possible to forward-park into the parking space in a straight, centered line.
- Width of the parking space: vehicle's own width without exterior mirrors, plus approx. 1.3 ft/0.4 m on each side, arrow 1.
- Distance to parking space, max. 6.5 ft/2 m, arrow 2.
- The driver with the BMW display key is outside the vehicle during Remote Control Parking.

Maximum distance to the vehicle:

- ▶ Behind the vehicle, approx. 10–13 ft/3– 4 m, arrow 3.
- ▶ To the side of the vehicle, approx.5 ft/1.5 m, arrow 4.
- Uphill or downhill grades max. 5 %.
- No duplex garages.

Forward parking

Parking

While driving forward, the system applies minor steering corrections as needed.

- Approach the parking space driving forward, centered and in a straight line. Stop at a distance of maximum 6.5 ft/2 m.
- Apply parking brake and switch drive-ready state off using the Start/Stop button.
- Have all occupants exit and close the doors.
- If necessary, switch on the display on the BMW display key, refer to page 57, and cancel the display block.
 - On the BMW display key, change to the menu: "R/C parking"
- 5. Press and hold the button on the side of the BMW display key for the duration of the parking procedure.
- Wait, until function readiness is indicated on the display. Observe possible SMS text messages.
- "ENGINE START": Touch button. The engine starts.
- 8. To start the parking procedure: touch the arrow symbol for "drive forward" on the display.
 - Press and hold the button: the vehicle moves as long as the button is pressed. Release the button for obstacles within the driving range to stop the vehicle.
 - For approach movements: touch the arrow symbol for "drive backward".
- At the end of the parking procedure, release the button on the side of the BMW display key. The vehicle stops.
 - "ENGINE STOP": Touch button. The engine is switched off.

Lock the vehicle.

The parking brake is engaged and driveready state switched off.

Cancel, pause, continue the parking procedure

To cancel or pause the parking procedure: PRelease button. The vehicle stops with emergency braking.

To resume the parking procedure: press the button again within 30 seconds.

Driving out in reverse

Driving out of parking spaces

When driving in reverse, the vehicle drives backward in a straight line without steering.

- If necessary, switch on the display on the BMW display key, refer to page 57, and cancel the display block.
- 2. Unlock the vehicle.
- On the BMW display key, change to the menu: "R/C parking"
- 4. Press and hold the button on the side of the BMW display key for the duration of the parking procedure.
- Wait, until function readiness is indicated on the display. Observe possible SMS text messages.
- 6. "ENGINE START": Touch button. The engine starts.
- To start the reversing out procedure: touch the arrow symbol for "drive backward" on the display.
 - Press and hold the button: the vehicle moves as long as the button is pressed. Release the button for obstacles within the driving range to stop the vehicle.
- 8. At the end of the reversing out procedure, release the button on the side of the BMW display key. The vehicle stops.
- "ENGINE STOP": Touch button. The engine is switched off.
 - The parking brake is engaged and driveready state switched off.

Lock vehicle if it is unlocked.

Cancel, pause, continue the parking procedure

To cancel or pause the parking procedure: Pause button. The vehicle stops with emergency braking.

To resume the parking procedure: press the button again within 30 seconds.

Messages on the BMW display key



The symbol identifies system messages.

System limits

Safety information

WARNING

The system can react incorrectly or not at all due to the system limits. There is a risk of accidents or risk of property damage. Observe the information regarding the system limits and actively intervene, if needed. ◄

No parking assistance

The parking assistant does not offer assistance in the following situations:

- In tight curves.
- For diagonal parking spaces.

Functional limitations

The system may not be fully functional in the following situations:

- On bumpy road surfaces such as gravel roads.
- On slippery ground.
- On steep uphill or downhill grades.
- With accumulations of leaves/snow in the parking space.
- With a mounted emergency wheel.
- ▷ In case of changes to an already-measured parking space.

With ditches or edges, e.g., an edge of a port.

Function restrictions due to radio interference

In the case of radio interference, function restrictions may occur, refer to page 60, during Remote Control Parking with the BMW display key.

Limits of ultrasonic measurement

Ultrasonic measurements might not function in the following situations:


- For small children and animals.
- For persons with certain clothing, e.g., coats.
- With external interference of the ultrasound, e.g., from passing vehicles or loud machines.
- When sensors are dirty, iced over, damaged or out of position.
- Under certain weather conditions such as high relative humidity, rain, snowfall, extreme heat or strong wind.
- With tow bars and trailer couplings of other vehicles.
- With thin or wedge-shaped objects.
- With moving objects.
- With elevated, protruding objects such as ledges or cargo.
- With objects with corners, edges, and smooth surfaces.
- With objects with a fine surface structure such as fences.
- For objects with porous surfaces.
- If cargo protrudes.
- With small and low objects, e.g., boxes.
- With obstacles and persons at the edge of the lane.
- With soft obstacles or obstacles covered in foam material.

- With plants and bushes.
- Low objects already displayed, e.g., curbs, can move into the blind area of the sensors before or after a continuous tone sounds.
- Cargo that extends beyond the perimeter of the vehicle is not taken into account by the system.

Parking spaces that are not suitable may be detected or suitable parking spaces may not be detected at all.

Crossing traffic warning

Concept

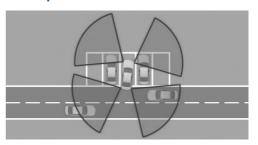

Two radar sensors in the rear bumper monitor the area behind the vehicle.

At blind driveways or when driving out of diagonal parking spaces, approaching cross traffic is detected sooner by the system than is possible from the driver's seat.

The system indicates approaching traffic.

The respective display is called up on the Control Display. A signal tone may sound and the lamp in the exterior mirror may flash.

With the respective equipment variant, the traffic area in front of the vehicle is monitored as well. Two additional radar sensors are located in the front bumpers.

Safety information

WARNING

The system does not release from the personal responsibility to correctly assess visibility and traffic situation. There is a risk of an accident. Adjust the driving style to the traffic conditions. Watch traffic closely and actively intervene in the respective situations. ◄

Overview


Button in the vehicle





Park assistance button

Radar sensors

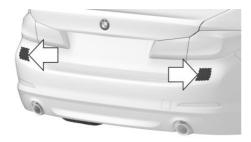

The radar sensors are located in the rear bumper.




With the respective equipment variant, there are two additional radar sensors in the front bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

Switching on/off

Activating/deactivating the system

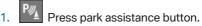

- 2. Move the controller to the left.
- 3. 🚳 "Settings"
- 4. "Cross traffic alert"
- 5. "Cross traffic alert"

Switching on automatically

If the system is activated on the Control Display, it is automatically switched on as soon as PDC or Panorama View is active and a gear is engaged.

If reverse gear is engaged, the rear system is switched on.

If the vehicle is equipped accordingly, the front system is switched on when a forward gear is engaged.

Switching off automatically

The system is automatically switched off in the following situations:

When the speed exceeds walking speed.

- With the steering and lane control assistant active: when a certain driving distance is exceeded.
- With an active parking operation of the parking assistant.

WARNING

Light in the exterior mirror




The light in the exterior mirror flashes if vehicles are detected by the rear sensors and your own vehicle is moving backwards.

Display in the PDC view



The respective boundary area in the PDC view flashes red, if vehicles are detected by the sensors.

Display in the camera view

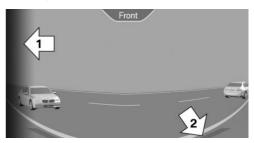

The respective boundary area, arrow 1, in the camera view flashes red, if vehicles are detected by the sensors.

Yellow lines, arrow 2, mark the bumper of your own vehicle.

Acoustic warning

In addition to the optical indicator, a warning signal sounds if your own vehicle moves into the respective direction.

System limits

The system may not be fully functional in the following situations:

- ▶ If the speed of the approaching vehicle is very high.
- ▶ In heavy fog, rain or snowfall.
- In tight curves.
- If the bumper is dirty or iced up, or covered with stickers.
- ▶ If cargo protrudes.
- If crossing objects move at a very slow speed.
- ▶ If other objects are in the capture range of the sensors, that hide cross traffic.

Driving comfort

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Dynamic Damping Control

Concept

This system reduces undesirable vehicle motion when using a dynamic driving style or traveling on uneven road surfaces.

This enhances the driving dynamics and driving comfort depending on the road surface condition and driving style.

General information

The system offers several different damping settings.

These are assigned to the different driving modes of the Driving Dynamics Control, refer to page 112.

Driving mode	Damper tuning
SPORT SPORT PLUS	firm
COMFORT ECO PRO	balanced out

Adaptive Drive

Concept

Adaptive Drive is an actively controlled chassis/suspension. The system increases driving comfort and minimizes the lateral tilt when driving around curves.

General information

For active control, this system uses the available information, for instance from the navigation system or the driving style analysis.

In particular in the ADAPTIVE driving mode, refer to page 114, this information is used to influence the Dynamic Damping Control and the active roll stabilization, refer to page 208, control. This further increases both the agility of the vehicle as well as the lane stability.

Active roll stabilization

Concept

The system reduces the lateral inclination of the vehicle that occurs during rapid driving in curves or during quick evasive maneuvers.

The lateral inclination of the vehicle is balanced out by permanent adjustment on the front and rear axles. The vehicle is thus always stabilized.

Agility and driving comfort are increased under all driving conditions.

General information

The system offers several different tunings.

These are assigned to the different driving modes of the Driving Dynamics Control, refer to page 112.

Driving mode	Tuning
COMFORT	comfortable
SPORT	firm
SPORT PLUS	

Climate control

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Automatic climate control

Overview

Buttons in the center console



Climate control functions

Button	Function
AUTO	Temperature, refer to page 211.
A/C	Climate control operation, refer to page 211.
MAX A/C	Maximum cooling, refer to page 211.

Button	Function
AUTO	AUTO program, refer to page 211.
\$	Recirculated-air mode, refer to page 212.
SOFF SS	Air flow, manual, refer to page 213.
فر≡	Air distribution, manual, refer to page 213.
SYNC	SYNC program, refer to page 213.
MAX	Defrost and defog window, refer to page 213.
<u>[fff]</u>	Rear window defroster, refer to page 214.
Æ	Active seat ventilation, refer to page 91.
##	Seat heating, refer to page 91.
MENU	Open the Climate menu.

Climate control functions in detail

Switching on/off

Switching on

Press any button except for the following:

- Rear window defroster.
- Left side of air flow button.
- SYNC program.
- Seat heating.
- Seat ventilation.

Switching off

When equipped with automatic climate control with enhanced features:

Complete system:



Press and hold the left button on the driver's side until the system switches off.

On the front passenger side:



Press and hold the left button on the front passenger side.

Temperature

Concept

The automatic climate control achieves the set temperature as quickly as possible, if needed. by using the maximum cooling or heating capacity, and then keeps it constant.

Settings



Turn the ring to set the desired temperature.

Do not rapidly switch between different temperature settings. Otherwise, the automatic cli-

mate control will not have sufficient time to adjust the set temperature.

Display

!!! Symbol is displayed permanently on the display of the automatic climate control.

Air conditioning

Concept

The air in the vehicle's interior will be cooled and dehumidified and, depending on the temperature setting, warmed again.

The vehicle's interior can only be cooled with the drive-ready state switched on.

Switching on/off

Press button.

The LFD is illuminated with air conditioning switched on.

Air conditioning is switched on with the engine runnina.

Depending on the weather, the windshield and side windows may fog up briefly when driveready state is switched on.

The cooling function is switched on automatically with the AUTO program.

When using the automatic climate control. condensation water develops and collects underneath the vehicle.

Maximum cooling

Concept

The system is set to the lowest temperature, optimum air flow and recirculated-air mode with the drive-ready state switched on.

General information

The function is available with external temperatures above approx. 32 °F/0 °C and with the drive-ready state switched on.

Switching on/off

MAX AIC

Press button.

The LED is illuminated with the system switched on.

Air flows out of the vents to the upper body region. The vents need to be open for this.

Adjust air flow on the driver's side with the program active.

AUTO program

Concept

Depending on the selected temperature, the intensity of the AUTO program, and outside influences, the air is directed to the windshield,

side windows, upper body, and into the floor area.

Switching on/off

Press button.

The LED is illuminated with the AUTO program switched on.

Air flow, air distribution and temperature are controlled automatically.

The cooling function, refer to page 211, is switched on automatically with the AUTO program.

At the same time, a condensation sensor controls the program so as to prevent window condensation as much as possible.

The AUTO program is switched off automatically, when manual air distribution is set.

Intensity

With the AUTO program activated, the automatic intensity control can be changed.



Press the left or right side of the button: decrease or increase intensity.

The selected intensity is shown on the display of the automatic climate control.

Automatic recirculated-air control AUC

Concept

The automatic recirculated-air control AUC recognizes odors or pollutants in the outside air. The outside air supply is shut off and the interior air is recirculated.

General information

If the system is activated, a sensor detects pollutants in the outside air and controls the shutoff automatically.

If the system is deactivated, outside air continuously flows into the vehicle's interior.

With constant recirculated-air mode, the air quality in the vehicle's interior deteriorates and the fogging of the windows increases.

Switching on/off

Press button.

The LED lights up if the system is switched on using the button.

If there is window condensation, switch off the recirculated-air mode and press the button on the driver's side to utilize the condensation sensor. Make sure that air can flow to the windshield.

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Climate functions"
- 4. "Air quality"
- 5. "Automatic air recirculation"

Recirculated-air mode

Concept

You may react to unpleasant odors or pollutants in the immediate environment by temporarily suspending the supply of outside air. The system then recirculates the air currently within the vehicle.

Operation



Press button repeatedly to select an operating mode:

- ▶ LED off: outside air flows in continuously.
- ▶ LED on: the supply of outside air is permanently shut off.

With constant recirculated-air mode, the air quality in the vehicle's interior deteriorates and the fogging of the windows increases.

AUTO If there is window condensation, switch off the recirculated-air mode and press the button on the driver's side to uti-

lize the condensation sensor. Make sure that air can flow to the windshield.

Controlling the air flow manually

Concept

The air flow for climate control can be adjusted manually.

General information

To manually adjust air flow turn off AUTO program first.

Operation



Press the left or right side of the button: decrease or increase air flow.

The selected air flow is shown on the display of the automatic climate control.

The air flow of the automatic climate control may be reduced automatically to save battery power.

Controlling the air distribution manually

Concept

The air distribution for climate control can be adjusted manually.

Operation



Press button repeatedly to select a program:

- Windows, upper body region, and floor area.
- Upper body region and floor area.
- Floor area.
- Windows and floor area.
- Windows.
- Windows and upper body.
- Upper body region.

The selected air distribution is shown on the display of the automatic climate control.

If there is window condensation, press the button on the driver's side to utilize the condensation sensor.

SYNC program

Concept

Depending on the equipment, the following settings of the driver's side can be transferred to the front-passenger side and the rear:

- Temperature.
- Air flow.
- Air distribution.
- AUTO program.

Switching on/off



Press button.

The LED is illuminated with the SYNC program switched on.

The program is switched off automatically if the settings on the front passenger side or in the rear are changed.

Defrosting windows and removing condensation

Concept

Ice and condensation are quickly removed from the windshield and the front side windows.

Switching on/off



Press button.

The LED is illuminated with the system switched on.

Point the side vents towards the side windows, as needed.

The air flow can be adjusted manually with the system switched on.

AUTO If there is window condensation, press the button on the driver's side or switch on air conditioning to utilize the con-

Rear window defroster

densation sensor.

Press button. The LED lights up.
The function is available with the engine running.

The rear window defroster switches off automatically after a certain period of time.

Microfilter/activated-charcoal filter

The microfilter removes dust and pollen from the incoming air.

The activated-charcoal filter removes gaseous pollutants from the outside air that enters the vehicle.

Have this combined filter changed during vehicle maintenance, refer to page 294.

Ventilation

Concept

The air flow directions can be individually adjusted.

Adjusting the ventilation

General information

The air flow directions can be adjusted for direct or indirect ventilation.

Direct ventilation


The air flow is directed towards the passengers. The air flow heats or cools noticeably, depending on the adjusted temperature.

Indirect ventilation

The air flow is not directed towards the passengers. The vehicle interior is warmed or cooled indirectly, depending on the set temperature.

Front ventilation

Overview

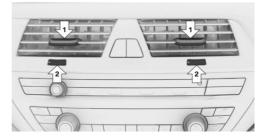

- Lever for changing the air flow direction, arrow 1.
- ► Thumbwheel for variable opening and closing of the vents, arrow 2.

Setting the temperature


The temperature of the ventilation in the upper body area can be varied.

Using iDrive:

- 1. "My Vehicle"
- "Vehicle settings"
- 3. If necessary, "Climate functions"
- 4. "Temperature adjustment, upper body"
- 5. Set the desired temperature.
 - ▶ Toward blue: colder.
 - Toward red: warmer.

This does not change the set interior temperature for the driver and front passenger.

Ventilation in rear, center

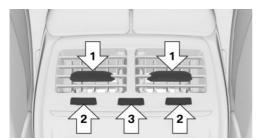


- Lever for changing the air flow direction, arrow 1.
- ➤ Thumbwheel for variable opening and closing of the vents, arrow 2.
- Thumbwheel for varying the temperature, arrow 3.

Toward blue: colder.

Toward red: warmer.


Ventilation in the rear, on the side

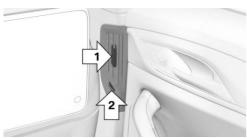

- Lever for changing the air flow direction, arrow 1.
- ▶ Thumbwheel for variable opening and closing of the vents, arrow 2.

Rear automatic climate control

Overview

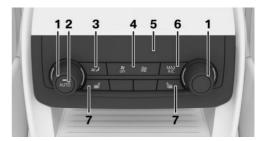

- 1 Temperature
- 2 AUTO program
- 3 Air distribution, manual
- 4 Air flow, AUTO intensity
- 5 Display
- 6 Maximum cooling
- 7 Seat heating 91

Climate control functions in detail

Switching on/off

Via iDrive

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Climate functions"
- 4. "Rear climate"

The rear automatic climate control is not ready for operation if the automatic climate control is switched off or if the function for defrosting the windows and removing condensation is active.

Using the button: switching on

Press any button except for the following:

- Left side of air flow button.
- Seat heating.

Using the button: switching off



Press and hold the left side of the button.

Temperature

Concept

The automatic climate control achieves the set temperature as quickly as possible, if needed, by using the maximum cooling or heating capacity, and then keeps it constant.

Settings



Turn the ring to set the desired temperature.

Do not rapidly switch between different temperature settings. Otherwise, the automatic cli-

mate control will not have sufficient time to adjust the set temperature.

Display

!!! Symbol is displayed permanently on the display of the automatic climate control.

Maximum cooling

Concept

The system is set to the lowest temperature, optimum air flow and recirculated-air mode with the drive-ready state switched on.

General information

The function is available with external temperatures above approx. 32 °F/0 °C and with the drive-ready state switched on.

Switching on/off



Press button.

The LED is illuminated with the system switched on.

Air flows out of the vents to the upper body region. The vents need to be open for this.

AUTO program

Concept

Depending on the selected temperature, the AUTO intensity, and outside influences, the air is directed to the upper body and into the floor area.

Switching on/off



Press button.

The LED is illuminated with the AUTO program switched on.

Air flow, air distribution, and temperature are controlled automatically:

The cooling function is switched on automatically with the AUTO program.

Intensity

With the AUTO program activated, the automatic intensity control can be changed:



Press the left or right side of the button: decrease or increase intensity.

The selected intensity is shown on the display of the automatic climate control.

Controlling the air flow manually

Concept

The air flow for climate control can be adjusted manually.

General information

To manually adjust air flow turn off AUTO program first.

Operation



Press the left or right side of the button: decrease or increase air flow. The selected air flow is shown on the display of the automatic climate control.

Controlling the air distribution manually

Concept

The air distribution for climate control can be adjusted manually.

Operation



Press button repeatedly to select a program:

- Upper body region.
- Upper body region and floor area.
- Floor area.

Parked-vehicle ventilation

Concept

The parked-vehicle ventilation ventilates the vehicle's interior. Depending on set temperature and ambient temperature, the vehicle's interior is cooled or possibly heated using the residual engine heat.

General information

The system can be switched on and off directly or via a pre-set departure time.

The activation time is determined based on the external temperature. The system promptly switches on before the selected departure time.

Functional requirements

- ➤ The vehicle is in idle state or standby state and not in drive-ready state.
- Battery is sufficiently charged.
 If parked-vehicle ventilation is switched on, the vehicle battery will be discharged.
 Thus, limit the maximum activation time to save the vehicle battery. The system will

- be available again after engine starting and/or a short trip.
- Make sure that the vehicle's date and time are set correctly.
- Open the vents to allow air to flow out.

Switching on/off directly

General information

There are different ways to switch the system on or off.

The system switches off automatically after a certain period of time. The system continues to run for some time after being switched off.

Using the button

When the vehicle is in standby state, the system can be switched on or off via the automatic climate control buttons.

Press any button except:

- Rear window defroster.
- Left side of air flow button.
- Seat heating.
- Seat ventilation.
- SYNC program.

Via iDrive

- 1. "My Vehicle"
- "Vehicle settings"
- 3. If necessary, "Climate functions"
- "Comfort ventilation" or "Comfort heating/ ventilation"
- "Activate now"

Via BMW display key

Switching on

- Switch on the display of the BMW display key.
- 2. "Precondit. setting"
- 3. Tap on the \mathscr{A} or \mathscr{A} symbol.

- 4. "Activate now"
- 5. "Start"

Switching off

- Switch on the display of the BMW display key.
- 2. "Precondit. setting"
- 3. Tap on the \mathscr{S} or \mathscr{S} symbol.
- 4. "Stop"

Display

& symbol on the automatic climate control indicates the system is switched on.

REST is displayed on the automatic climate control. The residual engine heat is used.

Departure time

Different departure times can be adjusted to ensure a comfortable interior temperature in the vehicle at the time of departure.

- One-time departure time: the time can be set.
 - The system is switched on once.
- Departure time with weekday: time and day of the week can be set.
 - On the desired weekdays, the system will be switched on promptly before the set departure time.

The departure time is preselected in two steps:

- Set departure times.
- Activate departure times.

Setting the departure time

Via iDrive

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Climate functions"
- "Comfort ventilation" or "Comfort heating/ ventilation"

- 5. Select the desired departure time.
- 6. Set the departure time.
- 7. Select day of the week, if needed.

Via BMW display key

- Switch on the display of the BMW display key.
- 2. "Precondit. setting"
- 3. Tap on the \mathscr{A} or \mathscr{A} symbol.
- 4. Select the desired departure time.
- 5. Set the departure time.
- 6. Select day of the week, if needed.
- 7. "OK"

Activating the departure time

Functional requirement

If a departure time is to influence the switching on of parked-vehicle ventilation, the respective departure time must be activated first.

Via iDrive

- "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Climate functions"
- "Comfort ventilation" or "Comfort heating/ ventilation"
- 5. "For departure time"
- 6. Activate the desired departure time.

Via BMW display key

- 1. Switch on the display of the BMW display key.
- 2. "Precondit. setting"
- 3. Tap on the \mathscr{A} or \mathscr{A} symbol.
- 4. Tap on symbol.
- 5. Activate the desired departure time.

So The symbol on the automatic climate control signals an activated departure time.

Ambient air package

Concept

The Ambient Air Package can be used to clean and scent the interior air with high-quality fragrances.

lonization is used to clean the air from suspended particles. Together with the selected fragrance, ionization contributes to well-being and relaxation while driving.

General information

Two different fragrances can be selected in the vehicle. A variety of other fragrances is possible by replacing the fragrance cartridges.

The following criteria can influence the perception of scents in the vehicle interior:

- Automatic climate control settings.
- Temperature and air humidity.
- Time of day and season.
- Physical condition of the vehicle occupants, for instance fatigue.

BMW recommends the use of genuine BMW fragrance cartridges.

The genuine BMW fragrance cartridges are not suitable for refilling. When a cartridge is empty, replace it with a new fragrance cartridge.

Safety information



Refilled genuine BMW fragrance cartridges can cause the emission of harmful substances, malfunctions, and damage to the system. There is a risk of injury or risk of property damage. Do not refill genuine fragrance cartridges. When a cartridge is empty, replace it with a new fragrance cartridge.

Ionization

Concept

lonization cleans the vehicle's interior air of suspended particles.

Switching on/off

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Climate functions"
- 4. "Ionization"

The climate control display indicates that ionization is switched on.

Fragrancing

General information

Fragrancing is done at intervals in order to avoid a habituation effect.

Two fragrance cartridges in the vehicle allow switching between the fragrances.

The fragrance cartridges are located in the glove compartment.

Functional requirements

- Fragrance cartridges are sufficiently filled.
- Interior temperature between 41 °F/+5 °C and 104 °F/+40 °C.

Selecting the fragrance

Two different fragrances can be selected in the vehicle.

Using iDrive:

- 1. "My Vehicle"
- "Vehicle settings"
- "Climate functions"
- 4. "Fragrance"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

Switching fragrancing on/off, adjusting intensity

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Climate functions"
- 4. "Fragrance"
- 5. "Level"
- 6. Select the desired setting.

Display

General information

With operation via button, the menu of the Ambient Air Package can be displayed on the Control Display automatically.

Settings

Further settings can be adjusted.

Using iDrive:

- "My Vehicle"
- 2. "Vehicle settings"
- "Climate functions"
- 4. "Fragrance"
- "Show fragrance setting"

The menu is shown on the Control Display.

Fragrance cartridge filling level

The illustrations on the Control Display show the actual filling level of the fragrance cartridges.

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Climate functions"
- 4. "Fragrance"

The fill level of the current fragrance is displayed.

5. Select the desired setting.

When an empty fragrance cartridge is indicated, the cartridge still contains a fluid carrying the fragrance. However, it is not sufficient for fragrancing.

When a fragrance cartridge requires replacement, a Check Control message is displayed

Inserting fragrance cartridges

The fragrance cartridges are located in the glove compartment.

- 1. Open the glove compartment, refer to page 230.
- Press on the bottom of the cartridge holder.

The cartridge holder slides down.



3. Remove the cover of the fragrance cartridge. Hold the cover on the top to slide it from the fragrance cartridge.



4. Insert the removed cover on the back side of the fragrance cartridge.



5. Position fragrance cartridge such that the chip faces away from the cartridge holder.



6. Insert the fragrance cartridge without pressure into the cartridge holder. The cartridge snaps lightly into place.



Push the cartridge holder up, until it engages.

Make sure that no objects press against the cartridge holder from below, otherwise the function of the ambient air package could be impacted.

8. Close the glove compartment.

Removing the fragrance cartridge

The fragrance cartridges are located in the glove compartment.

- 1. Open the glove compartment, refer to page 230.
- 2. Press on the bottom of the cartridge holder.

The cartridge holder slides down.



Pull desired fragrance cartridge from the holder.

Fragrance cartridge, arrow 1: first fragrance indicated on the Control Display.

Fragrance cartridge, arrow 2: second fragrance indicated on the Control Display.



4. Pull desired fragrance cartridge from the holder.



Recycling



Empty fragrance cartridges can be taken to a dealer's service center or another qualified service center or repair shop for recycling.

Interior equipment

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Universal Integrated Remote Control

Concept

The integrated Universal Remote Control in the interior mirror can operate up to 3 functions of remote-controlled systems, such as garage door drives or lighting systems.

General information

The Universal Integrated Remote Control replaces up to 3 different hand-held transmitters. To operate the remote control, the buttons on the interior mirror must be programmed with the desired functions. The hand-held transmitter for the particular system is required in order to program the remote control.

Before selling the vehicle, delete the stored functions for the sake of security.

Safety information

WARNING

Body parts can be jammed when operating remote-controlled systems, e.g., the garage door, using the integrated universal remote control. There is a risk of injury or risk of property damage. Make sure that the area of movement of the respective system is clear

during programming and operation. Also follow the safety instructions of the hand-held transmitter ◀

Compatibility



If this symbol is printed on the packaging or in the owner's manual of the system to be controlled, the system is


generally compatible with the Universal Integrated Remote Control.

If you have any questions, please contact:

- A dealer's service center or another qualified service center or repair shop.
- www.homelink.com on the Internet.

HomeLink is a registered trademark of Gentex Corporation.

Control elements on the interior mirror

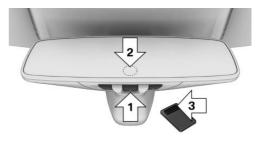

- Buttons, arrow 1.
- ▶ LED, arrow 2.
- ▶ The hand-held transmitter, arrow 3, is required for programming.

Programming

General information

- 1. Turn on standby state.
- 2. Initial setup:

Press and hold the two outer buttons on the interior mirror simultaneously for approximately 10 seconds until the LED flashes green rapidly. This erases all programming of the buttons on the interior mirror.

- 3. Press the interior mirror button to be programmed. The LED flashes orange.
- Hold the hand-held transmitter for the system to be controlled approx. 1 to 3 in/2.5 to 8 cm away from the buttons of the interior mirror. The required distance depends on the hand-held transmitter.
- Press and hold the button of the desired function on the hand-held transmitter. The LED on the interior mirror will begin flashing orange slowly.
- 6. As soon as the LED flashes green more rapidly or lights up continuously, release the button. Green light indicates that the button on the interior mirror has been programmed. Faster green flashing indicates that it is a rolling code wireless system.

If the LED does not flash faster after at least 60 seconds, change the distance between the interior mirror and the hand-held transmitter and repeat the step. Several more attempts at different distances may be necessary. Wait at least 15 seconds between attempts.

Canada: if programming with the handheld transmitter was interrupted, hold down the interior mirror button and repeatedly press and release the hand-held transmitter button for 2 seconds.

7. To program other functions on other buttons, repeat steps 3 to 5.

The systems can be controlled using the interior mirror buttons.

Special feature of the rolling code wireless system

If you are unable to operate the system after repeated programming, please check if the

system to be controlled features a rolling code radio system.

Read the system's owner's manual, or press the programmed button on the interior mirror longer. If the LED on the interior mirror starts flashing rapidly and then stays lit constantly for 2 seconds, the system features a rolling code radio system. Flashing and continuous illumination of the LED will repeat for approximately 20 seconds.

For systems with a rolling code radio system, the Universal Integrated Remote Control and the system also have to be synchronized.

Please read the owner's manual to find out how to synchronize the system.

Synchronizing is easier with the aid of a second person.

Synchronizing the universal remote control with the system:

- Park the vehicle within range of the remote-controlled system.
- Program the relevant button on the interior mirror as described.
- Locate and press the synchronizing button on the system being programmed. You have approx. 30 seconds for the next step.
- 4. Hold down the programmed button on the interior mirror for approximately 3 seconds and then release it. If necessary, repeat this step up to three times in order to finish synchronization. Once synchronization is complete, the programmed function will be carried out.

Reprogramming individual buttons

- 1. Turn on standby state.
- Press and hold the interior mirror button to be programmed.
- As soon as the interior mirror LED starts flashing slowly, hold the hand-held transmitter for the system to be controlled approx. 1 to 3 in/2.5 to 8 cm away from the buttons of the interior mirror. The required

distance depends on the hand-held transmitter.

- Likewise, press and hold the button of the desired function on the hand-held transmitter.
- Release both buttons as soon as the interior mirror LED flashes more rapidly or lights up continuously. The LED flashing more rapidly or being continuously lit up indicates that the button on the interior mirror has been programmed. The system can then be controlled by the button on the interior mirror.

If the LED does not flash faster after at most 60 seconds, change the distance and repeat the programming starting with step 4. Several more attempts at different distances may be necessary. Wait at least 15 seconds between attempts.

Canada: if programming with the handheld transmitter was interrupted, hold down the interior mirror button and repeatedly press and release the hand-held transmitter button for 2 seconds.

Operation

WARNING

Body parts can be jammed when operating remote-controlled systems, e.g., the garage door, using the integrated universal remote control. There is a risk of injury or risk of property damage. Make sure that the area of movement of the respective system is clear during programming and operation. Also follow the safety instructions of the hand-held transmitter.

The system, such as the garage door, can be operated using the button on the interior mirror while the drive-ready or standby state is switched on. To do this, hold down the button within receiving range of the system until the function is activated. The interior mirror LED stays lit while the wireless signal is being transmitted.

Deleting stored functions

Press and hold the two outer buttons on the interior mirror simultaneously for approximately 10 seconds until the LED on the interior mirror flashes green rapidly. All stored functions will be deleted. The functions cannot be deleted individually.

Sun visor

Glare shield

Fold the sun visor down or up.

Vanity mirror

A vanity mirror is located in the sun visor behind a cover. When the cover is opened, the mirror lighting switches on.

Ashtray

Front center console

Opening

1. Push the cover forward until it engages.



2. The ashtray is located in a cup holder. Fold the ashtray cover upward.



Emptying



Pull the ashtray with the closed cover out of the cup holder.

Lighter

Safety information WARNING

Contact with hot heating elements or the hot socket of the cigarette lighter can cause burns. Flammable materials can ignite if the cigarette lighter falls down or is held against the respective objects. There is a risk of fire and injuries. Hold the cigarette lighter by its handle. Make sure that children do not use the lighter and burn themselves.

NOTE

If metal objects fall into the socket, they can cause a short circuit. There is a risk of property damage. Replace the cigarette lighter or socket cover again after using the socket.

Front center console



Push the cover forward until it engages.



The cigarette lighter is located between the cup holders.

Rear center console



The cigarette lighter is located in the socket.

Operation



Push in the lighter.

The lighter can be removed as soon as it pops back out.

Sockets

Concept

The lighter socket can be used as a socket for electrical equipment when standby and driveready state are switched on.

General information

The total load of all sockets must not exceed 140 watts at 12 volts.

Do not damage the socket by using non-compatible connectors.

Safety information

NOTE

Battery chargers for the vehicle battery can work with high voltages and currents, which means that the 12 volt on-board network can be overloaded or damaged. There is a risk of property damage. Only connect battery chargers for the vehicle battery to the starting aid terminals in the engine compartment.

NOTE

If metal objects fall into the socket, they can cause a short circuit. There is a risk of property damage. Replace the cigarette lighter or socket cover again after using the socket.

Front center armrest



The center armrest contains a socket.

Front center console



Push the cover forward until it engages.



A socket is located between the cup holders.

Rear center console



The center console contains one or two sockets.

Pull off the respective cover.

In the cargo area



A socket is located on the right side in the cargo area. Unfold the cover.

USB interface

General information

Observe the information regarding the connection of mobile devices to the USB interface in the section on USB connections, refer to page 43.

In the center armrest



A USB interface is located in the center armrest

Steptronic transmission: in the center console

NOTE
Objects in the storage compartment,
e.g., large USB connectors, may block or damage the cover when it is being opened or
closed. There is a risk of damage to property.
Make sure that the area of movement of the
cover is clear while opening and closing it.

■



Push the cover forward until it engages.



A USB interface is located in the center console.

Storage compartments

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Safety information

WARNING
Loose objects or devices with a cable
connection to the vehicle, e.g., mobile phones,
can be thrown into the vehicle's interior while
driving, e.g., in the event of an accident or during braking and evasive maneuvers. There is a
risk of injury. Secure loose objects or devices
with a cable connection to the vehicle in the
vehicle's interior.

NOTE
Anti-slip pads such as anti-slip mats can damage the dashboard. There is a risk of property damage. Do not use anti-slip pads. ◄

Storage compartments

The following storage compartments are available in the vehicle interior:

- Glove compartment on the front passenger side, refer to page 230.
- Glove compartment on the driver's side, refer to page 231.
- Compartments in the doors, refer to page 231.

- Steptronic transmission: storage compartment in the center console, refer to page 231.
- ▶ Center armrest, refer to page 232.
- Storage compartment in the rear center console, refer to page 231.
- Pockets on the backrests of the front seats.

Glove compartment

Front passenger side

Safety information

■ WARNING

Folded open, the glove compartment protrudes in the vehicle's interior. Objects in the glove compartment can be thrown into the vehicle's interior while driving, e.g., in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Always close the glove compartment immediately after using it.

Opening



Pull the handle.

The light in the glove compartment switches on.

Closing

Fold cover closed.

Locking

The glove compartment can be locked with an integrated key. This prevents access to the glove compartment.

After the glove compartment is locked, the remote control can be handed over without the integrated key, e.g., when the vehicle is parked by valet parking.

Driver's side

Safety information

WARNING

Folded open, the glove compartment protrudes in the vehicle's interior. Objects in the glove compartment can be thrown into the vehicle's interior while driving, e.g., in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Always close the glove compartment immediately after using it.

Opening



Pull the handle.

Closing

Fold cover closed.

Compartments in the doors

WARNING

Breakable objects, e.g., glass bottles, can break in the event of an accident. Broken glass can be scattered in the vehicle's interior. There is a risk of injury. Do not stow any breakable objects in the vehicle's interior. ◄

Steptronic transmission: storage compartment in the center console

Opening



Push the cover forward until it engages.

Closing

Touch the cover on the handle bar. The cover closes.

Storage compartment in the rear center console

The back of the center console contains one or two storage compartments.

Center armrest

Front

General information

A storage compartment is located in the center armrest between the seats.

Opening



Press button.

Closing

Press cover down until it engages.

Cup holders

Safety information

WARNING
Unsuitable containers in the cup holder
and hot beverages can damage the cup holder
and increase the risk of injury in the event of an
accident. There is a risk of injury or risk of
property damage. Use light-weight, unbreakable, and sealable containers. Do not transport
hot beverages. Do not force objects into the
cup holder.

Front

Opening



Push the cover forward until it engages.



Two cup holders are located in the center console.

Closing

Touch the cover on the handle bar. The cover closes.

Rear

Safety information

∧ NOTE

With an open cup holder, the center armrest cannot be folded back up. There is a risk of property damage. Press back the covers before the center armrest is folded up.◀

Opening and closing

Opening



Fold the center armrest forward.

Press the button and fold open the cup holder.

Closing

Fold back the cup holder until it engages.

Clothes hooks

Safety information

WARNING

Clothing articles on the clothes hooks can obstruct the view while driving. There is a risk of an accident. When suspending clothing articles from the hooks, ensure that they will not obstruct the driver's view.

WARNING

Improper use of the clothes hooks can lead to a risk of objects flying about during braking and evasive maneuvers. There is a risk of injury and risk of property damage. Only hang lightweight objects, e.g., clothing articles, from the clothes hooks.

General information

The clothes hooks are located in the grab handles in the rear and on the door pillar in the rear.

Cargo area

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Loading

Safety information

WARNING
High gross weight can overheat the tires,
damage them internally and cause a sudden
drop in tire inflation pressure. Driving characteristics may be negatively impacted, reducing
lane stability, lengthening the braking distances and changing the steering response.
There is a risk of an accident. Pay attention to
the permitted load capacity of the tires and
never exceed the permitted gross weight.

WARNING

Loose objects or devices with a cable connection to the vehicle, e.g., mobile phones, can be thrown into the vehicle's interior while driving, e.g., in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Secure loose objects or devices with a cable connection to the vehicle in the

WARNING
Improperly stowed objects can shift and be thrown into the vehicle's interior, e.g., in the event of an accident or during braking and evasive maneuvers. Vehicle occupants can be hit

and injured. There is a risk of injury. Stow and secure objects and cargo properly.◀

NOTE

Fluids in the cargo area can cause damage. There is a risk of property damage. Make sure that no fluids leak in the cargo area.

Steps for Determining Correct Load Limit

- Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
- Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- 4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1,400–750 (5 x 150) = 650 lbs.)
- Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

Load




The maximum load is the sum of the weight of the occupants and the cargo.

The greater the weight of the occupants, the less cargo that can be transported.

Stowing and securing cargo

- Cover sharp edges and corners on the cargo.
- Heavy cargo: stow as far forward as possible, directly behind and at the bottom of the rear passenger seat backrests.
- Very heavy cargo: stow as far forward as possible, directly behind and at the bottom of the rear passenger seat backrests.
 When the rear seat is not occupied, secure each of the outer safety belts in the opposite buckle.
- ▶ If necessary, fold down the rear backrests to stow cargo.
- Do not stack cargo above the top edge of the backrests.
- Smaller and lighter cargo: secure with ratchet straps or with a cargo net or draw straps.
- Larger and heavy cargo: secure with cargo straps.

Lashing eyes in the cargo area

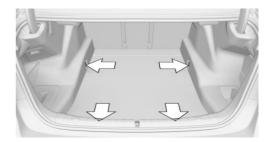

To secure the cargo there are lashing eyes in the cargo area.

Attach load securing aids, such as lashing straps, retaining straps, draw straps or cargo nets, to the lashing eyes in the cargo area.

Storage compartments in the cargo area

Multi-function hook

General information


A multi-function hook is located on the left side in the cargo area.

Safety information

WARNING

Improper use of the multi-function hooks can lead to a risk of objects flying about during braking and evasive maneuvers. There is a risk of injury and risk of property damage. Only hang lightweight objects, e.g., shopping bags, from the multi-function hooks. Only transport heavy luggage in the cargo area if it has been appropriately secured.

Folding down

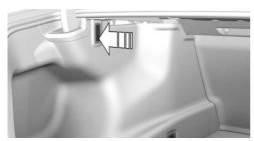

Press on the multi-function hook and turn until it engages.

Net

Small objects can be stowed in the net on the left side.

Storage compartment on the right side

A storage compartment is available on the right side of the cargo area.

Left side storage compartment

General information

A storage compartment is located on the left side in the cargo area.

Opening



Pull the handle.

With an emergency wheel: storage compartment under the cargo area floor

There is a storage compartment under the cargo floor panel.



Fold up the cargo floor panel.

Through-loading system

Concept

The cargo area can be enlarged by folding down the rear seat backrest.

General information

The rear seat backrest is divided at a ratio of 40–20–40.

The rear seat backrests can be folded down from the cargo area. The center section can be separately folded down from the rear.

Safety information

№ WARNING

Danger of jamming with folding down the backrests. There is a risk of injury or risk of property damage. Make sure that the area of movement of the rear backrest and the of the head restraint is clear prior to folding down.

WARNING

With an unlocked backrest, an unsecured load can be thrown into the vehicle's interior, e.g., in case of an accident, braking or evasive maneuver. There is a risk of injury. Make sure

that the backrest engages into the locking after folding it back.◀

WARNING

The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged. If possible, adjust the height of the head restraints or remove them.

NOTE

Vehicle parts can be damaged when folding down the rear backrest. There is a risk of property damage. Make sure that the area of movement of the rear backrest including head restraint is clear when folding down.

■

Folding down the rear seat backrest from the cargo area

- Unlock the belt lock of the center safety belt in the rear using the latch plate of another safety belt.
- Insert the latch plate at the end of the belt into the specially designated fixture on the rear window shelf.



3. Push the corresponding head restraint down as far as it will go.

4. Pull the corresponding lever in the cargo area to release the rear seat backrest.



- The unlocked rear seat backrest moves forward slightly.
- 6. Fold the rear seat backrest forward.



Fold back the backrest

- Return the rear seat backrest to the upright seating position and engage it.
- Release the belt tongue from the fixture on the rear window shelf.
- Insert the belt tongue in the belt lock of the center safety belt. Make sure you hear the latch plate engage.

Fold down the middle section

Fold down the center head restraint.

Reach into the recess and pull the center section forward.



With an emergency wheel: Enlarging the cargo area

Concept

The emergency wheel and any related components can be temporarily removed to enlarged the cargo area.


Removing the emergency wheel and the storage compartments

 Remove the cargo floor panel. To do this, pull the cargo floor panel upward directly behind the rear backrests.



2. Open the ratchet strap.


3. Remove the tool holder.

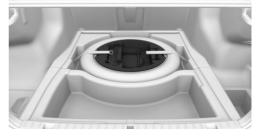

- Remove the emergency wheel from the storage well.
- 5. Loosen the ratchet strap from the lashing eyes.
- 6. Remove the storage compartment.



7. Remove the storage well

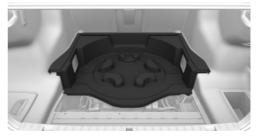

8. Insert the cargo floor panel.

Inserting the emergency wheel and the storage compartments

Proceed in reverse order to insert the emergency wheel and the storage compartments.

Ski and snowboard bag

The ski and snowboard bag is contained in a protective jacket in the cargo area.

Follow the installation and owner's manual included in the protective jacket.

If equipped with emergency wheel: remove the emergency wheel from the vehicle to mount the ski and snowboard bag.



Driving tips

This chapter provides you with information useful in dealing with specific driving and operating modes.

Things to remember when driving

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Breaking-in period

General information

Moving parts need to begin working together smoothly.

The following instructions will help you to achieve a long vehicle life and good efficiency.

During break-in, do not use the Launch Control, refer to page 111.

Safety information

WARNING

Due to new parts and components, safety and driver assistance systems can react with a delay. There is a risk of an accident. After installing new parts or with a new vehicle, drive conservatively and intervene early if necessary. Observe the break-in procedures of the respective parts and components.

Engine, transmission, and axle drive

Up to 1,200 miles/2,000 km

Do not exceed the maximum engine and road speed:

For gasoline engine 4,500 rpm and 100 mph/160 km/h. Avoid full load or kickdown under all circumstances.

From 1,200 miles/2,000 km

The engine and vehicle speed can gradually be increased.

Tires

Tire traction is not optimal due to manufacturing circumstances when tires are brand-new; they achieve their full traction potential after a break-in time.

Drive conservatively for the first 200 miles/300 km.

Brake system

Brake discs and brake pads only reach their full effectiveness after approx. 300 miles/500 km. Drive moderately during this break-in period.

Following part replacement

Observe the break-in procedures again, if components mentioned above are replaced.

General driving notes

Closing the tailgate

WARNING

An open tailgate protrudes from the vehicle and can endanger occupants and other traffic participants or damage the vehicle in the event of an accident, braking or evasive maneuvers. In addition, exhaust fumes may enter the vehicle interior. There is a risk of injury or risk of damage to property. Do not drive with the tailgate open.

If driving with the tailgate open cannot be avoided:

Close all windows and the glass sunroof.

- Greatly increase the air flow from the vents.
- Drive moderately.

WARNING

Hot exhaust system

During driving operation, high temperatures can occur underneath the vehicle body, e.g., caused by the exhaust gas system. If combustible materials, such as leaves or grass, come in contact with hot parts of the exhaust gas system, these materials can ignite. There is a risk of injury or risk of property damage. Do not remove the heat shields installed and never apply undercoating to them. Make sure that no combustible materials can come in contact with hot vehicle parts in driving operation, idle or during parking. Do not touch the hot exhaust system.

Mobile communication devices in the vehicle

Vehicle electronics and mobile phones can influence one another. There is radiation due to the transmission operations of mobile phones. There is a risk of injury or risk of property damage. If possible, in the vehicle's interior use only mobile phones with direct connections to an exterior antenna in order to

exclude mutual interference and deflect the ra-

diation from the vehicle's interior. ◀

Hydroplaning

WARNING

On wet or slushy roads, a wedge of water can form between the tires and road surface.

This phenomenon is referred to as hydroplaning. It is characterized by a partial or complete loss of contact between the tires and the road surface, ultimately undermining your ability to steer and brake the vehicle.

Driving through water

№ NOTE

When driving too quickly through too deep water, water can enter into the engine compartment, the electrical system or the transmission. There is a risk of property damage. When driving through water, do not exceed the maximum indicated water level and the maximum speed for driving through water.

When driving through water, observe the following:

- Drive through calm water only.
- Drive through water only if it is not deeper than maximum 9.8 inches/25 cm.
- Drive through water no faster than walking speed, up to 3 mph/5 km/h.

Braking safely

General information

The vehicle is equipped with ABS as a standard feature.

Perform an emergency stop in situations that require such.

Steering is still responsive. You can still avoid any obstacles with a minimum of steering effort.

Pulsation of the brake pedal and sounds from the hydraulic circuits indicate that ABS is in its active mode.

In certain braking situations, the perforated brake discs can emit functional noises. However, this has no effect on the performance and operational reliability of the brake.

Objects in the area around the pedals

WARNING

Objects in the driver's floor area can limit the pedal distance or block a depressed pedal. There is a risk of an accident. Stow objects in the vehicle such that they are secured and

cannot enter into the driver's floor area. Use floor mats that are suitable for the vehicle and can be safely attached to the floor. Do not use loose floor mats and do not layer several floor mats. Make sure that there is sufficient clearance for the pedals. Ensure that the floor mats are securely fastened again after they were removed, e.g., for cleaning.◀

Driving in wet conditions

When roads are wet, salted, or in heavy rain, gently press the brake pedal every few miles. Ensure that this action does not endanger other traffic.

The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

In this way braking efficiency will be available when you need it.

Hills

Λ

WARNING

Light but consistent brake pressure can lead to high temperatures, brakes wearing out and possibly even brake failure. There is a risk of an accident. Avoid placing excessive stress on the brake system.

WARNING

In idle state or with the engine switched off, safety-relevant functions, e.g., engine braking effect, braking force boost and steering assistance, are restricted or not available at all. There is a risk of an accident. Do not drive in idle state or with the engine switched off.

Drive long or steep downhill gradients in the gear that requires least braking effort. Otherwise, the brakes may overheat and reduce brake efficiency.

You can increase the engine's braking effect by shifting down, going all the way to first gear, if needed

Brake disc corrosion

Corrosion on the brake discs and contamination on the brake pads are increased by the following circumstances:

- Low mileage.
- Extended periods when the vehicle is not used at all.
- Infrequent use of the brakes.
- Aggressive, acidic, or alkaline cleaning agents.

Corrosion buildup on the brake discs will cause a pulsating effect on the brakes in their response - generally this cannot be corrected.

Condensation water under the parked vehicle

When using the automatic climate control, condensation water develops and collects underneath the vehicle.

Roof-mounted luggage rack

General information

Roof racks are available as special accessories.

Roof drip rail with flaps



The anchorage points are located in the roof drip rail above the doors.

Fold the cover outward.

Mounting

Follow the installation instructions of the roof rack.

Be sure that adequate clearance is maintained for tilting and opening the glass sunroof.

Magnetic roof-mounted luggage racks

Because of the aluminum roof, magnetic roof-mounted luggage racks cannot be used.

Loading

Because roof-mounted luggage racks raise the vehicle's center of gravity when loaded, they have a major effect on vehicle handling and steering response.

Therefore, note the following when loading and driving:

- Do not exceed the approved roof/axle loads and the approved gross vehicle weight.
- Be sure that adequate clearance is maintained for tilting and opening the glass sunroof.
- Distribute the roof load uniformly.
- The roof load should not extend past the loading area.
- Always place the heaviest pieces on the bottom.
- Secure the roof luggage firmly, for instance using ratchet straps.
- Do not let objects project into the opening path of the tailgate.
- Drive cautiously and avoid sudden acceleration and braking maneuvers. Take corners gently.

Driving on racetracks

Higher mechanical and thermal loads during racetrack operation lead to increased wear. This wear is not covered by the warranty. The

vehicle is not designed for use in motor sports competition.

Saving fuel

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

The vehicle contains advanced technologies for the reduction of fuel consumption and emission values.

Fuel consumption depends on a number of different factors.

Carrying out certain measures, such as a moderate driving style and regular maintenance, can influence fuel consumption and the environmental impact.

Remove unnecessary cargo

Additional weight increases fuel consumption.

Remove attached parts following use

Remove auxiliary mirrors, roof-mounted or rear luggage racks which are no longer required following use.

Attached parts on the vehicle impair the aerodynamics and increase the fuel consumption.

Close the windows and glass sunroof

Driving with the glass sunroof and windows open results in increased air resistance and raises fuel consumption.

Tires

General information

Tires can affect fuel consumption in various ways, e.g., tire size may influence fuel consumption.

Check the tire inflation pressure regularly

Check and, if needed, correct the tire inflation pressure at least twice a month and before starting on a long trip.

Low tire inflation pressure increases rolling resistance and thus raises fuel consumption and tire wear.

Drive away without delay

Do not wait for the engine to warm-up while the vehicle remains stationary. Start driving right away, but at moderate engine speeds.

This is the quickest way of warming the cold engine up to operating temperature.

Look well ahead when driving

Driving smoothly and proactively reduces fuel consumption.

Avoid unnecessary acceleration and braking.

By maintaining a suitable distance to the vehicle driving ahead of you.

Avoid high engine speeds

As a rule: driving at low engine speeds lowers fuel consumption and reduces wear.

Use 1st gear to get the vehicle moving. Starting with the 2nd gear, accelerate rapidly. When accelerating, shift up before reaching high engine speeds.

When you reach the desired speed, shift into the highest applicable gear and drive with low engine speed and at a constant speed.

If necessary, observe the vehicle's gear shift indicator, refer to page 122.

Use coasting conditions

When approaching a red light, take your foot off the accelerator and let the vehicle coast to a halt.

For going downhill take your foot off the accelerator and let the vehicle roll.

The flow of fuel is interrupted while coasting.

Switch off the engine during longer stops

Concept

Switch off the engine during longer stops, e.g., at traffic lights, railroad crossings or in traffic congestion.

Auto Start/Stop function

The Auto Start/Stop function of the vehicle automatically switches off the engine during a stop.

If the engine is switched off and then restarted rather than leaving the engine running constantly, fuel consumption and emissions are reduced. Savings can begin within a few seconds of switching off the engine.

In addition, fuel consumption is also determined by other factors, such as driving style,

road conditions, maintenance or environmental factors.

Switch off any functions that are not currently needed

Functions such as seat heating and the rear window defroster require a lot of energy and increase fuel consumption, especially in city and stop-and-go traffic.

Switch off these functions if they are not needed.

partially or completely.

The ECO PRO driving mode supports the energy conserving use of comfort features.

These functions are automatically deactivated

Have maintenance carried out

Have the vehicle maintained regularly to achieve optimal vehicle efficiency and service life. BMW recommends that maintenance work be performed by a BMW dealer's service center.

For information on the BMW Maintenance System, refer to page 294.

ECO PRO

Concept

ECO PRO supports a driving style that saves on fuel consumption. For this purpose, the engine control and comfort features, for instance the climate control output, are adjusted.

Steptronic transmission: under certain conditions the engine is automatically decoupled from the transmission in the D selector lever position. The vehicle continues traveling with the engine idling to reduce fuel consumption. The D selector lever position remains engaged.

In addition, context-sensitive information, ECO PRO tips, are displayed to assist with an optimized fuel consumption driving style.

The achieved extended range is displayed in the instrument cluster as bonus range.

General information

The system includes the following EfficientDynamics functions and EfficientDynamics displays:

- ECO PRO bonus range, refer to page 249.
- ECO PRO climate control, refer to page 249.
- ▶ ECO PRO coasting driving condition, refer to page 250.
- ▶ ECO PRO driving style analysis, refer to page 251.

Overview





Button

Activating ECO PRO



Press button. ECO PRO is displayed in the instrument cluster.

Configuring ECO PRO INDIVIDUAL

Opening via the Driving Dynamics Control

- Activate ECO PRO.
- 2. "Configure ECO PRO INDIVIDUAL"

Opening via iDrive

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Driving Experience Control"
- 4. "Configure ECO PRO INDIVIDUAL"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

Activating/deactivating ECO PRO functions

The following ECO PRO functions can be activated/deactivated:

- "ECO PRO speed warning"
- "Coasting"
- ▶ "ECO PRO seat climate control"
- "FCO PRO climate control"
- "ECO PRO sight"

Settings are stored for the driver profile currently used.

ECO PRO limit

- Activate the ECO PRO limit:
 - "ECO PRO speed warning"
 - An ECO PRO tip is displayed if the speed of the set ECO PRO limit is exceeded.
- Adjust the ECO PRO limit speed:
 - "Tip at:"

Select the desired speed.

Coasting

Fuel-efficiency can be optimized by disengaging the engine and coasting with the engine idling.

This function is only available in ECO PRO mode.

Deactivate the function to use the braking effect of the engine when traveling downhill.

ECO PRO seat climate control

The output of seat heating and, where applicable, seat ventilation is reduced when ECO PRO is activated.

ECO PRO climate control

Climate control is set to be fuel-efficient.

By making a slight change to the set temperature, or slowly adjusting the rate of heating or cooling of the vehicle's interior, fuel consumption can be economized.

The mirror heating is made available when outside temperatures are very cold.

ECO PRO Sight

The output of exterior mirror heating and rear window defroster is reduced.

Resetting the settings

Reset ECO PRO INDIVIDUAL to the standard settings:

"Reset to ECO PRO STANDARD"

Display in the instrument cluster

Display

When ECO PRO mode is activated, the display switches to a special configuration.

Some of the displays may differ from the display in the instrument cluster.

ECO PRO bonus range



An adjusted driving style helps you extend your driving range.

This may be displayed as the bonus range in the instrument cluster.

The bonus range is shown in the range display.

Depending on the equipment, the blue bar segments symbolize the gained range in stages.


If the bonus range appears in gray, the current driving style is inefficient.

The display switches to blue as soon as all conditions for driving with optimized fuel efficiency are met.

The bonus range is automatically reset every time the vehicle is refueled.

Fuel consumption display

Instrument cluster without enhanced features:

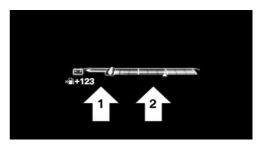

Instrument cluster with enhanced features



A pointer in the fuel consumption display informs about the current driving style:

- ➤ The current fuel consumption in relation to the average fuel consumption is displayed.
- Pointer in the area of arrow 1: display of the energy recovered by coasting or when braking.
- Pointer in the area of arrow 2: display when accelerating.

If the acceleration is inefficient, the area between the average fuel consumption and the current fuel consumption is colored red.

In addition, the following information is displayed, depending on the situation:

- Depending on the equipment: the total distance driven while coasting, refer to page 251.
- The total time that the engine has been switched off, refer to page 99, during automatic engine stops.
- A gear shift indicator, refer to page 122, recommending the use of a more fuel-efficient gear.

Indications on the Control Display

Displaying EfficientDynamics information

The current efficiency of the ECO PRO functions can be displayed on the Control Display.

Using iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- "EfficientDynamics"
- 4. Select the symbol.

The following functions are displayed:

- Auto Start/Stop function.
- Energy recovery.
- Coasting.

Displaying fuel consumption history

The average fuel consumption, the route coasted as well as the duration for which the Auto Start/Stop function switched off the engine can be displayed on the Control Display.

Using iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"

- 3. "EfficientDynamics"
- 4. Select the symbol.

Vertical bars show consumption for the selected route.

Selecting route length

Using iDrive:

- Press button.
- 2. Select desired route length or scaling.

Resetting fuel consumption history

Using iDrive:

- 1. Press button.
- 2. "Reset consumption history"

Coasting

Concept

The function helps to conserve fuel.

To do this, under certain conditions the engine is automatically decoupled from the transmission when selector lever position D is set. The vehicle continues traveling with the engine idling to reduce fuel consumption. Selector lever position D remains engaged.

This driving condition is referred to as coasting.

As soon as you step on the brake or accelerator pedal, the engine is automatically coupled again.

General information

Coasting is a component of the ECO PRO, refer to page 247, driving mode.

Coasting is automatically activated when ECO PRO mode is called via the Driving Dynamics Control.

A proactive driving style helps the driver to use the function often and supports the fuel-conserving effect of coasting.

Functional requirements

In ECO PRO mode, this function is available in a speed range from approximately 30 mph/50 km/h bis 100 mph/160 km/h, if the following conditions are met:

- Accelerator pedal and brake pedal are not operated.
- The selector lever is in selector lever position D.
- Engine and transmission are at operating temperature.

Operation via shift paddles

Concept

The coasting driving condition can be influenced with the shift paddles.

Activating/deactivating coasting via shift paddles

- Shift to the highest gear by pulling the right shift paddle.
- 2. Actuate the right shift paddle again to enter coasting mode.

To deactivate, actuate the left shift paddle.

Display

Instrument cluster without enhanced features



The mark in the fuel consumption display below the tachometer is located at the zero point and is backlit in blue. The tachometer approximately indicates

idle speed.

Instrument cluster with enhanced features




The mark in the fuel consumption display is located at the zero point and is backlit in blue.

The distance traveled is indicated in coasting mode.

Indications on the Control Display

The coasting mode is displayed in EfficientDynamics while driving.

The distance traveled in coasting mode is shown in the fuel consumption history. The counter is reset with every refueling.

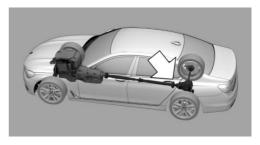

Color code blue: coasting mode.

Displaying EfficientDynamics information

Using iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "EfficientDynamics"

System limits

The function is not available under one of the following conditions.

- DSC OFF or TRACTION activated.
- Driving in the dynamic limit range and on steep uphill or downhill grades.
- Battery charge status temporarily too low or vehicle electrical system drawing excessive current.

ECO PRO driving style analysis

Concept

The function helps develop an especially efficient driving style and to conserve fuel.

For this purpose, the driving style is analyzed. The assessment is done in various categories and is displayed on the Control Display.

Using this indication, the individual driving style can be oriented toward conserving fuel.

General information

The current trip is assessed.

To assist with an efficient driving style, ECO PRO tips are displayed during driving.

The range of the vehicle can be extended by adjusting your driving style.

This gain in range is displayed as a bonus range in the instrument cluster and on the Control Display.

Functional requirement


This function is available in ECO PRO mode.

Calling up ECO PRO driving style analysis

Using iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- "Driving style analysis"

Display on the Control Display

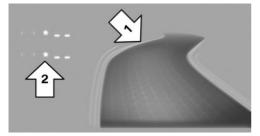

The display of the ECO PRO driving style analysis consists of a symbolized route and a lookup table.

The road symbolizes the efficiency of the driving style. The more efficient the driving style,

the smoother the depicted route becomes, arrow 1.

The table of values contains stars. The more efficient the driving style, the more stars are included in the table, arrow 2, and the faster the bonus range increases.

If, on the other hand, the driving style is inefficient, a wavy road and a reduced number of stars is displayed.



Mobility

In order to always ensure your mobility, you will find important information on operating fluids, wheels and tires, maintenance and Roadside Assistance in the following.

Refueling

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

Observe the fuel recommendation, refer to page 258, prior to refueling.

Safety information

damage. Refuel promptly.

With a range of less than 30 miles/50 km it is possible that the engine will no longer have sufficient fuel. Engine functions are not ensured anymore. There is a risk of property


Fuel cap

Opening


 Briefly press the rear edge of the fuel filler flap.



2. Turn the fuel cap counterclockwise.

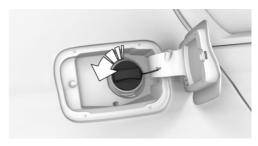

Place the fuel cap in the bracket attached to the fuel filler flap.

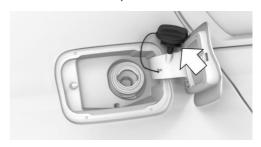

Closing

№ WARNING

The retaining strap of the fuel cap can be jammed and crushed during closing. The cap cannot be correctly closed. Fuel or fuel vapors can escape. There is a risk of injury or risk of property damage. Pay attention that the retaining strap is not jammed or crushed when closing the lid.

- 1. Fit the lid and turn it clockwise until you clearly hear a click.
- 2. Close the fuel filler flap.

Manually unlocking fuel filler flap

E.g., in the event of an electrical malfunction.

Have fuel filler flap unlocked by a dealer's service center or another qualified service center or repair shop.

Observe the following when refueling

General information

The fuel tank is full when the filler nozzle clicks off the first time.

Observe safety regulations posted at the gas station.

Safety information

↑ NOTE

Fuels are toxic and aggressive. Overfilling of the fuel tank can damage the fuel system. Painted surfaces may be damaged by contact with fuel. Escaping fuel can harm the environment. There is a risk of property damage. Avoid overfilling.

Fuel

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Fuel recommendation

General information

Depending on the region, many gas stations sell fuel that has been customized to winter or summer conditions. Fuel that is available in winter, e.g., helps make a cold start easier.

Gasoline

General information

For the best fuel efficiency, the gasoline should be sulfur-free or very low in sulfur content.

Fuels that are marked on the gas pump as containing metal must not be used.

Fuels with a maximum ethanol content of 10 %, i. e., E10, may be used for refueling.

Ethanol should meet the following quality standards:

US: ASTM 4806-xx

CAN: CGSB-3.511-xx

xx: comply with the current standard in each case.

Safety information

The use of poor-quality fuels may result in harmful engine deposits or damage. Additionally, problems relating to drivability, starting and stalling, especially under certain environmental conditions such as high ambient temperature and high altitude, may occur.

If drivability problems are encountered, we recommend switching to a high quality gasoline brand and a higher octane grade — AKI number — for a few tank fills. To avoid harmful engine deposits, it is highly recommended to purchase gasoline from Top Tier retailers.

Failure to comply with these recommendations may result in the need for unscheduled maintenance. ◀

NOTE

Do not press the Start/Stop button after refueling with the wrong fuel. Furthermore, the catalytic converter is permanently damaged. There is a risk of property damage. Do not refuel or add the following in the case of gasoline engines:

- Leaded gasoline.
- Metallic additives, e.g., manganese or iron.

Do not press the Start/Stop button after refueling with the wrong fuel. Contact a dealer's service center or another qualified service center or repair shop. ◀

NOTE

Incorrect fuels can damage the fuel system and the engine. There is a risk of damage to property. Do not use fuels with a higher percentage of ethanol than recommended. Do not refuel with fuels containing methanol, e.g. M5 to M100.

NOTE

Fuel that does not comply with the minimum quality can compromise engine function or cause engine damage. There is a risk of property damage. Do not fill with fuel that does not comply with the minimum quality.

Recommended fuel grade

BMW recommends AKI 91.

Minimum fuel grade

BMW recommends AKI 89.

If you use gasoline with this minimum AKI Rating, the engine may produce knocking sounds when starting at high outside temperatures. This has no effect on the engine life.

BMW recommends Shell Quality Fuels

Wheels and tires

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Tire inflation pressure

General information

The tire characteristics and tire inflation pressure influence the following:

- The service life of the tires.
- Road safety.
- Driving comfort.

Safety information

WARNING
A tire with low or missing tire inflation
pressure impacts handling, such as steering
and braking response. There is a risk of an accident. Regularly check the tire inflation pressure, and correct it as needed, e.g., twice a
month and before a long trip.

Checking the tire inflation pressure

Only check the tire inflation pressure when the tires are cold. This means after driving no more than 1.25 miles/2 km or when the vehicle has been parked for at least 2 hours.

Tires heat up while driving, and the tire inflation pressure increases along with the tire's temperature. The tire inflation pressure specifications relate to cold tires or tires at ambient temperature.

The displays of inflation devices may underread by up to 0.1 bar/2 psi.

Tires have a natural, consistent loss of tire inflation pressure.

For Flat Tire Monitor: after correcting the tire inflation pressure, reinitialize the Flat Tire Monitor.

Check the tire inflation pressure of the emergency wheel in the cargo area regularly, and correct it as needed.

For Tire Pressure Monitor: perform a reset of the Tire Pressure Monitor after adjusting tire pressure to a new value.

Tire inflation pressure specifications

The tire inflation pressure table, refer to page 261, contains all tire inflation pressure specifications for the specified tire sizes at the ambient temperature. The tire inflation pressure values apply to tire sizes approved by the manufacturer of the vehicle for the vehicle type.

To identify the correct tire inflation pressure, please note the following:

- Tire sizes of your vehicle.
- Maximum permitted driving speed.

Tire inflation pressures up to 100 mph/160 km/h

For speeds of up to 100 mph/160 km/h and for optimum driving comfort, note the pressure values in the tire inflation pressure table, refer to page 261, and adjust as necessary.



These pressure values can also be found on the tire inflation pressure label on the driver's door pillar.

Do not exceed a speed of 100 mph/160 km/h.

Tire inflation pressure values up to 100 mph/160 km/h

530i, 530i xDrive

Tire size	Pressure specifications in bar/PSI	
Specifications in bar/PSI with cold tires	# # # # + •	*/0
225/55 R 17 97 H M+S A/S RSC 225/55 R 17 97 Y RSC 225/55 R 17 97 H M+S RSC	2.2/32	2.4/35
245/45 R 18 100 H M+S XL A/S Std/RSC 245/45 R 18 100 Y XL RSC	2.2 / 32	2.6 / 38
245/45 R 18 100 V M+S XL RSC		

Tire size	Pressure specifications in bar/PSI	
245/40 R 19 98 H M+S XL A/S RSC 245/40 R 19 98 V M+S XL RSC	2.4/35	2.8 / 41
Front: 245/45 R 18 100 Y XL RSC	2.2 / 32	-
Rear: 275/40 R 18 99 Y RSC	-	2.4/35
Front: 245/40 R 19 98 Y XL RSC	2.2 / 32	-
Rear: 275/35 R 19 100 Y XL RSC	-	2.6 / 38
F: 245/35 R 20 95 Y XL Std/RSC	2.5 / 36	-
R: 275/30 R 20 97 Y XL Std/RSC	-	3.0 / 44
Emergency wheel: T 135/80 R 18 104 M	Speed up to a max. of 50 mph / 80 km/h 4.2 / 60	

540i, 540i xDrive

Tire size	Pressure specifications in bar/PSI		
Specifications in bar/PSI with cold tires	* * * * * * * / 1		
225/55 R 17 97 H M+S RSC	2.2/32 2.4/35		

Tire size	Pressure specifications in bar/PSI	
245/45 R 18 100 H M+S XL A/S Std/RSC 245/45 R 18 100 Y XL RSC 245/45 R 18 100 V M+S XL RSC	2.2/32	2.6/38
245/40 R 19 98 H M+S XL A/S RSC 245/40 R 19 98 V M+S XL RSC	2.4/35	2.8 / 41
Front: 245/45 R 18 100 Y XL RSC	2.2/32	-
Rear: 275/40 R 18 99 Y RSC	-	2.4/35
Front: 245/40 R 19 98 Y XL RSC	2.2 / 32	-
Rear: 275/35 R 19 100 Y XL RSC	-	2.6 / 38
F: 245/35 R 20 95 Y XL Std/RSC	2.5 / 36	-
R: 275/30 R 20 97 Y XL Std/RSC	-	3.0 / 44
Emergency wheel: T 135/80 R 18 104 M	Speed up to a max. of 50 mph / 80 km/h 4.2 / 60	

Tire inflation pressures at max. speeds above 100 mph/160 km/h

WARNING

In order to drive at maximum speeds in excess of 100 mph/160 km/h, please observe, and, if necessary, adjust tire pressures for speeds exceeding 100 mph/160 km/h from the relevant table on the following pages. Otherwise, tire damage and accidents could occur.

For speeds over 100 mph/160 km/h and for optimum driving comfort, note the pressure values in the tire inflation pressure table, refer to page 262, and adjust as necessary.

Tire inflation pressure values over 100 mph/160 km/h

530i, 530i xDrive

Tire size	Pressure sp in bar/PSI	ecifications
Specifications in bar/PSI with cold tires	# # # + •	*/0
225/55 R 17 97 H M+S A/S RSC 225/55 R 17 97 Y RSC 225/55 R 17 97 H M+S RSC	2.2/32	2.7 / 39
245/45 R 18 100 H M+S XL A/S Std/RSC 245/45 R 18 100 Y XL RSC	2.4/35	2.9 / 42
245/40 R 19 98 H M+S XL A/S RSC 245/45 R 18 100 V M+S XL RSC	2.6 / 38	3.1 / 45
245/40 R 19 98 V M+S XL RSC	2.9 / 42	3.4 / 49
Front: 245/45 R 18 100 Y XL RSC	2.4/35	-
Rear: 275/40 R 18 99 Y RSC	-	2.7/39
Front: 245/40 R 19 98 Y XL RSC	2.6 / 38	-

Tire size	Pressure specifications in bar/PSI			Tire size	Pressure specifications in bar/PSI	
Rear: 275/35 R 19 100 Y XL RSC	-	2.9 / 42		Front: 245/40 R 19 98 Y XL RSC	2.6 / 38	-
F: 245/35 R 20 95 Y XL Std/RSC	2.9 / 42	-		Rear: 275/35 R 19 100 Y XL RSC	-	2.9 / 42
R: 275/30 R 20 97 Y XL Std/RSC	-	3.4 / 49		F: 245/35 R 20 95 Y XL Std/RSC	2.9 / 42	-
Emergency wheel: T 135/80 R 18 104	Speed up to a max. of 50 mph / 80 km/h			R: 275/30 R 20 97 Y XL Std/RSC	-	3.4 / 49
M	4.2 / 60	.2/60		Emergency wheel:		
540i				T 135/80 R 18 104 M	50 mph / 80 4.2 / 60) km/h

540i

Tire size	Pressure sp in bar/PSI	pecifications	540i xDrive		
Specifications in bar/PSI with cold tires	 		Tire size	Pressure sp in bar/PSI	ecifications
			Specifications in bar/PSI with cold	* * * * * +	· * /Ø
225/55 R 17 97 H M+S RSC	2.2/32	2.7 / 39	tires		
245/45 R 18 100 H M+S XL A/S		225/55 R 17 97 H M+S RSC	2.4 / 35	2.7 / 39	
Std/RSC 245/45 R 18 100 Y XL RSC			245/45 R 18 100 H M+S XL A/S Std/RSC	2.4/35	2.9 / 42
245/40 R 19 98 H M+S XL A/S RSC	2.6 / 38	3.1 / 45	245/45 R 18 100 Y XL RSC		
245/45 R 18 100 V M+S XL RSC			245/40 R 19 98 H M+S XL A/S RSC	2.6 / 38	3.1 / 45
245/40 R 19 98 V M+S XL RSC	2.9 / 42	3.4 / 49	245/45 R 18 100 V M+S XL RSC		
Front: 245/45 R 18 100 Y XL RSC	2.4/35	-	245/40 R 19 98 V M+S XL RSC	2.9 / 42	3.4 / 49
Rear: 275/40 R 18 99 Y RSC	-	2.7 / 39	Front: 245/45 R 18 100 Y XL RSC	2.4 / 35	-

Tire size	Pressure specifications in bar/PSI	
Rear: 275/40 R 18 99 Y RSC	-	2.7 / 39
Front: 245/40 R 19 98 Y XL RSC	2.6 / 38	-
Rear: 275/35 R 19 100 Y XL RSC	-	2.9 / 42
F: 245/35 R 20 95 Y XL Std/RSC	2.9 / 42	-
R: 275/30 R 20 97 Y XL Std/RSC	-	3.4 / 49
Emergency wheel: T 135/80 R 18 104 M	Speed up to a max. of 50 mph / 80 km/h 4.2 / 60	

Tire identification marks

Tire size

245/45 R 18 96 Y

245: nominal width in mm

45: aspect ratio in %

R: radial tire code

18: rim diameter in inches

96: load rating, not for ZR tires

Y: speed rating, before the R on ZR tires

Maximum tire load

Maximum tire load is the maximum permissible weight for which the tire is approved.

Locate the maximum tire load on the tire sidewall and the Gross Axle Weight Rating – GAWR – on the certification label on the driver door Bpillar. Divide the tire load by 1.1. It must be greater than one-half of the vehicle's Gross Axle Weight Rating – GAWR. Note, front vs. rear GAWR and tire loads, respectively.

Speed letter

Q = up to 100 mph, 160 km/h

R = up to 106 mph, 170 km/h

S = up to 112 mph, 180 km/h

T = up to 118 mph, 190 km/h

H = up to 131 mph, 210 km/h

V = up to 150 mph, 240 km/h

W = up to 167 mph, 270 km/h

Y = up to 186 mph, 300 km/h

Tire Identification Number

DOT code: DOT xxxx xxx 3816

xxxx: manufacturer code for the tire brand

xxx: tire size and tire design

3816: tire age

Tires with DOT codes meet the guidelines of the U.S. Department of Transportation.

Tire age

DOT ... 3816: the tire was manufactured in the 38th week of 2016.

Recommendation

Regardless of wear and tear, replace tires at least every 6 years.

Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

E.g.: Treadwear 200; Traction AA; Temperature A

DOT Quality Grades

Treadwear

Traction AA A B C

Temperature A B C

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades.

Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. E.g., a tire graded 150 would wear one and one-half, 1 g, times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction

The traction grades, from highest to lowest, are AA, A, B, and C.

Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

Temperature

The temperature grades are A, the highest, B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger vehicle tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades Band A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure. ◄

RSC - Run-flat tires

Run-flat tires, refer to page 268, are labeled with a circular symbol containing the letters RSC marked on the sidewall.

M+S

Winter and all-season tires with better cold weather performance than summer tires.

Tire tread

Summer tires

Do not drive with a tire tread depth of less than 0.12 inches/3 mm.

There is an increased risk of hydroplaning if the tire tread depth is less than 0.12 inches/3 mm.

Winter tires

Do not drive with a tire tread depth of less than 0.16 inches/4 mm.

Below a tread depth of 0.16 inches/4 mm, tires are less suitable for winter operation.

Minimum tread depth



Wear indicators are distributed around the tire's circumference and have the legally required minimum height of 0.063 inches/1.6 mm.

They are marked on the side of the tire with TWI, Tread Wear Indicator.

Tire damage

General information

Inspect your tires regularly for damage, foreign objects lodged in the tread, and tread wear.

Driving over rough or damaged road surfaces, as well as debris, curbs and other obstacles can cause serious damage to wheels, tires and suspension parts. This is more likely to occur with low-profile tires, which provide less cushioning between the wheel and the road. Be careful to avoid road hazards and reduce your speed, especially if your vehicle is equipped with low-profile tires.

Indications of tire damage or other vehicle malfunctions:

- Unusual vibrations while driving.
- Unusual handling such as a strong tendency to pull to the left or right.

Damage can, e.g., be caused by driving over curbs, road damage, or similar things.

Safety information

WARNING

Damaged tires can lose tire inflation pressure, which can lead to loss of vehicle control. There is a risk of an accident. If tire damage is suspected while driving, immediately reduce speed and stop. Have wheels and tires checked. For this purpose, drive carefully to the nearest dealer's service center or another qualified service center or repair shop. Have vehicle towed or transported as needed.

WARNING

Damaged tires can lose tire inflation pressure, which can lead to loss of vehicle control. There is a risk of an accident. Do not repair damaged tires, but have them replaced. ◀

Changing wheels and tires

Mounting and wheel balancing

Have mounting and wheel balancing carried out by a dealer's service center or another qualified service center or repair shop.

Wheel and tire combination

General information

You can ask the dealer's service center or another qualified service center or repair shop about the correct wheel/tire combination and wheel rim versions for the vehicle.

Incorrect wheel and tire combinations impair the function of a variety of systems such as ABS or DSC.

To maintain good handling and vehicle response, use only tires with a single tread configuration from a single manufacturer.

Following tire damage, have the original wheel and tire combination remounted on the vehicle as soon as possible.

Safety information

WARNING

Wheels and tires which are not suitable for your vehicle can damage parts of the vehicle, for instance due to contact with the body due to tolerances despite the same official size rating. There is a risk of an accident. The manufacturer of your vehicle strongly suggests that you use wheels and tires that have been recommended by the vehicle manufacturer for your vehicle type.

WARNING

Mounted steel wheels can cause technical problems, e.g., independent loosening of the lug bolts, damage to the brake discs. There is a risk of an accident. Do not mount steel wheels.

Recommended tire brands



For each tire size, BMW recommends certain tire brands. These can be identified by a star on the tire sidewall.

New tires

Tire traction is not optimal due to manufacturing circumstances when tires are brand-new; they achieve their full traction potential after a break-in time.

Drive conservatively for the first 200 miles/300 km.

Retreaded tires

∧ V

WARNING

Retreaded tires can have different tire casing structures. With advanced age the service life can be limited. There is a risk of an accident. The manufacturer of your vehicle does not recommend the use of retreaded tires.

The manufacturer of your vehicle does not recommend the use of retreaded tires.

Winter tires

General information

Winter tires are recommended for operating on winter roads.

Although so-called all-season M+S tires provide better winter traction than summer tires, they do not provide the same level of performance as winter tires.

Maximum speed of winter tires

If the maximum speed of the vehicle is higher than the permissible speed for the winter tires, then attach a corresponding information label/ sticker in the field of view. The label is available from a dealer's service center or another qualified service center or repair shop.

With mounted winter tires, observe and adhere to the permissible maximum speed.

Run-flat tires

If you are already using run-flat tires, for your own safety you should replace them only with the same kind. No spare tire is available in the case of a flat tire. Further information is available from a dealer's service center or another qualified service center or repair shop.

Rotating wheels between axles

Different wear patterns can occur on the front and rear axles depending on individual driving conditions. The tires can be rotated between the axles to achieve even wear. Further infor-

mation is available from a dealer's service center or another qualified service center or repair shop. After rotating, check the tire pressure and correct, if needed.

Rotating the tires is not permissible on vehicles with different tire sizes or rim sizes on the front and rear axles.

Storage

Store wheels and tires in a cool, dry and dark place.

Always protect tires against all contact with oil, grease and fuels.

Do not exceed the maximum tire inflation pressure indicated on the side wall of the tire.

Run-flat tires

Concept

Runflat tires permit continued driving under restricted conditions even in the event of a complete loss of tire inflation pressure.

General information

The wheels consist of tires that are self-supporting, to a limited degree, and possibly special rims.

The support of the sidewall allows the tire to remain drivable to a restricted degree in the event of a tire inflation pressure loss.

Follow the instructions for continued driving with a flat tire.

Label



RSC label on the tire sidewall.

Changing run-flat tires

For your own safety, only use run-flat tires. No spare tire is available in the case of a flat tire.

Further information is available from a dealer's service center or another qualified service center or repair shop.

Repairing a flat tire

Safety measures

- Park the vehicle as far away as possible from passing traffic and on solid ground.
- Switch on the hazard warning system.
- Secure the vehicle against rolling away by setting the parking brake.
- Turn the steering wheel until the front wheels are in the straight-ahead position and engage the steering wheel lock.
- Have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a quardrail.
- If necessary, set up a warning triangle at an appropriate distance.

Mobility System

Concept

With the Mobility System, minor tire damage can be sealed temporarily to enable continued travel. To accomplish this, sealant is pumped into the tires, which seals the damage from the inside.

The compressor can be used to check the tire inflation pressure.

General information

- Follow the instructions on using the Mobility System found on the compressor and sealant container.
- Use of the Mobility System may be ineffective if the tire puncture measures approx. 1/8 inches/4 mm or more.
- Contact a dealer's service center or another qualified service center or repair shop if the tire cannot be made drivable.
- If possible, do not remove foreign bodies that have penetrated the tire.
- Pull the speed limit sticker off the sealant container and apply it to the steering wheel.
- The use of a sealant can damage the TPM wheel electronics. In this case, have the electronics checked and replaced at the next opportunity.


Overview

Storage



The Mobility System is in the left storage compartment of the cargo area.


Sealant container

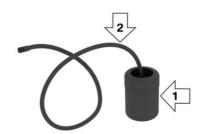

- Sealant container, arrow 1.
- Filling hose, arrow 2.

Observe use-by date on the sealant container.

Compressor

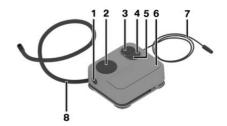

- Sealant container unlocking
- 2 Holder for sealant container
- 3 Inflation pressure dial

- 4 Reduce inflation pressure
- 5 On/off switch
- 6 Compressor
- 7 Connector/cable for socket
- 8 Connection hose

Filling the tire with sealant

Safety information

DANGER

If the exhaust pipe is blocked or ventilation is insufficient, harmful exhaust gases can enter into the vehicle. The exhaust gases contain carbon monoxide, an odorless and colorless but highly toxic gas. In enclosed areas, exhaust gases can also accumulate outside of the vehicle. There is danger to life. Keep the exhaust pipe free and ensure sufficient ventilation.

The compressor can overheat during extended operation. There is a risk of property damage. Do not run the compressor for more

than 10 min.◀

Filling

Shake the sealant container.



Pull filling hose completely out of the cover of the sealant container. Do not kink the hose.



Slide the sealant container into the holder on the compressor housing, ensuring that it engages audibly.



 Screw the filling hose of the sealant container onto the tire valve of the nonworking wheel.



With the compressor switched off, insert the plug into the power socket inside the vehicle.



With standby state switched on or the engine running, switch on the compressor.



Let the compressor run for max. 10 minutes to fill the tire with sealant and achieve a tire inflation pressure of approx. 2.5 bar.

While the tire is being filled with sealant, the tire inflation pressure may sporadically reach approx. 5 bar. Do not switch off the compressor at this point.

Checking and adjusting the tire inflation pressure

Checking

- 1. Switch off the compressor.
- 2. Read the tire inflation pressure on the tire pressure gage.

To continue the trip, a tire inflation pressure of at least 2 bar must be reached.

Removing and stowing the sealant container

- Unscrew the filling hose of the sealant container from the wheel.
- 2. Press the red release button.
- 3. Remove the sealant container from the compressor.
- Wrap the empty sealant container in suitable material to avoid dirtying the cargo area.

Minimum tire inflation pressure is not reached

- Pull the connector out of the power socket inside the vehicle.
- 2. Drive 33 ft/10 m forward and back to distribute the sealant in the tire.
- Screw the connection hose of the compressor directly onto the tire valve stem.



4. Insert the connector into the power socket inside the vehicle.



5. With standby state switched on or the engine running, switch on the compressor.

If a tire inflation pressure of at least 2 bar cannot be reached, contact your dealer's service center or another qualified service center or repair shop.

If a tire inflation pressure of at least 2 bar is reached, see Minimum tire inflation pressure is reached.

- Unscrew the connection hose of the compressor from the tire valve.
- Pull the connector out of the power socket inside the vehicle.
- 8. Stow the Mobility System in the vehicle.

Minimum tire inflation pressure is reached

- 1. Stow the Mobility System in the vehicle.
- Immediately drive approx. 5 miles/10 km to ensure that the sealant is evenly distributed in the tire.

Do not exceed a speed of 50 mph/80 km/h. If possible, do not drive at speeds less than 12 mph/20 km/h.

Adjustment

- 1. Stop at a suitable location.
- 2. Screw the connection hose of the compressor directly onto the tire valve stem.



Insert the connector into the power socket inside the vehicle.



- 4. Correct the tire inflation pressure to at least 2.0 bar.
 - To increase pressure: with standby state switched on or the engine running, switch on the compressor.
 - ➤ To reduce the pressure: press the button on the compressor.
- Unscrew the connection hose of the compressor from the tire valve.
- Pull the connector out of the power socket inside the vehicle.
- 7. Stow the Mobility System in the vehicle.

Continuing the trip

Do not exceed the maximum permissible speed of 50 mph/80 km/h.

Reinitialize the Flat Tire Monitor, refer to page 279.

Reinitialize the Tire Pressure Monitor, refer to page 273.

Replace the nonworking tire and the sealant container of the Mobility System promptly.

Snow chains

Fine-link snow chains

The manufacturer of your vehicle recommends use of fine-link snow chains. Certain types of fine-link snow chains have been tested by the manufacturer of the vehicle and recommended as road-safe and suitable.

Information regarding suitable snow chains is available from a dealer's service center or another qualified service center or repair shop.

Use

WARNING

With the mounting of snow chains on unsuitable tires, the snow chains can come into contact with vehicle parts. There is a risk of accidents or risk of property damage. Only mount snow chains on tires that are designated by their manufacturer as suitable for the use of snow chains.

Use only in pairs on the rear wheels, equipped with the tires of the following size:

- > 225/55 R 17.
- > 245/45 R 18.
- > 245/40 R 19.

Follow the snow chain manufacturer's instructions.

Make sure that the snow chains are always sufficiently tight. Re-tighten as needed according to the snow chain manufacturer's instructions.

Do not initialize the Flat Tire Monitor after mounting snow chains, as doing so may result in incorrect readings.

Do not initialize the Tire Pressure Monitor after mounting snow chains, as doing so may result in incorrect readings.

When driving with snow chains, briefly activate Dynamic Traction Control to optimize the forward momentum.

Maximum speed with snow chains

Do not exceed a speed of 30 mph/50 km/h when using snow chains.

Rear wheel steering during operation with snow chains

General information

In order to guarantee free running of the wheels when operating with snow chains, rear axle steering of the integral active steering must be switched off when snow chains are mounted.

Safety information

A

WARNING

When rear wheel steering is switched on and snow chains are mounted, there can be contact between snow chains and the chassis. There is a risk of accidents or risk of property damage. With mounted snow chains, switch off the rear wheel steering.

Switching off rear wheel steering

The rear wheel steering is switched off by specifying that snow chains are installed.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Tire chains"
- 4. "Tire chains installed"

Starting with the permissible maximum speed with snow chains of 30 mph/50 km/h the rear wheel steering will be switched on again automatically.

Tire Pressure Monitor TPM

Concept

The system monitors tire inflation pressure in the four mounted tires. The system warns you if there is a loss of pressure in one or more tires.

General information

Sensors in the tire valves measure the tire inflation pressure and tire temperature.

Using the tire settings in iDrive, the system can automatically display the specified target pressures and compare them with the actual tire inflation pressures.

If tires are being used that are not specified on the tire inflation pressure details on the vehicle, refer to page 260, such as tires with special approval, the system needs to be actively reset. The system will then take over the actual tire inflation pressures as the target pressures.

When operating the system, also note the additional information found in the Tire inflation pressure, refer to page 260, chapter.

Safety information WARNING

The display of the target pressures is not a substitute for the tire inflation pressure details on the vehicle. Incorrect entries in the tire settings can lead to incorrect target tire inflation pressure values. In this case, it cannot be ensured that the notification of a tire inflation pressure loss is reliable. There is a risk of injury and risk of damage to property. Ensure that the tire sizes of the mounted tires are entered correctly and match the details on the tires and on the vehicle.

Functional requirements

The system must have been initialized when the tire inflation pressure was correct; otherwise, reliable flagging of a flat tire is not assured:

- Every time a tire or wheel is changed, the correct details on the mounted tires must be entered in the tire settings, refer to page 274.
- ▶ For tires with special approval:

- After a tire or wheel replacement, a reset was performed with the correct tire inflation pressure.
- After the tire inflation pressure was adjusted to a new value, a reset was performed.
- Wheels with TPM electronics.

Tire settings

General information

The tire sizes of the mounted tires can be gathered from the tire inflation pressure details on the vehicle, refer to page 260, or directly on the tires.

The tire details do not need to be re-entered when the tire inflation pressure is corrected.

For summer and winter tires, the tire details entered last are stored. After a tire or wheel replacement, the settings of the tire sets used last can be selected.

Opening the menu

Using iDrive:

- "My Vehicle"
- 2. "Vehicle status"
- 3. (!) "Tire Pressure Monitor"

Changing settings

Using iDrive:

- 1. "Tire settings"
- Selecting tires:
 - "Summer tires"
 - "Winter tires/all-season tires"
- "Current:"
- Select the tire type that is mounted on the rear axle:
 - ▶ Tire size, e.g., 225/55 R17 97W
 - For tires with special approval: "Other tire"

- Select the maximum road speed that will be used with the tires.
- 6. "Confirm settings"

The measurement of the current tire inflation pressure is started. The measurement progress is displayed.

Status display

Current status

The system status can be displayed on the Control Display, e.g., whether or not the system is active.

Using iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. (!) "Tire Pressure Monitor"

The current status is displayed.

Current tire inflation pressure

The current tire inflation pressure is displayed for each tire.

The current tire inflation pressures may change during driving operation or depending on the external temperature.

Target pressure

The target pressure for the tires on the front and rear axles is displayed.

The target pressures are values stored in the vehicle.

The specified target pressures take the influence of driving operation and external temperature on the tire temperature into account. The appropriate target pressure is always displayed, independent of the weather situation, tire temperatures and driving times.

The displayed target pressure may change and may differ from the tire inflation pressure details on the door pillar of the driver's door. The tire inflation pressure can thus be corrected to the value of the displayed target pressures.

The target pressure is immediately adjusted if the vehicle load is changed in the tire settings.

Tire conditions

General information

Tire and system status are indicated by the color of the wheels and a SMS text message on the Control Display.

Existing messages are not deleted if the displayed target pressure is not reached after the tire inflation pressure is corrected.

All wheels green

- The system is active and bases warnings on the displayed target pressures.
- For tires with special approval: the system is active and bases warnings on the tire inflation pressures stored during the last reset.

One to four yellow wheels

A flat tire or major drop in the tire inflation pressure has occurred in the indicated tires.

Gray wheels

It may not be possible to identify tire pressure losses.

Possible causes:

- Malfunction.
- During tire inflation pressure measurement, after confirmation of the tire settings.
- For tires with special approval: the system is being reset.

For tires with special approval: performing a reset

General information

A reset must be performed in the following situations:

- After the tire inflation pressure has been adjusted.
- After a tire or wheel replacement.

Reset

Using iDrive:

- 1. "My Vehicle"
- "Vehicle status"
- 3. "Tire Pressure Monitor"
- Switch on drive-ready state and do not drive off.
- Reset tire inflation pressure: "Perform reset".
- 6. Drive away.

The wheels are displayed in gray and the following is displayed "Resetting Tire Pressure Monitor...".

After driving faster than 19 mph/30 km/h for a short period, the set tire inflation pressures are accepted as the target tire inflation pressures. The reset is completed automatically while driving.

After a successfully completed reset, the wheels on the Control Display are shown in green and the following is displayed: "Tire Pressure Monitor active. See label for recommended pressures.".

You may interrupt this trip at any time. When you continue the reset resumes automatically.

Messages

Required tire inflation pressure check message



A Check Control message is displayed.

Possible causes:

- Inflation was not carried out according to specifications, e.g., the tire has not been sufficiently inflated.
- The tire settings were not updated.

- For tires with special approval:
 - The system has detected a wheel change, but no reset was done.
 - The tire inflation pressure has fallen below the level of the last reset.
 - No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.

In these cases:

- Check the tire pressure and correct as needed.
- 2. Dupdate the tire settings.
 - For tires with special approval: perform a system reset.

Message in case of low tire pressure



The yellow warning light lights up.



A Check Control message is displayed.

Possible causes:

- There is a tire inflation pressure loss.
- For tires with special approval: a system reset was not performed. The system issues a warning based on the tire inflation pressures stored during the last reset.

In these cases:

- Reduce the vehicle speed. Do not exceed a speed of 80 mph/130 km/h.
- At the next opportunity, for instance at a gas station, check the tire inflation pressure in all four tires and correct if necessary.
- 3. For tires with special approval: perform a system reset.

Message in case of sharp tire inflation pressure loss



The yellow warning light lights up. In addition, a symbol with the affected tires will be displayed in the Check

Control message.

Possible causes:

- There is a flat tire or a major loss in tire inflation pressure.
- For tires with special approval: a system reset was not performed. The system issues a warning based on the tire inflation pressures stored during the last reset.

In these cases:

- Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
- Check whether the vehicle is fitted with normal tires or run-flat tires.

WARNING

A damaged regular tire with low or missing tire inflation pressure impacts handling, such as steering and braking response. Runflat tires can maintain limited stability. There is a risk of an accident. Do not continue driving if the vehicle is equipped with normal tires. Follow the information on run-flat tires and continued driving with these tires.

Run-flat tires, refer to page 268, are labeled with a circular symbol containing the letters RSC marked on the tire's sidewall.

A low tire inflation pressure might turn on DSC Dynamic Stability Control.

Actions in the event of a flat tire

Normal tires

1. Identify the damaged tire.

Check the air pressure in all four tires, for instance using the tire pressure gage of a tire repair kit.

For tires with special approval: if the tire inflation pressure in all four tires is correct, the TPM may not have been reset. In this case, perform the reset.

If tire damage cannot be found, contact a dealer's service center or another qualified service center or repair shop.

2. Repair the flat tire, for instance with a tire repair kit or by changing the tire.

Use of sealant, for instance from the tire repair kit, may damage the TPM wheel electronics. Have the electronics replaced at the next opportunity.

Run-flat tires

Safety information



Your vehicle handles differently with a runflat with no or low inflation pressure; for instance, your lane stability when braking is reduced, braking distances are longer and the self-steering properties will change. There is a risk of an accident.

Drive moderately and do not exceed a speed of 50 mph/80 km/h. ◀

Maximum speed

You may continue driving with a damaged tire at speeds up to 50 mph/80 km/h.

Continued driving with a flat tire

Observe the following when continuing to drive with a damaged tire:

- Avoid sudden braking and steering maneuvers.
- 2. Do not exceed a speed of 50 mph/80 km/h.
- 3. Check the air pressure in all four tires at the next opportunity.

For tires with special approval: if the tire inflation pressure in all four tires is correct, the Tire Pressure Monitor may not have been reset. In this case, perform the reset.

Possible driving range with a depressurized tire

The possible driving range varies depending on the how the vehicle is loaded and used, e.g., speed, road conditions, external temperature. The driving range may be less but may also be more if an economical driving style is used.

If the vehicle is loaded with an average weight and used under favorable conditions, its possible driving range will be up to 50 miles/80 km.

Vehicle handling with damaged tires

Vehicles driven with a damaged tire will handle differently, potentially leading to conditions such as the following:

- Greater likelihood of swerving off course
- Longer braking distances
- Changed self-steering properties

Adjust driving style. Avoid abrupt steering maneuvers or driving over obstacles, for instance curbs, potholes, etc.

System limits

Temperature

The tire inflation pressure depends on the tire's temperature.

Driving or exposure to the sun will increase the tire's temperature, thus increasing the tire inflation pressure.

The tire inflation pressure is reduced when the tire temperature falls again.

These circumstances may cause a warning when temperatures fall very sharply.

Following a temperature-related warning, the target pressures are displayed on the Control Display again after a short distance.

Sudden tire pressure loss

The system cannot indicate sudden serious tire damage caused by external circumstances.

Failure to perform a reset

Tires with special approval: the system will not function correctly if a reset was not performed, for example a flat tire may be indicated although the tire inflation pressures are correct.

Malfunction



The yellow warning light flashes and is then illuminated continuously. A Check Control message is displayed. It may

not be possible to identify tire pressure losses.

In these cases:

- ➤ A wheel without TPM electronics, such as an emergency wheel, is mounted: have the wheels checked, if needed.
- Malfunction: have the system checked.
- Interference caused by systems or devices with the same radio frequency: after leaving the area of the interference, the system automatically becomes active again.
- For tires with special approval: the system was unable to complete the reset. Reset the system again.

Declaration according to NHTSA/ FMVSS 138 Tire Pressure Monitoring System

Each tire, including the spare (if provided) should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.) As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pres-

sure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale. Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

FTM Flat Tire Monitor

Concept

The system detects tire inflation pressure loss on the basis of rotation speed differences between the individual wheels while driving. In the event of a tire inflation pressure loss, the diameter and therefore the rotational speed of the corresponding wheel changes. This will be detected and reported as a flat tire.

The system does not measure the actual inflation pressure in the tires.

Functional requirements

The system must have been initialized when the tire inflation pressure was correct; otherwise, reliable flagging of a flat tire is not assured. Reinitialize the system after each adjustment of the tire inflation pressure and after every tire or wheel change.

Status display

The current status of the flat tire monitor can be displayed, e.g., whether the RPA is active. Via iDrive:

- 1. "My Vehicle"
- "Vehicle status"
- 3. (!) "Flat Tire Monitor"

The status is displayed.

Initialization

When initializing, the set tire inflation pressures serve as reference values in order to detect a flat tire. Initialization is started by confirming the tire inflation pressures.

Do not initialize the system when driving with snow chains.

Using iDrive:

- 1. "My Vehicle"
- "Vehicle status"
- "Flat Tire Monitor"
- Switch on drive-ready state and do not drive off.
- Start the initialization: "Perform reset"
- Drive away.

The initialization is completed while driving, which can be interrupted at any time.

The initialization automatically continues when driving resumes.

Indication of a flat tire



The yellow warning lamp lights up. A Check Control message is displayed.

There is a flat tire or a major loss in tire inflation pressure.

- Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
- Check whether the vehicle is fitted with normal tires or run-flat tires.

↑ WARNING

A damaged regular tire with low or missing tire inflation pressure impacts handling, such as steering and braking response. Runflat tires can maintain limited stability. There is a risk of an accident. Do not continue driving if the vehicle is equipped with normal tires. Follow the information on run-flat tires and continued driving with these tires.

Run-flat tires, refer to page 268, are labeled with a circular symbol containing the letters RSC marked on the tire's sidewall.

When a flat tire is indicated, DSC Dynamic Stability Control is switched on, if needed.

System limits

A natural, even tire inflation pressure loss in all four tires will not be recognized. Therefore, check the tire inflation pressure regularly.

Sudden serious tire damage caused by external circumstances cannot be recognized in advance.

The system could be delayed or malfunction in the following situations:

- When the system has not been initialized.
- When driving on a snowy or slippery road surface.

- Sporty driving style: spinning traction wheels, high lateral acceleration (drifting).
- When driving with snow chains.

Actions in the event of a flat tire

Normal tires

- 1. Identify the damaged tire.
 - Check the air pressure in all four tires, e.g., using the tire pressure gage of a tire repair kit.
 - If the tire inflation pressure in all four tires is correct, the Flat Tire Monitor may not have been initialized. In this case, initialize the system.
 - If identification of flat tire damage is not possible, please contact a dealer's service center or another qualified service center or repair shop.
- Repair the flat tire, e.g., with a tire repair kit or by changing the tire.

Run-flat tires

Safety information

№ WARNING

Your vehicle handles differently with a runflat with no or low inflation pressure; for instance, your lane stability when braking is reduced, braking distances are longer and the self-steering properties will change. There is a risk of an accident.

Drive moderately and do not exceed a speed of 50 mph/80 km/h. ◀

Maximum speed

You may continue driving with a damaged tire at speeds up to 50 mph/80 km/h.

Continued driving with a flat tire

Observe the following when continuing to drive with a damaged tire:

- Avoid sudden braking and steering maneuvers.
- 2. Do not exceed a speed of 50 mph/80 km/h.
- 3. Check the air pressure in all four tires at the next opportunity.

If the tire inflation pressure in all four tires is correct, the Flat Tire Monitor may not have been initialized. In this case, initialize the system.

Possible driving range with a depressurized tire

The possible driving range varies depending on the how the vehicle is loaded and used, e.g., speed, road conditions, external temperature. The driving range may be less but may also be more if an economical driving style is used.

If the vehicle is loaded with an average weight and used under favorable conditions, its possible driving range will be up to 50 miles/80 km.

Vehicle handling with damaged tires

A vehicle with a damaged tire reacts differently, e.g., it has reduced lane stability during braking, a longer braking distance and different self-steering properties. Adjust your driving style accordingly. Avoid abrupt steering maneuvers or driving over obstacles, e.g., curbs, potholes, etc.

Final tire failure

Vibrations or loud noises while driving can indicate the final failure of a tire.

Reduce speed and stop; otherwise, pieces of the tire could come loose and cause an accident.

Do not continue driving. Contact a dealer's service center or another qualified service center or repair shop.

Changing wheels/tires

General information

When using run-flat tires or tire sealants, a tire does not always need to be changed immediately in the event of pressure loss due to a flat tire.

If needed, the tools for changing wheels are available as accessories from a dealer's service center or another qualified service center or repair shop.

Safety information

№ WARNING

The jack, issued by the vehicle manufacturer, is provided in order to perform a wheel change in the event of a breakdown. The jack is not designed for frequent use; for example, changing from summer to winter tires.. Using the jack frequently may cause it to become jammed or damaged. There is a risk of injury and risk of damage to property. Only use the jack to attach an emergency or spare wheel in the event of a breakdown.

WARNING

On soft or slippery ground, e.g., snow, ice, tiles, etc., the vehicle jack can slip away. There is a risk of injury. If possible, change the tire/wheel on a flat, solid and slip-resistant surface.

WARNING

The vehicle jack is only provided for short-term lifting of the vehicle for wheel changes. Even if all safety measures are observed, there is a risk of the raised vehicle falling, if the vehicle jack tilts over. There is a risk of injuries or danger to life. If the vehicle is raised, do not lie under the vehicle and do not start the engine.

WARNING

The vehicle jack is optimized for lifting the vehicle and for the jacking points on the vehicle only. There is a risk of injury. Do not lift any other vehicle or cargo using the vehicle jack. ◀

↑ WARNING

If the vehicle jack is not inserted into the jacking point provided for this purpose, the vehicle may be damaged or the vehicle jack may slip when it is being cranked up. There is a risk of injury or risk of damage to property. When cranking up the vehicle jack, ensure that it is inserted in the jacking point next to the wheel housing.

WARNING

A vehicle that is raised on a vehicle jack may fall off of the jack if lateral forces are exerted on it. There is a risk of injury and risk of damage to property. While the vehicle is raised, do not exert lateral forces on the vehicle or pull abruptly on the vehicle. Have a stuck wheel removed by a dealer's service center or another qualified service center or repair shop.

Securing the vehicle against rolling

General information

The vehicle manufacturer recommends to additionally secure the vehicle against rolling away when changing a wheel.

On a level surface



Place wheel chocks or other suitable objects in front and behind the wheel that is diagonal to the wheel to be changed.

On a slight downhill gradient




If you need to change a wheel on a slight downhill gradient, place chocks and other suitable objects, for example a rock, under the wheels of both the front and rear axles against the rolling direction.

Preparing the vehicle

- Park the vehicle as far away as possible from passing traffic, on solid and slip-resistant ground.
- Switch on the hazard warning system.
- Set the parking brake.
- Engage a gear or selector lever position P.
- As soon as permitted by the traffic flow, have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a quardrail.

- Depending on the equipment version, get tools and the emergency wheel from the vehicle.
- If necessary, set up a warning triangle or portable hazard warning lamp at an appropriate distance.
- Do not place wood blocks or similar items under the vehicle jack; otherwise, it cannot reach its carrying capacity because of the restricted height.
- Secure the vehicle additionally against rolling.
- Loosen the lug bolts a half turn.

Jacking points for the vehicle jack

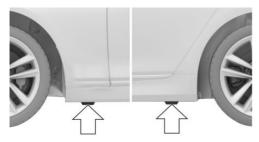

The jacking points for the vehicle jack are located at the indicated positions.

Jacking up the vehicle

WARNING

Hands and fingers can be jammed when using the vehicle jack. There is a risk of injury. Comply with the described hand position and

do not change this position while using the vehicle jack.

✓

 Hold the vehicle jack with one hand, arrow 1, and grasp the crank with your other hand, arrow 2.



Insert the vehicle jack into the rectangular recess of the jacking point closest to the wheel to be changed.




Extend the vehicle jack by turning the crank or lever clockwise.



 Take your hand away from the jack as soon as the vehicle jack is under load and continue turning the crank or lever with one hand. Make sure that the vehicle jack foot is extended vertically.



Make sure that the vehicle jack foot stands vertically and perpendicularly beneath the jacking point after extending the vehicle iack.

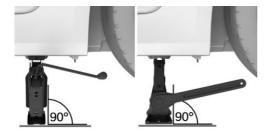

7. Crank the vehicle up, until the vehicle jack is with the entire surface on the ground and the relevant wheel is maximum 1.2 inches/3 cm above ground.

Mounting a wheel

Mount one emergency wheel only.

- Unscrew the lug bolts and remove the wheel.
- Put the new wheel or emergency wheel on and screw in at least two bolts in a crosswise pattern until hand-tight.
 - If non-original light-alloy wheels of the vehicle manufacturer are mounted, the accompanying lug bolts may have to be used as well.
- 3. Hand-tighten the remaining lug bolts and tighten all bolts well in a crosswise pattern.

- Turn the crank on the vehicle jack counterclockwise to retract the jack and lower the vehicle.
- 5. Remove the vehicle jack.

After the wheel change

- 1. Tighten the lug bolts crosswise. The tightening torque is 101 lb ft/140 Nm.
- 2. Stow the nonworking wheel in the cargo area.

The nonworking wheel cannot be stored under the cargo floor panel because of its size.

- Check tire inflation pressure at the next opportunity and correct as needed.
- Reinitialize the Flat Tire Monitor.
 Reset the Tire Pressure Monitor.
- 5. Check to make sure the lug bolts are tight with a calibrated torque wrench.
- Drive to the nearest dealer's service center or another qualified service center or repair shop to have the damaged tire replaced.

Emergency wheel

General information

In the event of a flat tire, the emergency wheel can be used instead of the defective tire. The emergency wheel is provided for temporary use so that you can have the defective wheel replaced.

Safety information

№ WARNING

The emergency wheel has particular dimensions. When driving with an emergency wheel, changed driving properties may occur at higher speeds, e.g., reduced lane stability when braking, longer braking distance and changed self-steering properties in the limit area. There is a risk of an accident. Drive mod-

erately and do not exceed a speed of 50 mph/80 km/h. ◀

Overview




The emergency wheel and the tools are located in the cargo area under the cargo floor panel.

Removing the emergency wheel

 Pull the cargo floor panel upward directly behind the rear backrests and remove it.



- 2. Open the ratchet strap.
- 3. Remove the tool holder.

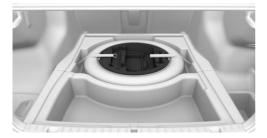

4. Remove the emergency wheel from the storage well. Do not remove any covers.


After the wheel change, insert the tool holder into the storage well and secure it with the ratchet straps.

Engine compartment

Vehicle features and options

This chapter describes all standard, countryspecific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Important features in the engine compartment

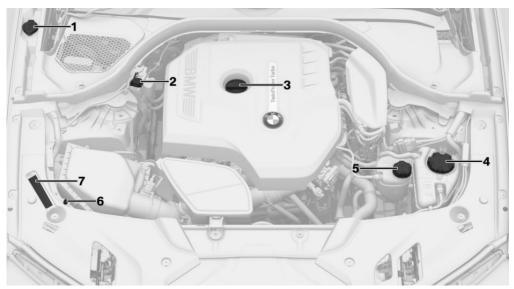

- Washer fluid reservoir
- 2 Jump-starting, positive battery terminal
- 3 Oil filler neck
- 4 Coolant reservoir, engine

- 5 Gasoline engine only: coolant reservoir, auxiliary cooling
- 6 Jump-starting, negative battery terminal
- 7 Vehicle identification number

Hood

Safety information WARNING

Improperly executed work in the engine compartment can damage vehicle components and impair vehicle functions. There is a

risk of personal and property damage. The manufacturer of your vehicle recommends that, in the effort to avoid such risks, work in the engine compartment be performed by a dealer's service center or another qualified service center or repair shop.◀

WARNING

The engine compartment accommodates moving components. Certain components in the engine compartment can also move with the vehicle switched off, e.g., the radiator fan. There is a risk of injury. Do not reach into the area of moving parts. Keep articles of clothing and hair away from moving parts.

WARNING

There are protruding parts, for instance locking hook, on the inside of the hood. There is a risk of injury. If the hood is open, pay attention to protruding parts and keep clear of these areas.

WARNING

An incorrectly locked hood can open while driving and restrict visibility. There is a risk of an accident. Stop immediately and correctly close the hood.

WARNING

Body parts can be jammed when opening and closing the hood. There is a risk of injury. Make sure that the area of movement of the hood is clear during opening and closing.

NOTE

Folded-away wipers can be jammed when the hood is opened. There is a risk of property damage. Make sure that the wipers with the wiper blades mounted are folded down onto the windshield before opening the hood.

Opening

1. Pull lever, arrow 1.

Hood is unlocked.



- After the lever is released, pull the lever again, arrow 2.
 Hood can be opened.
- 3. Be careful of protruding parts on the hood.

Closing



Let the hood drop from a height of approx. 16 inches/40 cm and push down on it to lock it fully.

The hood must engage on both sides.

Engine oil

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

Engine oil consumption

The engine oil consumption is dependent on the driving style and driving conditions.

Therefore, regularly check the engine oil level after refueling.

The engine oil consumption can increase in the following situations, for example:

- Sporty driving style.
- Break-in of the engine.
- Idling of the engine.
- With use of engine oil types that are classified as not suitable.

Electronic oil measurement

The vehicle is equipped with electronic oil measurement.

The electronic oil measurement has two measuring principles:

- Status display.
- Detailed measurement.

Electronic oil measurement

Status display

Concept

The engine oil level is monitored electronically while driving and shown on the Control Display.

If the engine oil level reaches the minimum level, a Check Control message is displayed.

Functional requirements

A current measured value is available after approx. 30 minutes of driving. During a shorter trip, the status of the last, sufficiently long trip is displayed.

With frequent short-distance trips, regularly perform a detailed measurement.

Displaying the engine oil level

Via iDrive:

- "My Vehicle"
- 2. "Vehicle status"
- "Engine oil level"

The engine oil level is displayed.

Engine oil level display messages

NOTE

An engine oil level that is too low causes engine damage. There is a risk of property damage. Immediately add engine oil. ◄

NOTE

Too much engine oil can damage the engine or the catalytic converter. There is a risk of property damage. Do not add too much engine oil. When too much engine oil is added, have oil level corrected by a dealer's service

center or another qualified service center or repair shop. ◀

Different messages appear on the Control Display depending on the engine oil level. Pay attention to these messages.

If the engine oil level is too low within the next 125 miles/200 km, add engine oil, refer to page 289.



A red indicator light indicates that the engine oil pressure is too low.

Take care not to add too much engine oil.

Detailed measurement

General information

A detailed measurement is only possible with certain engines.

Functional requirements

- Vehicle is parked in a horizontal position.
- Steptronic transmission: selector lever in selector lever position N or P and accelerator pedal not depressed.
- ▶ Engine is running and is at operating temperature.

Performing a detailed measurement

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. "Engine oil level"
- 4. "Measure engine oil level"
- "Start measurement"

The engine oil level is checked and displayed via a scale.

Time: approx. 1 minute.

Display on the Control Display

In the detailed measurement the engine oil level is checked when the vehicle is stationary, and displayed via a scale.

Gasoline engine:

If the engine oil level reaches the minimum level, a Check Control message is displayed.

During the measurement, the idle speed is increased somewhat.

Adding engine oil

General information

Only add engine oil when the message is displayed in the instrument cluster. The quantity to be added is indicated in the message displayed in the instrument cluster.

Establish idle state and safely park the vehicle before engine oil is added.

Take care not to add too much engine oil.

Safety information

Operating materials, e.g., oils, greases, coolants, fuels, can contain harmful ingredients. There is a risk of injuries or danger to life. Observe the instructions on the containers. Avoid the contact of articles of clothing, skin or eyes with operating materials. Do not refill operating materials into different bottles. Store operating materials out of reach of children.

NOTE

An engine oil level that is too low causes engine damage. There is a risk of property damage.

Add engine oil within the next 125 miles/200 km.◀

NOTE

Too much engine oil can damage the engine or the catalytic converter. There is a risk of property damage. Do not add too much engine oil. When too much engine oil is added, have oil level corrected by a dealer's service center or another qualified service center or repair shop.

Overview

The oil filler neck is located in the engine compartment, refer to page 286.

Adding engine oil

- 1. Open the hood, refer to page 287.
- Turn the lid counterclockwise.



Add engine oil.

Engine oil types to add

General information

The engine oil quality is critical for the life of the engine.

Safety information

∧ NOTE

Oil additives can damage the engine.

There is a risk of property damage. Do not use oil additives. ◀

NOTE

Incorrect engine oil can cause malfunctions in the engine or damage it. There is a risk of property damage. When selecting an engine oil, make sure that the engine oil has the correct oil rating.

Suitable engine oil types

Add engine oils that meet the following oil rating standards:

Gasoline engine

BMW Longlife-01 FE.

BMW Longlife-14 FE+.

The oil rating BMW Longlife-14 FE+ is only suitable for particular gasoline engines.

More information about suitable engine oil ratings and viscosities of engine oils can be requested from a dealer's service center or another qualified service center or repair shop.

Alternative engine oil types

If an engine oil suitable for continuous use is not available, up to 1 US quart/liter of an engine oil with the following oil rating can be added:

Gasoline engine

BMW Longlife-01.

API SL or superior oil rating.

Viscosity grades

Gasoline engine:

When selecting an engine oil, make sure that the engine oil has the viscosity grade SAE 0W-30 or SAE 0W-20. Alternatively, also engine oils with viscosity grades SAE 5W-20, SAE 5W-30, SAE 0W-40 or SAE 5W-40 can be used.

The viscosity grades SAE 0W-20 or SAE 5W-20 are only suitable for particular engines.

More information about suitable engine oil ratings and viscosities of engine oils can be requested from a dealer's service center or another qualified service center or repair shop.

Engine oil change

∧ NOTE

Engine oil that is not changed in timely fashion can cause increased engine wear and thus engine damage. There is a risk of property damage. Do not exceed the service data indicated in the vehicle.

The vehicle manufacturer recommends that you have a dealer's service center or another qualified service center or repair shop change the engine oil.

BMW recommends
Original BMW Engine Oil.

Coolant

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

Coolant consists of water and additives.

Not all commercially available additives are suitable for the vehicle. Information about suitable additives is available from a dealer's service center or another qualified service center or repair shop.

Safety information

WARNING
With the engine hot and the cooling system open, coolant can escape and lead to scalding. There is a risk of injury. Only open the cooling system with the engine cooled down.

★ WARNING

Additives are harmful and incorrect additives can damage the engine. There is a risk of injury and risk of property damage. Do not allow additives to come into contact with skin, eyes or articles of clothing. Use suitable additives only.

Coolant level

General information

Vehicles with gasoline engine feature two cooling circuits. Always check the coolant levels of both coolant reservoirs and refill as needed.

The coolant level is indicted using minimum and maximum markings. Depending on the coolant reservoir, the minimum and maximum markings are located at different locations.

Depending on the engine installation, the coolant reservoir is located on the right side or the left side of the engine compartment, refer to page 286.

Checking the coolant level in the filler neck

- 1. Let the engine cool.
- Turn the lid of the coolant reservoir slightly counterclockwise to allow any excess pressure to dissipate, then open it.
- 3. Open the coolant reservoir lid.
- The coolant level is correct if it lies between the minimum and maximum marks in the filler neck.



Adding

- 1. Let the engine cool.
- Turn the lid of the coolant reservoir slightly counterclockwise to allow any excess pressure to dissipate, then open it.
- 3. Open the coolant reservoir lid.
- 4. If the coolant is low, slowly add coolant up to the specified level; do not overfill.
- 5. Close the cap.
- 6. Have the cause of the coolant loss eliminated as soon as possible.

Disposal



Comply with the relevant environmental protection regulations when disposing of coolant and coolant additives.

Maintenance

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

BMW maintenance system

The maintenance system indicates required maintenance measures, and thereby provides support in maintaining road safety and the operational reliability of the vehicle.

In some cases, scopes and intervals may vary according to the country-specific version. Replacement work, spare parts, fuels and lubricants, and wear materials are calculated separately. Further information is available from a dealer's service center or another qualified service center or repair shop.

Condition Based Service CBS

Concept

Sensors and special algorithms take into account the driving conditions of the vehicle. CBS uses these to calculate the need for maintenance.

The system makes it possible to adapt the amount of maintenance corresponding to your user profile.

General information

Information on service requirements, refer to page 121, can be displayed on the Control Display.

Service data in the remote control

Information on the required maintenance is continuously stored in the remote control. The dealer's service center can read this data out and suggest a maintenance scope for the vehicle.

Therefore, hand the service advisor the remote control with which the vehicle was driven most recently.

Storage periods

Storage periods during which the vehicle battery was disconnected are not taken into account.

If this occurs, have a dealer's service center or another qualified service center or repair shop update the time-dependent maintenance procedures, such as checking brake fluid and, if necessary, changing the engine oil and the microfilter/activated-charcoal filter.

Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models

Please consult your Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models for additional information on service requirements.

The manufacturer of your vehicle recommends that maintenance and repair be performed by a dealer's service center or another qualified service center or repair shop. Records of regular maintenance and repair work should be retained.

Socket for OBD Onboard Diagnosis

Safety information

NOTE

The socket for Onboard Diagnosis is an intricate component intended to be used in conjunction with specialized equipment to check the vehicle's primary emissions system. Improper use of the socket for Onboard Diagnosis, or contact with the socket for Onboard Diagnosis for other than its intended purpose. can cause vehicle malfunctions and creates risks of personal and property damage. Given the foregoing, the manufacture of your vehicle strongly recommends that access to the socket for Onboard Diagnosis be limited to a dealer's service center or another qualified service center or repair shop or other persons that have the specialized training and equipment for purposes of properly utilizing the

socket for Onboard Diagnosis. ◄

Position



There is an OBD socket on the driver's side for checking the primary components in the vehicle's emissions.

Emissions



- The warning lamp lights up: Emissions are deteriorating. Have the vehicle checked as soon as possible.
- The warning lamp flashes under certain circumstances:

This indicates that there is excessive misfiring in the engine.

Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.

Replacing components

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Onboard vehicle tool kit



The onboard vehicle tool kit is located in the left storage compartment of the cargo area.

Wiper blade replacement

Safety information

If the wiper arm falls onto the windshield without the wiper blades installed, the windshield can be damaged. There is a risk of property damage. Secure the wiper arm when replacing the wiper blades and do not fold down the wipers without the wiper blades installed.

NOTE

Folded-away wipers can be jammed when the hood is opened. There is a risk of property damage. Make sure that the wipers with the wiper blades mounted are folded down onto the windshield before opening the hood.

Replacing the front wiper blades

- 1. To change the wiper blades, fold up, refer to page 106, the wiper arms.
- Lift the wiper all the way off of the windshield.



3. Press button, arrow 1, and pull out the wiper blade, arrow 2.



- 4. Insert the new wiper blade and press it on until it you hear it snap into the holder.
- 5. Fold down the wipers.

Lights and bulbs

General information

Lights and bulbs

Lights and bulbs make an essential contribution to vehicle safety.

Some items of equipment use light-emitting diodes installed behind a cover as a light source. These light-emitting diodes are related to conventional lasers and are officially designated as Class 1 light-emitting diodes.

The manufacturer of the vehicle recommends that you let a dealer's service center or another qualified service center or repair shop perform the work in case of a malfunction.

A spare light box is available from a dealer's service center or another qualified service center or repair shop.

Observe the safety information, refer to page 297.

Headlight glass

Condensation can form on the inside of the external lights in cool or humid weather. When driving with the lights switched on, the condensation evaporates after a short time. The headlight glass does not need to be changed.

If despite driving with the headlights switched on, increasing humidity forms, for instance water droplets in the light, have the headlights checked.

Safety information

WARNING

Bulbs can get hot during operation. Contact with the bulbs can cause burns. There is a risk of injury. Only change bulbs after they have cooled off.

WARNING

Work on switched-on lighting systems can cause short circuits. There is a risk of injury or risk of property damage. When working

on the lighting system, switch off the lamps in question. If necessary, heed the bulb manufacturer's instructions. ◀

NOTE

Dirty bulbs have a reduced service life.
There is a risk of property damage. Do not hold
new bulbs with your bare hands. Use a clean
cloth or something similar, or hold the bulb by
its base.

WARNING

Too intensive brightness can irritate or damage the retina of the eye. There is a risk of injury. Do not look directly into the headlights or other light sources. Do not remove the LED covers.

Front lights

Adaptive LED headlights

Observe the safety information, refer to page 297.

All lights feature LED technology.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

LED headlights

General information

Observe the safety information, refer to page 297.

All front lights are designed with LED technology, with the exception of the two turn signals.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

Turn signal, bulb replacement

General information

Observe the safety information, refer to page 297.

21-watt bulb, PY21W

Replacing a bulb

1. In the wheel house, press the two retainer tabs and fold down the cover.



Unscrew the bulb holder.



- 3. Press the bulb gently into the bulb holder, turn counterclockwise and remove it.
- Insert the new bulb.
- Mount the bulb holder.
- Mount the lid.

LED front fog lights

Observe the safety information, refer to page 297.

LED front fog lights are made using LED technology.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

Tail lights

General information

Observe the safety information, refer to page 297.

All tail lights are designed with LED technology, with the exception of the two reversing lights in the tailgate.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

Reversing light, bulb replacement

General information

Observe the safety information, refer to page 297.

21-watt bulb, H21W.

Without a warning triangle: removing the panel

- 1. Opening tailgate.
- 2. Press the latch, arrow 1, and remove the panel, arrow 2.



With a warning triangle: removing the holder

- 1. Opening tailgate.
- 2. Remove, refer to page 304, the warning triangle.
- Press both retainer tabs in the direction of the arrows, arrows 1, using the screwdriver from the onboard vehicle tool kit and re-

move the holder of the warning triangle, arrow 2.



Removing the hinge covers

1. Open the two clamps on the hinge cover.



On the expanding rivet, carefully pry out the inside pin by a small distance using a screwdriver. Then carefully pry out the expanding rivet all the way using the screwdriver.



Carefully lift off the hinge cover from the hinge arm, arrow 1, until the holding pin, arrow 2, behind the trim panel is released.



- Pull the hinge cover downward and remove.
- 5. Remove the second hinge cover in the same way.


Removing the interior trim

 Carefully pry out all eight expanding rivets using the screwdriver. Remove the expanding rivets as described above.



2. Reach into the handle recess on one side and carefully pull the interior trim downward, arrow 1, to the point where the two

holding pins, arrows 2, behind the interior trim are released.

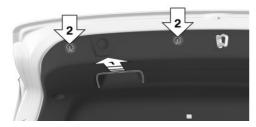

- 3. Proceed accordingly on the other side.
- Carefully release the interior trim from the tailgate, arrow 1, and, if necessary, pull the cable with the plug from the switch unit, arrow 2.



Remove the interior trim.

Replacing the reversing light

 Turn the bulb holder in the direction indicated on the reflector and remove it.



- Press the bulb gently into the bulb holder, turn counterclockwise and remove it.
- Mount the bulb holder.

Installing the interior trim

- Connect the cable to the switch unit, if necessary. Make sure that the plug engages.
- 2. Position the interior trim on the tailgate and secure it with two expanding rivets.



Press against the interior trim, arrows, so that the four holding pins engage in the tailgate.



- Fasten the interior trim using the remaining expanding rivets and press the pins into the expanding rivets.
- 5. Attach one side of the hinge cover on the interior trim, arrow 1, and fold the hinge cover onto the hinge arm, arrow 2.



 Fasten the hinge cover using the expanding rivet, arrow 1, and press onto the hinge cover so that the holding pin engages in the tailgate, arrow 2.



- 7. Close the clamps on the hinge cover.
- 8. Attach the other hinge cover accordingly.
- 9. Fasten the holder for the warning triangle and attach the warning triangle or mount the panel.

Vehicle battery

General information

The battery is maintenance-free.

The added amount of acid is sufficient for the service life of the battery.

More information about the battery can be requested from a dealer's service center or another qualified service center or repair shop.

After a battery replacement, the manufacturer of your vehicle recommends that the vehicle battery be registered on the vehicle by a dealer's service center or another qualified service center or repair shop to ensure that all comfort features are fully available and that any Check Control messages of these comfort features are no longer displayed.

Safety information

NOTE

Vehicle batteries that are not compatible can damage vehicle systems and impair vehicle functions. There is a risk of personal and

property damage. Only vehicle batteries that are compatible with your vehicle type should be installed in your vehicle. Information on compatible vehicle batteries is available at your dealer's service center.

Charging the battery

General information

Make sure that the battery is always sufficiently charged to guarantee that the battery remains usable for its full service life.



A discharged battery is indicated by a red indicator lamp.

The battery may need to be charged in the following cases:

- When making frequent short-distance drives.
- If the vehicle is not used for more than a month.

Safety information

NOTE

Battery chargers for the vehicle battery can work with high voltages and currents, which means that the 12 volt on-board network can be overloaded or damaged. There is a risk of property damage. Only connect battery chargers for the vehicle battery to the starting aid terminals in the engine compart-

Starting aid terminals

In the vehicle, only charge the battery via the starting aid terminals, refer to page 305, in the engine compartment with the engine off.

Power failure

ment.◀

After a power loss, some equipment needs to be newly initialized or individual settings updated, for example:

- Memory function: store the positions again.
- ▶ Time: update.
- Date: update.
- Solution States Stat

Disposing of old batteries



Have old batteries disposed of by a dealer's service center or another qualified service center or repair shop

or take them to a collection point.

Maintain the battery in an upright position for transport and storage. Secure the battery so that it does not tip over during transport.

Fuses

Safety information WARNING

Incorrect and repaired fuses can overload electrical lines and components. There is a risk of fire. Never attempt to repair a blown fuse.

Do not replace a nonworking fuse with a substitute of another color or amperage rating.

Replacing a fuse



Remove the cover on the right side trim.

Information on the fuse types and locations is found on a separate sheet.

Breakdown assistance

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Hazard warning flashers



The button is located in the center console. The red light in the button flashes when the hazard warning flashers are activated.

Intelligent emergency call

Concept

In case of an emergency, an Emergency Request can be made through the system.

General information

Only press the SOS button in an emergency.

For technical reasons, the Emergency Request cannot be guaranteed under unfavorable conditions.

Overview





SOS button in the roofliner.

Functional requirements

- ➤ The SIM card integrated in the vehicle has been activated.
- Standby state is switched on.
- The Assist system is functional.

Initiating an Emergency Request automatically

Under certain conditions, such as if the airbags trigger, an Emergency Request is automatically initiated immediately after a severe accident. Automatic Collision Notification is not affected by pressing the SOS button.

Initiating an Emergency Request manually

- 1. Touch the cover.
- Press the SOS button and hold until the LED on the microphone lights up green.
- The LED is illuminated green when an Emergency Request has been initiated.
 If a cancel prompt appears on the Control Display, the Emergency Request can be aborted.

If the situation allows, wait in your vehicle until the voice connection has been established.

 The LED flashes green when a connection to the BMW Response Center has been established.

When the Emergency Request is received at the BMW Response Center, the BMW Response Center contacts you and takes further steps to help you.

Even if you are unable to respond, the BMW Response Center can take further steps to help you under certain circumstances.

For this, data is transmitted to the BMW Response Center which serves to determine the necessary rescue measures. E.g., the current position of the vehicle, if it can be established.

▶ If the LED is flashing green, but the BMW Response Center can no longer be heard via the speaker, you can nevertheless still be heard at the BMW Response Center.

Roadside Assistance

Service availability

Roadside Assistance can be reached around the clock in many countries. You can obtain assistance there in the event of a vehicle breakdown.

Roadside Assistance

The Roadside Assistance phone number can be viewed via iDrive or a connection to Roadside Assistance can be established directly.

Warning triangle



The warning triangle is located on the inside of the tailgate.

Press on the release, arrow 1, and swivel the cover down, arrow 2.

First-aid kit

General information

Some of the articles have a limited service life.

Check the expiration dates of the first-aid kit contents regularly.

Replace the articles prior to their expiration date.

Storage



The first-aid kit is located in the left storage compartment of the cargo area.

Jump-starting

General information

If the battery is discharged, the engine can be started using the battery of another vehicle and two jumper cables. Only use jumper cables with fully insulated clamp handles.

Safety information

DANGER
Contact with live components can lead to an electric shock. There is a risk of injuries or danger to life. Do not touch any components

that are under voltage. ◄

Preparation

NOTE

In the case of body contact between the two vehicles, a short circuit can occur during jump-starting. There is a risk of property damage. Make sure that no body contact occurs.

- Check whether the battery of the other vehicle has a voltage of 12 volts. The voltage information can be found on the battery.
- Switch off the engine of the assisting vehicle.
- Switch off any electronic systems/power consumers in both vehicles.

Starting aid terminals

Safety information

WARNING

If the jumper cables are connected in the incorrect order, sparking may occur. There is a risk of injury. Pay attention to the correct order during connection. ◀

Positive battery terminal



The starting aid terminal in the engine compartment acts as the battery's positive terminal.

Open the cover of the starting aid terminal.

Negative battery terminal



A special nut serves as the negative terminal of the battery.

Connecting the cables

Before you begin, switch off all unnecessary electronic systems/power consumers, such as the radio, on the assisting and receiving vehicle.

- 1. Open the cover of the starting aid terminal.
- Attach one terminal clamp of the positive jumper cable to the positive terminal of the battery, or to the corresponding starting aid terminal of the vehicle providing assistance.
- Attach the terminal clamp on the other end of the cable to the positive terminal of the

battery, or to the corresponding starting aid terminal of the vehicle to be started.

- Attach one terminal clamp of the negative jumper cable to the negative terminal of the battery, or to the corresponding engine or body ground of assisting vehicle.
- Attach the second terminal clamp to the negative terminal of the battery, or to the corresponding engine or body ground of the vehicle to be started.

Starting the engine

Never use spray fluids to start the engine.

- Start the engine of the assisting vehicle and let it run for several minutes at an increased idle speed.
- 2. Start the engine of the vehicle that is to be started in the usual way.
 - If the first starting attempt is not successful, wait a few minutes before making another attempt in order to allow the discharged battery to recharge.
- 3. Let both engines run for several minutes.
- Disconnect the jumper cables in the reverse order.

Check the battery and recharge, if needed.

Tow-starting and towing

Safety information WARNING

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated, e.g., approach control warning with light braking function. There is a risk of an accident. Switch all Intelligent Safety systems off prior to tow-starting/towing.

Steptronic transmission: transporting the vehicle

General information

The vehicle is not permitted to be towed.

Safety information

NOTE

The vehicle can be damaged when towing the vehicle with a single lifted axle. There is a risk of property damage. The vehicle should only be transported on a loading platform. ◀


NOTE

When lifting the vehicle by the tow fitting or body and chassis parts; damage can occur on vehicle parts. There is a risk of property damage. Lift vehicle using suitable means. ◀

NOTE

With transport on a loading platform, do not fasten vehicle by the chassis. ◄

Tow truck

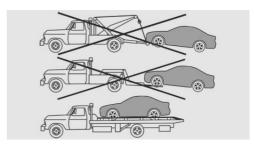

The vehicle should only be transported on a loading platform.

Pushing the vehicle

To remove a disabled vehicle from the danger area, it can be pushed for a short distance. The vehicle can only be pushed in selector lever position N.

In order to ensure that the vehicle can roll, proceed as follows:

- 1. Switch on drive-ready state, refer to page 97.
- 2. Depress brake pedal.
- 3. Engage selector lever position N.

If there is a malfunction, it may happen that you cannot change the selector lever position. Electronically unlock the transmission lock, refer to page 111, if needed.

Towing other vehicles

General information

Switch on the hazard warning system, depending on local regulations.

If the electrical system has failed, clearly identify the vehicle being towed by placing a sign or a warning triangle in the rear window.

Safety information WARNING

If the approved gross vehicle weight of the towing vehicle is lighter than the vehicle to be towed, the tow fitting can tear off or it will not be possible to control the vehicle's response. There is a risk of an accident! Make

sure that the gross vehicle weight of the towing vehicle is heavier than the vehicle to be towed.◀

I NOTE

If the tow bar or tow rope is attached incorrectly, damage to other vehicle parts can occur. There is a risk of property damage. Correctly attach the tow bar or tow rope to the tow fitting.

Tow bar

The tow fittings used should be on the same side on both vehicles.

Should it prove impossible to avoid mounting the tow bar at an offset angle, please observe the following:

- Maneuvering capability is limited going around corners.
- The tow bar will generate lateral forces if it is secured with an offset.

Tow rope

When starting to tow the vehicle, make sure that the tow rope is taut.

To avoid jerking and the associated stresses on the vehicle components when towing, always use nylon ropes or nylon straps.

Tow fitting

General information



The screw-in tow fitting should always be carried in the vehicle.

The tow fitting can be screwed in at the front or rear of the vehicle.

The tow fitting is found in the onboard vehicle tool kit, refer to page 296.

- Use only the tow fitting provided with the vehicle and screw it all the way in.
- Use the tow fitting for towing on paved roads only.
- Avoid lateral loading of the tow fitting, for instance do not lift the vehicle by the tow fitting.

Safety information

NOTE
If the tow fitting is not used as intended, there can be damage to the vehicle or to the tow fitting. There is a risk of property damage.
Observe the notes on using the tow fitting.

◄

Screw thread for tow fitting



Press on the mark on the edge of the cover to push it out.

Tow-starting

Do not tow-start the vehicle.

Start the engine by jump-starting, refer to page 305, if possible.

Have the reasons for the starting difficulties corrected by a dealer's service center or another qualified service center or repair shop.

Care

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Washing the vehicle

General information

Regularly remove foreign objects such as leaves in the area below the windshield when the hood is raised.

Wash your vehicle frequently, particularly in winter. Intense soiling and road salt can damage the vehicle.

Steam blaster and high-pressure washer

Safety information

NOTE

When cleaning with high-pressure washers, components can be damaged due to the pressure or temperatures being too high.

There is a risk of property damage. Maintain sufficient distance and do not spray too long continuously. Follow the operating instructions for the high-pressure washer.

Distances and temperature

- Maximum temperature: 140 °F/60 °C.
- Minimum distance from sensors, cameras, seals: 12 in/30 cm.

 Minimum distance from glass sunroof: 31.5 in/80 cm.

Automatic vehicle washes

Safety information

A

NOTE

Improper use of automatic vehicle washes can cause damage to the vehicle. There is a risk of damage to property. Follow the following instructions:

- Give preference to cloth vehicle washes or those that use soft brushes in order to avoid paint damage.
- Avoid vehicle washes with guide rails higher than 4 in/10 cm to avoid damage to the chassis.
- Observe the tire width of the guide rail to avoid damage to tires and rims.
- Fold in exterior mirrors to avoid damage to the exterior mirrors.
- Deactivate the wiper and, if necessary, rain sensor to avoid damage to the wiper system.

Before driving into a vehicle wash

In order to ensure that the vehicle can roll in a vehicle wash, take the following steps:

Steptronic transmission

- Drive into the vehicle wash.
- 2. Engage selector lever position N.
- Deactivate Automatic Hold, refer to page 103.
- Release the parking brake.
- Switch off the drive-ready state by pressing the Start/Stop button.

In this way, standby state remains switched on, and a Check Control message is displayed.

NOTE

Selector lever position P is automatically engaged when standby state is switched off. There is a risk of property damage. Do not switch standby state off in vehicle washes.

Some vehicle washes do not permit persons in the vehicle. The vehicle cannot be locked from the outside when in selector lever position N. A signal sounds when an attempt is made to lock the vehicle.

Driving out of a vehicle wash

To switch on the drive-ready state, follow these steps:

Steptronic transmission

- Make sure that the remote control is in the vehicle.
- 2. Depress the brake pedal.
- Press the Start/Stop button.

Pressing the Start/Stop button without stepping on the brake turns standby state off.

Selector lever position

Selector lever position P is engaged automatically:

- With standby state switched off.
- After approx. 35 minutes.

Headlights

Do not rub the headlights dry and do not use abrasive or acidic cleaning agents.

Soak areas that have been dirtied, for instance from insects, with shampoo and wash off with water.

Thaw ice with de-icing spray; do not use an ice scraper.

After washing the vehicle

After washing the vehicle, apply the brakes briefly to dry them; otherwise, braking action can be reduced. The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

Completely remove all residues on the windows, to minimize loss of visibility due to smearing and to reduce wiper noises and wiper blade wear.

Vehicle care

Vehicle care products

General information

BMW recommends using vehicle care and cleaning products from BMW. Suitable care products are available from a dealer's service center or another qualified service center or repair shop.

Safety information

WARNING

Cleansers can contain substances that are dangerous and harmful to your health. There is a risk of injury. When cleaning the interior, open the doors or windows. Only use products intended for cleaning vehicles. Follow the instructions on the container.

Vehicle paint

General information

Regular care contributes to driving safety and value retention. Environmental influences in areas with elevated air pollution or natural contaminants, such as tree resin or pollen can affect the vehicle's paintwork. Tailor the frequency and extent of your vehicle care to these influences.

Aggressive substances such as spilled fuel, oil, grease or bird droppings, must be removed im-

mediately to prevent the finish from being altered or discolored.

Matte finish

Only use cleaning and care products suitable for vehicles with matte finish.

Leather care

Remove dust from the leather regularly, using a cloth or vacuum cleaner.

Otherwise, particles of dust and road grime chafe in pores and folds, and lead to increased wear and premature degradation of the leather surface.

To guard against discoloration, such as from clothing, clean leather and provide leather care roughly every two months.

Clean light-colored leather more frequently because soiling on such surfaces is substantially more visible.

Use leather care products; otherwise, dirt and grease will gradually break down the protective layer of the leather surface.

Upholstery material care

General information

Vacuum the upholstery regularly with a vacuum cleaner.

If upholstery is very dirty, e.g., with beverage stains, use a soft sponge or microfiber cloth with a suitable interior cleaner.

Clean the upholstery down to the seams using large sweeping motions. Avoid rubbing the material vigorously.

Safety information

NOTE

Open Velcro® fasteners on articles of clothing can damage the seat covers. There is a risk of property damage. Ensure that any Velcro® fasteners are closed.

Caring for special components

Light-alloy wheels

When cleaning the vehicle, use only neutral wheel cleaners having a pH value from 5 to 9. Do not use abrasive cleaning agents or steam jets above 140 °F/60 °C. Follow the manufacturer's instructions.

Aggressive, acidic or alkaline cleaning agents can destroy the protective layer of adjacent components, such as the brake disk.

After cleaning, apply the brakes briefly to dry them. The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

Chrome surfaces

Carefully clean components such as the radiator grille or door handles with an ample supply of water, possibly with shampoo added, particularly when they have been exposed to road salt.

Rubber components

Environmental influences can cause surface soiling of rubber parts and a loss of gloss. Use only water and suitable cleaning agents for cleaning.

Treat especially worn rubber parts with rubber care agents at regular intervals. When cleaning rubber seals, do not use any silicon-containing vehicle care products in order to avoid damage or noises.

Fine wood parts

Clean fine wood facing and fine wood components only with a moist rag. Then dry with a soft cloth.

Kenaf

Only treat parts made of Kenaf fibers, for instance in the tailgate trim, using suitable care products.

Plastic components

Cleansers that contain alcohol or solvents, such as lacquer thinners, heavy-duty grease removers, fuel, or such, can damage plastic parts. There is a risk of property damage. Clean with a microfiber cloth. Dampen cloth lightly with water.

Plastic components are e.g.:

- Imitation leather surfaces.
- Roofliner.
- Light lenses.
- Matt black spray-coated components.
- Painted parts in the interior.

Clean with a microfiber cloth.

Dampen cloth lightly with water.

Do not soak the roofliner.

Safety belts

WARNING

Chemical cleansers can destroy the safety belt webbing. Missing protective effect of the safety belts. There is a risk of injuries or danger to life. Use only a mild soapy solution for cleaning the safety belts. ◄

Dirty belt straps impede the reeling action and thus have a negative impact on safety.

Use only a mild soapy solution for cleaning the installed belt straps.

Do not retract the safety belts until they are dry.

Carpets and floor mats

WARNING
Objects in the driver's floor area can limit the pedal distance or block a depressed pedal. There is a risk of an accident. Stow objects in the vehicle such that they are secured and cannot enter into the driver's floor area. Use floor mats that are suitable for the vehicle and

can be safely attached to the floor. Do not use loose floor mats and do not layer several floor mats. Make sure that there is sufficient clearance for the pedals. Ensure that the floor mats are securely fastened again after they were removed, e.g., for cleaning. ◄

The floor mats can be removed from the vehicle's interior for cleaning.

If the floor carpets are very dirty, clean with a microfiber cloth and water or a textile cleaner. To prevent matting of the carpet, rub back and forth in the direction of travel only.

Sensor/camera lenses

To clean sensors and camera lenses, use a cloth moistened with a small amount of glass detergent.

Displays, screens, and protective glass of the Head-Up Display

NOTE

Chemical cleansers, moisture or fluids of any kind can damage the surface of displays and screens. There is a risk of property damage. Clean with a clean, antistatic microfiber cloth. ◀

NOTE

The surface of displays can be damaged with improper cleaning. There is a risk of property damage. Avoid pressure that is too high and do not use any scratching materials. ◄

Clean with a clean, antistatic microfiber cloth. Clean the protective glass of the Head-up Display, refer to page 128, using a microfiber cloth and commercially available dish-washing soap.

Long-term vehicle storage

When the vehicle is shut down for longer than three months, special measures must be taken. Further information is available from a dealer's service center or another qualified service center or repair shop.



Reference

This chapter contains the technical data and an index that will quickly take you to the information you need.

Technical data

Vehicle features and options

This chapter describes all standard, countryspecific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

The technical data and specifications in this Owner's Manual are used as guidance values. The vehicle-specific data can deviate from this, e.g., due to the selected special equipment, country version or country-specific measurement method. Detailed values can be found in the approval documents, on labels on the vehi-

cle or can be obtained from a dealer's service center or another qualified service center or repair shop.

The information in the vehicle documents always has priority over the information in this Owner's Manual.

Dimensions

The dimensions can vary depending on the model version, equipment or country-specific measurement method.

The specified heights do not take into account attached parts, e.g., a roof antenna, roof racks

or spoiler. The heights can deviate, e.g., due to the selected special equipment, tires, load and chassis version.

BMW 5 Series Sedan		
Width with mirrors	inches/mm	83.7/2,126
Width without mirrors	inches/mm	73.5/1,868
Height	inches/mm	58.2/1,479
Length	inches/mm	194.6/4,943
Wheelbase	inches/mm	117.1/2,975
Smallest turning radius diam.	ft/m	39.6-40.1/12.1-12.2

Weights

530i			
Approved gross vehicle weight	lbs/kg	4,850/2,200	
Load	lbs/kg	860/390	
Approved front axle load	lbs/kg	2,299/1,043	
Approved rear axle load	lbs/kg	2,745/1,245	
Approved roof load capacity	lbs/kg	220/100	
Cargo area capacity	cu ft	18.7	
Canada: cargo area capacity	cu ft/l	18.7/530	
540i			
Approved gross vehicle weight	lbs/kg	5,060/2,295	
Load	lbs/kg	860/390	
Approved front axle load	lbs/kg	2,452/1,112	
Approved rear axle load	lbs/kg	2,736/1,241	
Approved roof load capacity	lbs/kg	220/100	
Cargo area capacity	cu ft	18.7	
Canada: cargo area capacity	cu ft/l	18.7/530	
530i xDrive			
Approved gross vehicle weight	lbs/kg	4,976/2,257	
Load	lbs/kg	860/390	
Approved front axle load	lbs/kg	2,414/1,095	
Approved rear axle load	lbs/kg	2,729/1,238	
Approved roof load capacity	lbs/kg	220/100	
Cargo area capacity	cu ft	18.7	
Canada: cargo area capacity	cu ft/l	18.7/530	

540i xDrive		
Approved gross vehicle weight	lbs/kg	5,165/2,343
Load	lbs/kg	838/380
Approved front axle load	lbs/kg	2,579/1,170
Approved rear axle load	lbs/kg	2,740/1,243
Approved roof load capacity	lbs/kg	220/100
Cargo area capacity	cu ft	18.7
Canada: cargo area capacity	cu ft/l	18.7/530

Capacities

	US gal/liters	Notes
Fuel tank, approx.	17.9/68.0	Fuel quality, refer to page 258

Appendix

Any updates to the Owner's Manual of the vehicle are listed here.

Updates made after the editorial deadline

These chapters of the printed Owner's Manual contain updates made after the editorial deadline.

Wheels and tires: Wheel change: Safety information, refer to page 281, .

License Texts and Certifications

The following applies in addition to the radio transmission license texts of the Integrated Owner's Manual in the vehicle.

Wireless Charging

Canada

FCC/INDUSTRY CANADA NOTICE

This device complies with part 15 of the FCC rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: RK7184-00 IC: 4774A-18400

Any changes or modifications not expressly approved by Novero could void the user's authority to operate this equipment.

This device complies with RF exposure guidelines of the FCC rules and with Industry Canada license-exempt RSS standard(s) at a distance of 2 in/5 cm under normal use case conditions.

NOTE: This device has been tested for human exposure limits and found compliant at a minimum distance of 4 in/10 cm during operation.

FCC/Notice d'industrie du Canada

Cet équipement est considéré comme conforme aux conditions de la section 15 de la réglementation de la FCC. Il répond aux deux conditions suivantes:

- Ce dispositif ne causera aucune interférence nuisible;
- Ce dispositif peut accepter toute interférence reçue, notamment l'interférence entraînant un fonctionnement indésirable.

FCC ID: RK7184-00

IC: 4774A-18400

Les changements ou modifications non approuvés expressément par nover peuvent entraîner la caducité de l'autorisation d'utiliser l'équipement.

Europe



European Union: Declaration of Conformity

Hereby, Novero Dabendorf GmbH declares that the radio equipment type WCH-184 is in

compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.novero.com/declaration_of_conformity

Technical information: Frequency Band: 111kHz

Maximum Magnetic Field Strength: 42dBμA/m Manufacturer: Novero Dabendorf GmbH Address: Märkische Strasse 72, 15806 Zos-

sen, Germany

Phone: +49 3377 316-0

Instructions and Safety information (to be defined for the Wireless Charger)

Manufacturers shall ensure that the radio equipment is accompanied by instructions and safety information in a language which can be easily understood by consumers and other end-users, as determined by the Member State concerned.

Instructions shall include the information required to use radio equipment in accordance with its intended use.

Such information shall include, where applicable, a description of accessories and components, including software, which allow the radio equipment to operate as intended.

Such instructions and safety information, as well as any labelling, shall be clear, understandable and intelligible.

Bulgarian

С настоящото [име на производителя] декларира, че този тип радиосъоръжение [обозначение на типа радиосъоръжение] е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.novero.com/declaration_of_conformity

Čeština

Tímto [jméno výrobce] prohlašuje, že typ rádiového zařízení [označení typu rádiového zařízení] je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.novero.com/declaration_of_conformity

Dansk

Hermed erklærer [fabrikantens navn], at radioudstyrstypen [betegnelse for typen af radioudstyr] er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.novero.com/declaration_of_conformity

Deutsch

Hiermit erklärt Novero Dabendorf GmbH, dass der Funkanlagentyp WCH-184 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.novero.com/declaration_of_conformity

Eesti

Käesolevaga deklareerib [tootja nimi], et käesolev raadioseadme tüüp [raadioseadme tüübi nimetus] vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.novero.com/declaration_of_conformity

English

Hereby, Novero Dabendorf GmbH declares that the radio equipment type WCH-184 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.novero.com/declaration_of_conformity

Español

Por la presente, [nombre del fabricante] declara que el tipo de equipo radioeléctrico designación del tipo de equipo radioeléctrico] es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.novero.com/declaration_of_conformity

Ελληνικά

Με την παρούσα ο/η [επωνυμία του κατασκευαστή], δηλώνει ότι ο ραδιοεξοπλισμός [ονομασία του τύπου ραδιοεξοπλισμού] πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.novero.com/declaration_of_conformity

Français

Le soussigné, [nom du fabricant], déclare que l'équipement radioélectrique du type [désignation du type] est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.novero.com/declaration_of_conformity

Hrvatski

Ime proizvođača] ovime izjavljuje da je radijska oprema tipa [oznaka tipa radijske opreme] u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.novero.com/declaration_of_conformity

Italiano

Il fabbricante, [nome del fabbricante], dichiara che il tipo di apparecchiatura radio [designazione del tipo di apparecchiatura radio] è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.novero.com/declaration_of_conformity

Latviešu

Ar šo [ražotāja nosaukums] deklarē, ka radioiekārta [radioiekārtas tipa apzīmējums] atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.novero.com/declaration_of_conformity

Lietuviu

Aš, [gamintojo vardas, pavardė/pavadinimas], patvirtinu, kad radijo įrenginių tipas [radijo įrenginių tipo pavadinimas] atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.novero.com/declaration_of_conformity

Magyar

A gyártó neve] igazolja, hogy a [a rádióberendezés típusa] típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.novero.com/declaration_of_conformity

Malti

B'dan, [Isem il-manifattur], niddikjara li dan ittip ta' taghmir tar-radju [deskrizzjoni tat-tip ta' taghmir ta' radju] huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan I-in-dirizz tal-Internet li ġej: http://www.novero.com/declaration_of_conformity

Nederlands

Hierbij verklaar ik, [naam van de fabrikant], dat het type radioapparatuur [aanduiding van het type radioapparatuur] conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.novero.com/declaration_of_conformity

Polski

Nazwa producenta] niniejszym oświadcza, że typ urządzenia radiowego [określenie typu urządzenia radiowego] jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.novero.com/declaration of conformity

Português

O(a) abaixo assinado(a) [nome do fabricante] declara que o presente tipo de equipamento de rádio [designação do tipo de equipamento de rádio] está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.novero.com/declaration_of_conformity

Slovensko

Ime proizvajalca] potrjuje, da je tip radijske opreme [označba tipa radijske opreme] skladen z irektivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.novero.com/declaration_of_conformity

Slovensky

Meno výrobcu] týmto vyhlasuje, že rádiové zariadenie typu [označenie typu rádiového zariadenia] je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.novero.com/declaration_of_conformity


Suomi

Valmistajan nimi] vakuuttaa, että radiolaitetyyppi [radiolaitteen tyyppimerkintä] on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.novero.com/declaration_of_conformity

Svenska

Härmed försäkrar [tillverkarens namn] att denna typ av radioutrustning [ange typ av radioutr stning] överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EUförsäkran om verensstämmelse finns på följande webbadress: http://www.novero.com/declaration_of_conformity

Serbia

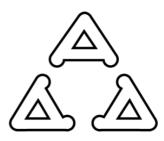

И005 16

South Africa



TA-2016/1263 APPROVED

South Korea



MSIP-CMM-N7V-WCH-184

인증 받은 자의 상호 Novero Dabendorf GmbH 제조자/제조국가 Germany 기자재의 명칭/ 모델명 WCH-184 기자재의 명칭/ 모델명 MSIP-CMM-N7V-WCH-184

USA

FCC/INDUSTRY CANADA NOTICE

This device complies with part 15 of the FCC rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- this device must accept all interference received, including interference that may cause undesired operation.

FCC ID: RK7184-00

IC: 4774A-18400

Any changes or modifications not expressly approved by Novero could void the user's authority to operate this equipment.

This device complies with RF exposure guidelines of the FCC rules and with Industry Canada license-exempt RSS standard(s) at a distance of 2 in/5 cm under normal use case conditions. NOTE: This device has been tested for human exposure limits and found compliant at a minimum distance of 4 in/10 cm during operation.

Wireless charging tray



Mounting position of the product.

Note

This device has been tested for human exposure limits and found compliant at a minimum distance of 4 in/10 cm during operation.

Therefore, a distance of 4 in/10 cm must be maintained in every direction when operating the device.

Everything from A to Z

Index

A

ABS, Antilock Brake System 167 Acceleration Assistant, see Launch Control 111 Accessories and parts 8 Accident prevention, see Active Protection 164 ACC, see Active Cruise Control with Stop&Go function 173 Activated-charcoal filter 214 Active Blind Spot Detection 157 Active comfort suspension, see Adaptive Drive 208 Active Cruise Control with Stop&Go function, ACC 173 Active damping control, see Dynamic Damping Control 208 Active Guard, see Intelligent Safety 140 Active Protection 164 Active roll stabilization 208 Active seat ventilation 91 Active Steering, integral 169 Adaptive brake assistant 167 Adaptive brake lights, see Brake force display 164 Adaptive Drive 208 Adaptive Light Control 133 ADAPTIVE, see Driving Dynamics Control 112 Additives, engine oil types 290 Airbaas 137 Airbags, indicator/warning

Air circulation, see Recirculated-air mode 212 Air, dehumidifying, see Cooling function 211 Air distribution, manual 213 Air flow, automatic climate control 213 Air outlets, see Ventilation 214 Air pressure, tires 260 Alarm system 72 Alarm, unintentional 73 All-season tires, see Winter tires 267 All-wheel-drive, see xDrive 169 Ambient air package 219 Ambient light 135 Animal detection, see Night Vision 151 Antifreeze, see Washer fluid 107 Antilock Brake System, **ABS 167** Anti-slip control, see **DSC 167** Approach control warning with City light braking function 142 Approach control warning with light braking function 142 Approved axle load 317 Approved total weight 317 App, see BMW Driver's Guide App 6 Arrival time 127 Ashtray 225 Ashtrav. front 225 Assistance, Roadside Assistance 304

Assistance when driving off, see Drive-off assistant 167 Assistance with breakdown 303 Attentiveness assistant 165 AUC Automatic Recirculating Air Control 212 Audio, see Owner's Manual for Navigation, Entertainment and Communication 6 AUTO H button, see Parking brake 100 Automatic activation, see Individual activation 92 Automatic climate control 210 Automatic cruise control with Stop&Go function 173 Automatic Curb Monitor, exterior mirror 87 Automatic deactivation. Front-seat passenger airbags 139 Automatic headlight control 132 Automatic Hold, see Parking brake 100 Automatic locking 71 Automatic Recirculating Air Control AUC 212 Automatic Soft Closing 68 Automatic transmission, see Steptronic transmission 108 Automatic unlocking 71 Automatic vehicle wash 309 AUTO program, automatic climate control 211 AUTO program, intensity 212 Auto Start/Stop function 98

light 139

Camera, rearview camera,

Average speed and average fuel consumption 126 Axle loads, weights 317

B

Backrest curvature, see Lumbar support 81 Backrest, seats 79 Backrest tilt 81 Backrest, width 82 Bandages, see First-aid kit 304 Bar for tow-starting/ towing 307 Battery, changing, remote control of the vehicle 56 Battery, disposing of 302 Battery, vehicle 301 Being towed, see Tow-starting and towing 306 Belts, see Safety belts 82 Beverage holder, see Cup holders 232 Blocking, power window, see Safety switch 75 Bluetooth connection 41 BMW Assist, see Owner's Manual for Navigation, Entertainment and Communication 6 BMW display key 57 BMW display key, malfunction 60 BMW Driver's Guide App 6 BMW Gesture Control 30 BMW maintenance system 294 Bonus range, ECO PRO 249 Bottle holder, see Cup holder 232 Brake assistant 167 Brake assistant, adaptive 167 Brake discs, breaking in, see Brake system 242 Brake force display 164

Brake lights, brake force display 164 Brake lights, see Lights and bulbs 297 Brake pads, breaking in, see Brake system 242 Brake system 242 Braking, information 243 Breakdown assistance 303, 304 Breakdown, see FTM Flat Tire Monitor 279 Break-in 242 Brightness, Control Display 38 Bulb replacement, see Lights and bulbs 297 Bulbs, replacing, see Lights and bulbs 297 Buttons on the steering wheel 14 Button, SOS, see Intelligent emergency call 303 Button, Start/Stop 97 Bypassing, see Jump-starting 305

C

towing 307 California Proposition 65 Warning 8 Calling up mirror adjustment 72 Calling up seat adjustment 72 Calling up steering wheel adiustment 72 Camera-based assistance systems, see Intelligent Safety 140 Camera-based cruise control, see Active Cruise Control with Stop&Go function 173 Camera lenses, care 312

Cable for tow-starting/

without Surround View 187 Camera, see Surround View 190 Can holder, see Cup holders 232 Care, Head-Up Display 312 Care of displays, screens 312 Care, see Washing the vehicle 309 Care, vehicle 310 Cargo area 234 Cargo area capacity 317 Cargo area, enlarging 238 Cargo area, loading, see Stowing and securing cargo 235 Cargo area, storage compartments 235 Cargo, stowing and securing 235 Cargo straps, see Lashing eyes in the cargo area 235 Carpet, care 312 Car seats, see Transporting children safely 93 Cartridge replacement, see Ambient air package 219 Car wash 309 Car washing 309 Catalytic converter, see Hot exhaust system 243 CBS Condition Based Service 294 Cell phone, see Owner's Manual for Navigation, Entertainment and Communication 6 Center armrest 232 Center console 16 Central locking system 62 Central screen, see Control Display 21

Changes, technical, see For

Your Own Safety 7

Changing parts 296

Changing wheels 281
Changing wheels/tires 266
Chassis number, see Vehicle
identification number 10
Check Control 116
Checking the engine oil level
electronically 288
Checking the oil level elec-
tronically 288
Children, seating position 93
Children, transporting
safely 93
Child restraint fixing system
LATCH 95
Child restraint systems,
mounting 94
Child restraint systems, see
Transporting children
safely 93
Child safety locks 96
Child seat, mounting 94
Child seats, see Transporting
children safely 93
Chrome-plated surfaces,
care 311
Chrome surfaces, care 311
Cigarette lighter 226
Cleaning displays,
screens 312
Cleaning, Head-Up Dis-
play 312
Climate control 210
Clothes hooks 233
Coasting 250
Coasting with engine decou-
pled, see Coasting 250
Coasting with idling en-
gine 250
Combination switch, see Turn
signals 103
Combination switch, see
Washer/wiper system 104
Comfort Access 63
COMFORT, see Driving Dy-
namics Control 112
Harrings Correct 1 12

cation 6 Compact wheel, see Emergency wheel 284 Comparison of entries, see Entry comparison 24 Compartments in the doors 231 Compatible devices, see Suitable devices 41 Compressor 269 Computer, see Onboard computer in the instrument cluster 125 Condensation, removing from the windows 213 Condensation water under the parked vehicle 244 Condition Based Service CBS 294 Confirmation signal from the vehicle 71 ConnectedDrive, see Owner's Manual for Navigation, Entertainment and Communication 6 Connecting device 40 Connecting electrical devices, see Sockets 227 Connecting, mobile devices 40 Connecting mobile phone 40 Connecting smartphone 40 Connecting telephone 40 Connections, Screen Mirroring 45 Container for washer fluid 107 Continued driving with a flat tire 277, 281 Control Display 21

Communication, see Owner's

Manual for Navigation, En-

tertainment and Communi-

Control systems, driving stability 167 Convenient opening with the remote control 55 Coolant 292 Coolant level 292 Coolant temperature 120 Cooling function 211 Cooling, maximum 211 Cooling system 292 Cornering light 133 Corrosion on brake discs 244 Cosmetic mirror 225 Crossing traffic warning 205 Cruise control 171 Cruise control, active with Stop&Go function 173 Cruise control with distance control, see Active Cruise Control with Stop&Go function 173 Cruise control without distance control, see cruise control 171 Cruising range 121 Cup holder 232 Cup holder, front 232 Cup holder, rear 232 Current fuel consumption, onboard computer 126

D

Damage, tires 266
Damping control, dynamic 208
Data protection, settings 39
Data, see Deleting personal data in the vehicle 39
Data, technical 316
Date 37
Daytime running lights 133
Defogging the windows 213
Defrosting the windows 213
Dehumidifying, air 211
Deleting personal data 39

Control Display, settings 36

Controller 22

Departure time, parked-vehi-
cle ventilation 218
Destination distance 127
Device list, displaying 41
Diagnosis connection 295
Digital clock 121
Dimensions 316
Dimmable exterior mirrors 87
Dimmable interior mirror 88
Direct dial buttons, see Pro-
grammable memory but-
tons 29
Direction indicator, see Turn
signals 103
Display in the windshield, see
Head-up Display 128
Display key, malfunction 60
Display key, see BMW display
key 57
Display lighting, see Instru-
ment lighting 134
Displays 115
Displays and symbols 6
Displays, ECO PRO 249
Displays, screens 312
Disposal, coolant 293
Disposal, vehicle battery 302
Distance control, see
PDC 183
Distance to destination 127
Divided screen view, see Split
screen 27
Door handle lighting, see wel-
come lights 132
Door lock, see Remote con-
trol 54
Drive-off assistant 167
Drive-off assistant, see
DSC 167
Driver assistance, see Intelli-
gent Safety 140
Drive-ready state, idle state,
and standby state 19
Drive-ready state, see start-
ing the engine 97
Driver profiles 68
- · · · · · · · · · · · · · · · · · · ·

Driver profile, welcome screen 68 Driving Assistant, see Intelligent Safety 140 Driving Dynamics Control 112 Driving instructions, breakin 242 Driving mode, ECO PRO 247 Driving mode, see Driving Dynamics Control 112 Driving notes, general 242 Driving on racetracks 245 Driving stability control systems 167 Driving style analysis, ECO PRO 251 Driving tips 242 DSC Dynamic Stability Control 167 DTC Dynamic Traction Control 168 Dynamic Damping Control 208 Dynamic Stability Control **DSC 167 Dynamic Traction Control DTC 168** E

ECO PRO 247
ECO PRO bonus range 249
ECO PRO displays 249
ECO PRO driving style analysis 251
ECO PRO INDIVIDUAL, see
Driving Dynamics Control 112
ECO PRO, see Driving Dynamics Control 112
Electric sunroof, glass 76
Electronic oil measurement 288
Electronic Stability Program
ESP, see DSC 167

Emergency Request 303 Emergency service, see Roadside Assistance 304 Emergency unlocking, fuel filler flap 257 Emergency unlocking, tailgate 68 Emergency unlocking, transmission lock 111 Emergency wheel 284 Energy recovery, onboard computer 126 Energy savings, see Gear shift indicator 122 Engine, automatic Start/Stop function 98 Engine compartment 286 Engine compartment, working in 286 Engine coolant 292 Engine idling when driving, see Coasting 250 Engine oil 288 Engine oil, adding 289 Engine oil change 291 Engine oil filler neck 289 Engine oil temperature 120 Engine oil types, suitable 290 Engine oil types to add 290 Engine start, jump-starting 305 Engine start, see drive-ready state 97 Engine stopping, see driveready state 97 Engine temperature 120 Entertainment, see Owner's Manual for Navigation, Entertainment and Communication 6 Entry comparison, navigation 24 Equipment, interior 223

Error displays, see Check

Control 116

ESP Electronic Stability Pro-
gram, see DSC 167
Evasion assistance 146
Exchanging wheels/tires 266
Exhaustion warner 165
Exhaust system 243
Exterior lighting during un-
locking 55
Exterior lighting with the vehi-
cle locked 55
Exterior mirror, Automatic
Curb Monitor 87
Exterior mirror, automatic
dimming feature 87
Exterior mirrors 86
External start 305
External temperature 121
Eyelet for towing 307
Eyes, see Lashing eyes in the
cargo area 235

F

Failure message, see Check Control 116 False alarm, see Avoiding unintentional alarms 73 Fan, see Air flow 213 Filler neck for engine oil 289 Fine wood parts, care 311 First-aid kit 304 Flat tire, changing wheels 281 Flat tire, continued driving 277, 281 Flat Tire Monitor FTM 279 Flat tire, repairing 268 Flat tire, see Tire Pressure Monitor TPM 273 Flat tire, warning lamp 280 Flat tire, warning light 277 Flooding 243 Floor carpet, care 312 Floor mats, care 312 Fog, removing from the windows 213

Fold-away position of the wipers 106 Fold back rear seat backrests 236 Foot brake 243 For Your Own Safety 7 Fragrance cartridge, see Ambient air package 219 Fragrance, see Ambient air package 219 Fragrancing, see Ambient air package 219 Front airbags 137 Front center armrest 232 Front fog lights 134 Front fog lights, see Lights and bulbs 297 Front lights, see Lights and bulbs 297 Front-seat passenger airbags, automatic deactivation 139 Front-seat passenger airbags, indicator lamp 140 Front seats 79 FTM Flat Tire Monitor 279 **Fuel 258** Fuel cap 256 Fuel consumption display, ECO PRO 249

G

Garage door opener, see Universal Integrated Remote
Control 223
Gasoline 258

Fuel consumption display,

onboard computer 126

Fuel recommendation 258

Fuel, tank capacity 318

Fuel filler flap, unlocking man-

Fuel filler flap 256

ually 257

Fuses 302

Fuel gauge 119

Fuel quality 258

Gear change, Steptronic transmission 108 Gear shift indicator 122 General driving notes 242 General settings 36 Geolocation, vehicle position 37 Gesture Control 30 Gestures, see BMW Gesture Control 30 Glare shield, see Sun visor 225 Glass sunroof, electric 76 Glass sunroof, initialize the system 78 Glove compartment 230 GPS geolocation, vehicle position 37

Н

Handbrake, see Parking brake 100 Hand-held transmitter, alternating code 224 Hazard warning flashers 303 Head airbags 137 Headlight control, automatic 132 Headlight courtesy delay feature 132 Headlight courtesy delay feature, switching on 56 Headlight flasher 104 Headlight glass 297 Headlights, care 310 Headlights, see Lights and bulbs 297 Head restraints, front 84 Head restraints, rear 85 Head-up Display 128 Head-Up Display, care 312 Head-up Display, see Memory function 89 Heavy cargo, stowing cargo 235

Height, vehicle 316 High-beam Assistant 133 High beams 104 High beams/low beams, see	Inflation pressure monitor, see Tire Pressure Monitor TPM 273 Inflation pressure, tires 260	Jam protection system, glass sunroof 77 Jam protection system, win- dows 74
High-beam Assistant 133 Hills 244	Inflation pressure warning FTM, tires 279	Joystick, Steptronic transmis- sion 108
Hill start assistant, see Drive-	Information 6	Jump-starting 305
off assistant 167 Holder for beverages, see	Initialization, Flat Tire Monitor FTM 279	Jump-starting terminals 305
Cup holders 232 Homepage 6	Initialize, Tire Pressure Monitor TPM 275	K
Hood 286	Instrument cluster 115	Kenaf, care 311
Horn 14 Hotel function, tailgate, see	Instrument lighting 134 Integral Active Steering 169	Keyless Go, see Comfort Access 63
Locking separately 67	Integrated key 61	Key, mechanical 61
Hot exhaust system 243	Integrated Owner's Manual in	Key, see BMW display key 57
Humidity in the headlight, see	the vehicle 49	Kickdown, Steptronic trans-
Headlight glass 297	Intelligent emergency	mission 108
Hydroplaning <mark>243</mark>	call 303	Knee airbag 138
	Intelligent Safety 140	
l	Intended use 7	L
	Intensity, AUTO pro-	
iBrake — Post Crash 165	gram 212	Label on recommended
Ice warning, see External	Interior equipment 223	tires 267
temperature 121	Interior lights 135	Lane control assistant with
lcy roads, see External tem- perature 121	Interior lights during unlock- ing 55	active side collision protec- tion, see Side collision warn-
Identification marks, tires 264	Interior lights with the vehicle	ing 160
Identification number, see Ve-	locked 55	Lane departure warning 154
hicle identification num-	Interior mirror, automatic dim-	Lane threshold, warning 154
ber 10	ming feature 88	Language, setting on the
Idle state, standby state, and	Interior motion sensor 73 Internet connection 44	Control Display 36
drive-ready state 19 iDrive 21	Internet page 6	Lashing eyes in the cargo area 235
Ignition key, see Remote con-	Intersection warning, see Ap-	LATCH child restraint fixing
trol 54	proach control warning with	system 95
Indication of a flat	light braking function 142	Launch Control 111
tire 277, 280	Interval display, see Service	Leather care 311
Indicator and warning lights,	requirements 121	LEDs, replacing, see Lights
see Check Control 116	Ionization, see Ambient air	and bulbs 297
Individual activation 92	package 219	Length, vehicle 316
Individual air distribution 213		Letters and numbers, enter-
Individual settings, see driver	.1	ing 24

License plate light, see Lights

Light-alloy wheels, care 311

and bulbs 297

jack 283

Jacking points for the vehicle

profiles 68

lights 132	see Condition Based Serv-	tires 266
Light control, adaptive 133	ice CBS 294	Mirror 86
Light-emitting diodes, replacing, see Lights and	Maintenance, see Service requirements 121	Mirror, see Memory func- tion 89
bulbs 297	Maintenance system,	Mobile communication devi-
Lighter, cigarettes 226	BMW 294	ces in the vehicle 243
Lighter, front 226	Make-up mirror 225	Mobile phone, see Owner's
Lighter, rear 226 Lighting 131	Malfunction, BMW display key 60	Manual for Navigation, Entertainment and Communi-
Lighting, speakers 136	Malfunction displays, see	cation 6
Light in the exterior mirror,	Check Control 116	Mobility System 269
see Active Blind Spot Detection 157	Malfunction, remote control 57	Mode, ECO PRO 247 Modifications, technical, see
Light in the exterior mirror,	Manual air distribution 213	For Your Own Safety 7
see crossing traffic warn-	Manual air flow 213	Monitor, see Control Dis-
ing 205	Manual brake, see Parking	play 21
Light replacement, see Lights	brake 100	Mounting of child restraint
and bulbs 297	Manual mode, Steptronic	systems 94
Lights 131	transmission 108	Multi-function hook 235
Lights and bulbs 297	Manual operation, exterior	Multifunction steering wheel,
Light switch 131	mirrors 87	buttons 14
Linking, mobile devices, see Connections 40	Manual operation, fuel filler flap 257	Multimedia, see Owner's Manual for Navigation, En-
List of all messages 38	Marking, runflat tire 268	tertainment and Communi-
Load 235	Massage seat, front 90	cation 6
Loading 234	Master key, see Remote con-	
Locating, vehicle position 37	trol 54	N
Locking, automatic 71	Matte finish 311	
Locking, settings 70	Maximum cooling 211	Navigation, see Owner's
Locking using the remote control 55	Maximum speed display, see Speed Limit Info 123	Manual for Navigation, Entertainment and Communi-
Locks, child safety 96	Maximum speed of winter	cation 6
Low beams 131	tires 267	Near field communication,
Low beams, automatic, see	Measurement, units of 37	NFC 42
High-beam Assistant 133	Medical supplies, see First-	Neck restraints, front, see
Lower back support 81	aid kit 304	Head restraints 84
Luggage rack, see Roof-	Memory function 89	Neck restraints, rear, see
mounted luggage rack 244	Menu, instrument cluster, see	Head restraints 85
Lumbar support 81	Selection lists 124	Net, cargo area 236
М	Menus, operating, see iDrive 21	Neutral cleaner, see Light-al- loy wheels 311
	Messages 38	New wheels and tires 266
Maintenance 294	Messages, see Check Con- trol 116	NFC, see Near-field commu- nication 42

Microfilter 214

Pressure, tire air pres-

Night Vision device, see Night Vision 151 Night Vision with pedestrian and animal detection 151 No-touch opening and closing of the tailgate 64 Nylon rope for tow-starting/ towing 307

0

OBD Onboard Diagnosis 295 Object detection, see Night Vision 151 Obstacle marking, rearview camera 189, 193 Octane rating, see Recommended fuel grade 259 Odometer and trip odometer 125 Oil 288 Oil, adding 289 Oil change 291 Oil change interval, see Service requirements 121 Oil filler neck 289 Oil types, suitable 290 Oil types to add, engine 290 Onboard computer in the instrument cluster 125 Onboard computer on the Control Display 127 Onboard Diagnosis OBD 295 Onboard monitor, see Control Display 21 Onboard vehicle tool kit 296 Opening and closing 54 Operating concept, iDrive 21 Operating with the controller 23 Operation via touchscreen 25 Outside air, see AUC 212 Overheating of engine, see Coolant temperature 120 Overwintering, see Longterm vehicle storage 312

P

Paint, vehicle 310 Pairing, mobile devices, see Connections 40 Panic mode 73 Panorama View, see Surround View 190 Park Distance Control **PDC 183** Parked-car ventilation 217 Parking aid, see PDC 183 Parking assistant 197 Parking assistant Plus, see Surround View 190 Parking brake 100 Parking lights 131 Parking with Automatic Hold, see Parking brake 100 Parts and accessories 8 Passenger's side mirror, tilting, see Automatic Curb Monitor, exterior mirror 87 Pathway lines, rearview camera 189, 193 PDC Park Distance Control 183 Pedestrian detection, see Night Vision 151 Performance display, see Sport displays 127 Personal data, deleting 39 Personal profile, see driver profiles 68 Person warning with City light braking function 148 Plastic parts, care 312 Post Crash — iBrake 165 Power failure 301 Power sunroof, glass 76 Power windows 74 Prescribed engine oil types 290 Pressure monitor, see Tire Pressure Monitor TPM 273

sure 260
Pressure warning FTM, tires 279
Profiles, see driver profiles 68
Programmable memory buttons, iDrive 29
Protective function, glass sunroof, see Jam protection system 77
Protective function, windows, see Jam protection sys-

controller 22

Push-and-turn reel, refer to

Q

tem 74

Queuing Assistant, see Steering and lane control assistant incl. Traffic Jam Assist 180

Racetrack operation 245

R

Radiator fluid 292 Radio-operated key, see Remote control 54 Radio, see Owner's Manual for Navigation, Entertainment and Communication 6 Rain sensor 105 Rear automatic climate control 215 Rear axle steering, see Integral Active Steering 169 Rear collision prevention 163 Rear collision warning, see Rear collision prevention 163 Rearview camera, see Surround View 190 Rearview camera, without

Surround View 187

Rearview mirror 86

Rear window defroster 214 Recirculated-air filter, see Mi-	Rolling code hand-held trans- mitter 224	Seat heating, individual activation 92
crofilter/activated-charcoal	RON recommended fuel	Seating position for chil-
filter 214	grade 259	dren 93
Recirculated-air mode 212	Roofliner 18	Seat, see Memory func-
Recommended fuel	Roof load capacity 317	tion 89
grade 259	Roof-mounted luggage	Seats, front 79
Recommended tire	rack 244	Seat ventilation, active 91
brands 267	Rope for tow-starting/	Seat ventilation, individual ac-
Refueling 256	towing 307	tivation 92
Remote control 54	RSC Runflat System Compo-	Securing cargo 235
Remote control, additional 57	nent, see Runflat tires 268	Selection list in instrument
Remote control, integrated	Rubber components,	cluster 124
key 61	care 311	Selector lever, Steptronic
Remote control, loss 57	Runflat tire 268	transmission 108
Remote control, malfunc-		Self-supporting tires, see
tion 57	S	Runflat tires 268
Remote control of the vehicle,		Sensors, care 312
changing the battery 56	Safe braking 243	Service and warranty 8
Remote Control Parking 201	Safety belt reminder for driv-	Service requirements 121
Remote control, univer-	er's seat and front passen-	Service requirements, see
sal 223	ger seat 83	Condition Based Service
Remote control with display,	Safety belts 82	CBS 294
malfunction 60	Safety belts, care 312	Service, Roadside Assis-
Remote control with display,	Safety locks, doors and win-	tance 304
see BMW display key 57	dows 96	Services, ConnectedDrive,
Replacing parts 296	Safety package, see Active	see Owner's Manual for
Replacing wheels/tires 266	Protection 164	Navigation, Entertainment
Reporting safety malfunc-	Safety switch, windows 75	and Communication 6
tions 10	Safety systems, see Air-	SET button, see Active
RES CNCL button, see Active	bags 137	Cruise Control with
Cruise Control with	Safety systems, see Intelli-	Stop&Go function 173
Stop&Go function 173	gent Safety 140	SET button, see Cruise con-
RES CNCL button, see Cruise	Saving fuel 246	trol 171
control 171	Screen Mirroring, connec-	Set speed, see Active Cruise
Reserve warning, see	tion 45	Control with Stop&Go func-
Range 121	Screensaver 38	tion 173
Reset, Tire Pressure Monitor	Screen, see Control Dis-	Settings, locking/unlock-
TPM 275	play 21	ing 70
Retreaded tires 267	Screwdriver, see Onboard ve-	Settings on Control Dis-
Reversing lights, bulb re-	hicle tool kit 296	play 36
placement, see Lights and	Sealant 269	Shift paddles on the steering
bulbs 297	Seat belts, see Safety	wheel 108
Roadside parking lights 132	belts 82	Shift point indicator,
Roller sunblind 75	Seat heating 91	speed 120
	-	Side airbag 137

Side collision warning 160
Signaling, horn 14
Signals when unlocking, see
Confirmation signals from
the vehicle 71
Sitting safely 79
Sizes, see Dimensions 316
Ski and snowboard bag 239
Slide/tilt glass roof, see Glass
sunroof 76
Smallest turning radius 316
Smartphone, see Owner's
Manual for Navigation, En-
tertainment and Communi-
cation 6 Smoker's package 225
SMS SMS text message,
supplementary 119 Snow chains 272
Socket for OBD Onboard Di-
agnosis 295
Sockets 227
Software update 46
SOS button 303
SOS button, see Intelligent
emergency call 303
Spare tire, see Emergency
wheel 284
Speaker lighting 136
Special equipment, see Vehi-
cle features and options 7
Speed limit display, see
Speed Limit Info 123
Speed Limit Info 123
Speed, see Average speed
and average fuel consump-
tion 126
Speed warning 128
Split screen 27
Sport displays 127
SPORT INDIVIDUAL, see
Driving Dynamics Con-
trol 112
SPORT PLUS, see Driving
Dynamics Control 112

Sport program, Steptronic transmission 108 SPORT, see Driving Dynamics Control 112 Stability control systems 167 Standard equipment, see Vehicle features and options 7 Standby state, idle state and drive-ready state 19 Start/stop, automatic function 98 Start/Stop button 97 Starting aid terminals 305 Starting, see drive-ready state 97 Starting the engine, see drive-ready state 97 Status control display, tires 275 Status field symbols 28 Status information, iDrive 28 Status of Owner's Manual 7 Status, vehicle 128 Steering and lane control assistant incl. Traffic Jam Assist 180 Steering, see Integral Active Steering 169 Steering wheel, adjusting 88 Steering wheel, buttons 14 Steering wheel heating 89 Steering wheel heating, individual activation 92 Steering wheel, see Memory function 89 Steptronic Sport transmission, see Steptronic transmission 108 Steptronic transmission 108 Stopping the engine, see drive-ready state 97 Storage compartment in the center console 231 Storage compartments in the cargo area 235

Storage compartments, locations 230 Storage, tires 268 Storing the vehicle 312 Stowing and securing cargo 235 Straps for cargo, see Lashing eyes in the cargo area 235 Suitable devices 41 Suitable mobile phones 41 Summer tires, tread 265 Sunblind, see Rear window roller sunblind 75 Sun visor 225 Supplementary SMS SMS text message 119 Surround View 190 Suspension settings, see Driving Dynamics Control 112 Switches, see Cockpit 14 Switch for driving dynamics, see Driving Dynamics Control 112 Symbols and displays 6 SYNC program, automatic climate control 213 Т

Tachometer 120
Tailgate 65
Tailgate, emergency unlocking 68
Tailgate, hotel function, see Locking separately 67
Tailgate, opening and closing with no-touch activation 64
Tailgate via remote control 56
Tail lights, see Lights and bulbs 297
Technical changes, see For

Your Own Safety 7

Technical data 316

Telephone, see Owner's Manual for Navigation, Entertainment and Communication 6 Temperature, automatic climate control 211 Temperature display, see External temperature 121 Temperature, engine oil 120 Theft alarm system, see Alarm system 72 Theft protection, locking 55 Thermal camera, see Night Vision 151 Thigh support, comfort seat 81 Thigh support, sport seat 80 Through-loading system 236 Tilt alarm sensor 73 Tilt. backrest 81 Tilting the passenger's side mirror, see Automatic Curb Monitor, exterior mirror 87 Time 36 Time of arrival 127 Tire brands, recommended 267 Tire damage 266 Tire identification marks 264 Tire inflation pressure 260 Tire inflation pressure monitor, see FTM Flat Tire Monitor 279 Tire Pressure Monitor **TPM 273** Tire repair kit, see Mobility System 269 Tires and wheels 260 Tires, changing 266 Tire sealant, see Mobility System 269 Tire settings 274 Tires, runflat 268

Tone, see Owner's Manual for Navigation, Entertainment and Communication 6 **Tool 296** Torque display, see Sport displays 127 Touchpad 26 Touchscreen 25 Tow bar 307 Tow fitting 307 Towing 306 Tow rope 307 Tow-starting 306 TPM Tire Pressure Monitor 273 Traction control 168 TRACTION, driving dynamics 168 Traffic Jam Assist, see Steering and lane control assistant 180 Transmission lock, electronic unlockina 111 Transmission, see Steptronic transmission 108 Transporting children safely 93 Travel information, see Onboard computer on the Control Display 127 Tread, tires 265 Trip computer 127 Triple turn signal activation 104 Trip odometer 125 Trip recorder, see Trip odometer 125 Trunk, emergency unlocking 68 Trunk lid, see Tailgate 65 Turning circle 316 Turning radius lines, rearview camera 189, 193 Turn signals, bulb replacement, see Lights and

Turn signals, high beams, headlight flasher 103



Unintentional alarm, avoidina 73 Units of measurement 37 Universal Integrated Remote Control 223 Universal remote control 223 Unlock button, Steptronic transmission 108 Unlocking, automatic 71 Unlocking, settings 70 Unlocking with the remote control 55 Updates made after the editorial deadline 7 Update, software 46 Upholstery material care 311 Upper backrest adjustment, front 82 USB connection 43 USB interface, position in vehicle 228 Used battery, disposing of 302 Use, intended 7



Vanity mirror 225
Variable steering, see Integral
Active Steering 169
Vehicle battery 301
Vehicle breakdown, see
Breakdown assistance 303
Vehicle, break-in 242
Vehicle care 310
Vehicle care products 310
Vehicle features and options 7
Vehicle identification number 10

Tire tread 265

bulbs 297

Vehicle key, see Remote control 54 Vehicle paint 310 Vehicle position, GPS geolocation 37 Vehicle status 128 Vehicle storage 312 Vehicle wash 309 Vehicle, washing 309 Ventilation 214 Ventilation, see Parked-car ventilation 217 Venting, see Ventilation 214 Vent, see Ventilation 214 Video, see Owner's Manual for Navigation, Entertainment and Communication 6 VIN, see Vehicle identification number 10 Voice activation system 33

W

Warning against cross traffic 205 Warning and indicator lights, see Check Control 116 Warning light in the exterior mirror, see Active Blind Spot Detection 157 Warning light in the exterior mirror, see crossing traffic warning 205 Warning messages, see Check Control 116 Warning triangle 304 Warranty 7 Washer fluid 107 Washer nozzles, windshield 106 Washer system 104 Washing the vehicle 309 Water on roads 243 Water, see Condensation water under the parked vehicle 244

Website 6
Weights 317
Welcome Light Carpet, see welcome lights 132
Welcome light during unlocking 55
Welcome lights 132
Welcome screen driver pro-

Welcome screen, driver profile 68 Wheel base, vehicle 316 Wheel cleaner, light-alloy wheels 311

Wheels and tires 260 Wheels, changing 266 Wheels, see FTM Flat Tire Monitor 279

Monitor 279
Width, vehicle 316
WiFi connection 44
Window defroster, rear 214
Window, defrosting and de-

fogging 213
Windows, powered 74
Windshield washer fluid, see
Washer fluid 107

Windshield washer nozzles 106

Windshield washer system, see washer/wiper system 104

Windshield wiper, see Wiper system 104

Winter storage, see Longterm vehicle storage 312

Winter tires 267
Winter tires, tread 265

Wiper blades, replacing 296

Wiper fluid, see Washer fluid 107

Wiper, fold-away position 106

Wiper, see Washer/wiper system 104

Wiper system 104 Wood parts, care 311

Wordmatch principle, see Entry comparison 24

Wrench, see Onboard vehicle tool kit 296



xDrive 169

More about BMW



bmwusa.com

